



# BR1 Mini 5G




## Hardware Reference Guide

# BR1 Mini 5G





## Packing List Information


### Router

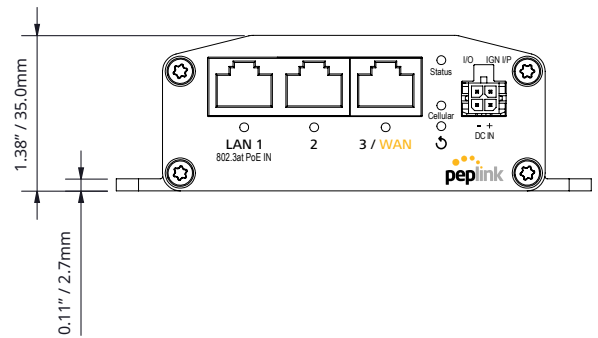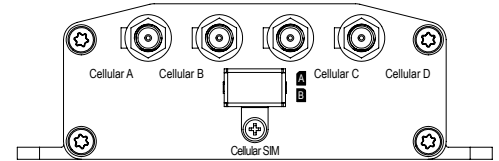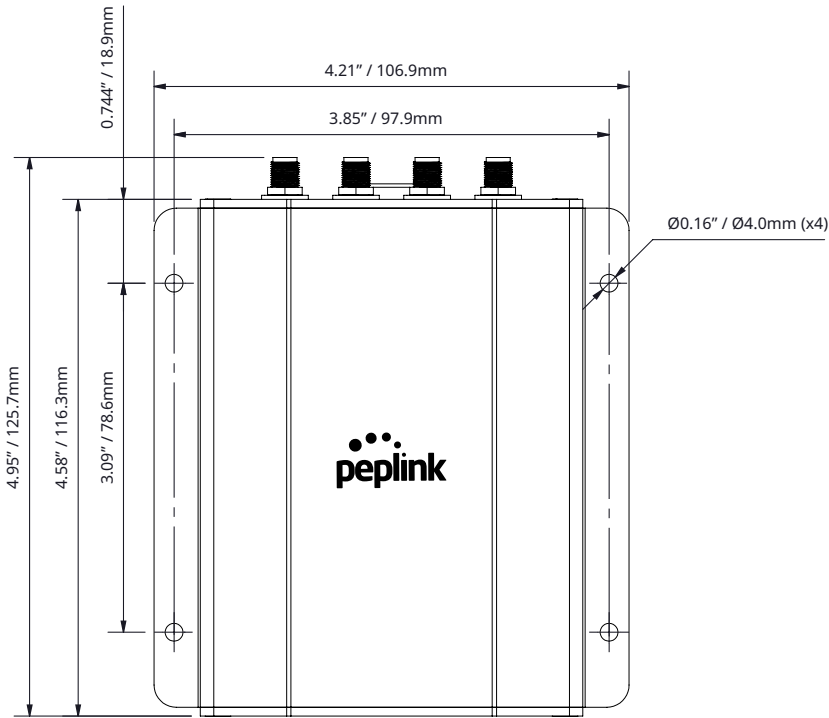

### Accessories

 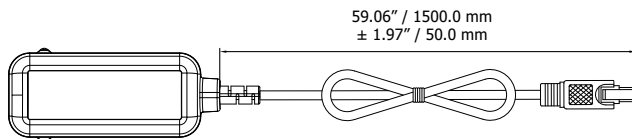

12V 2A 4 Pin Power Supply  
(1 pc)

 

LTE/5G Antennas  
(4 pcs, SMA Male)


<sup>1</sup> The power supply plug will be different based on the delivery address.

# BR1 Mini 5G (with Wi-Fi)





## Packing List Information


### Router

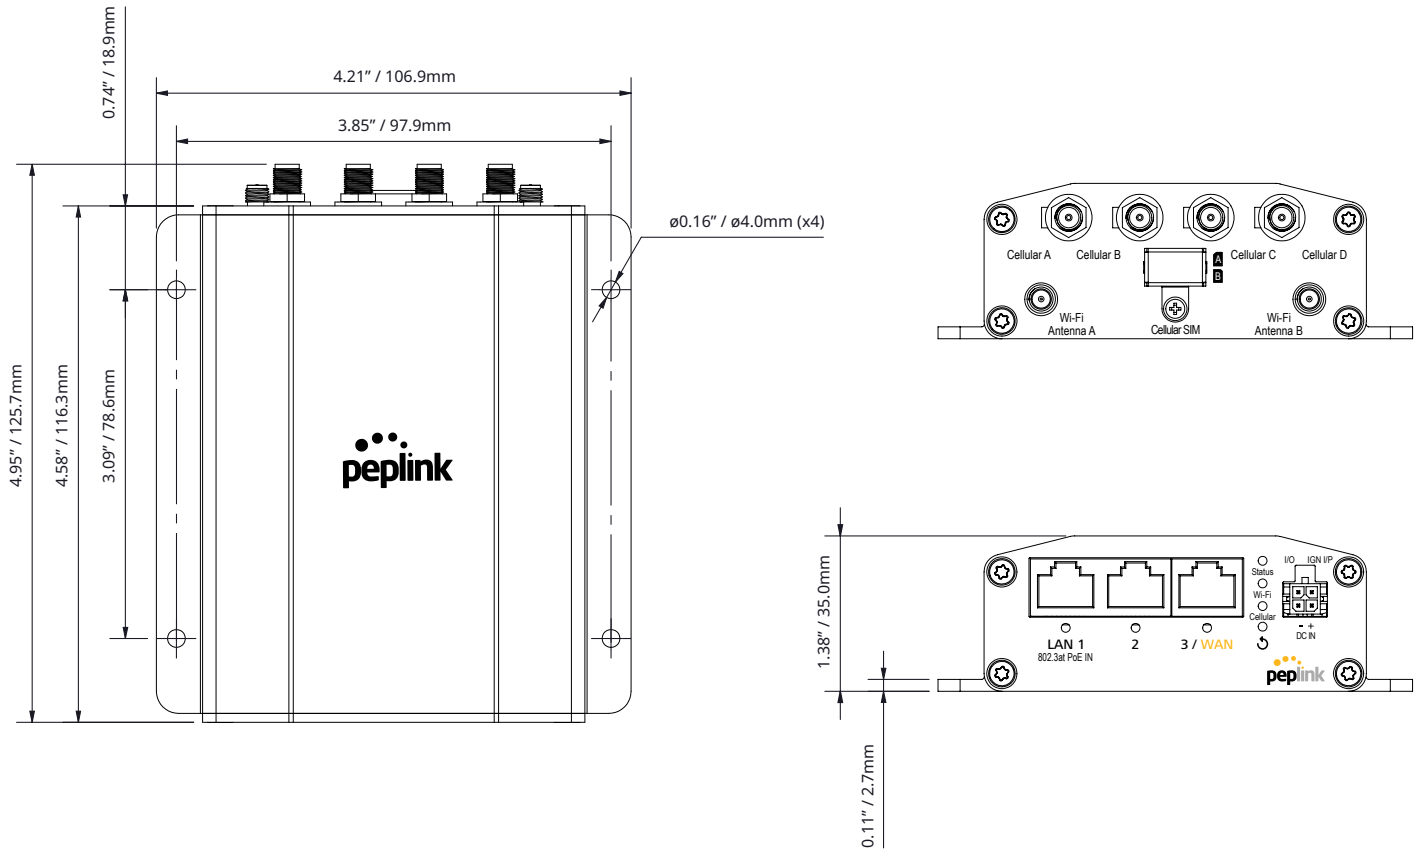

### Accessories

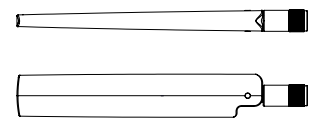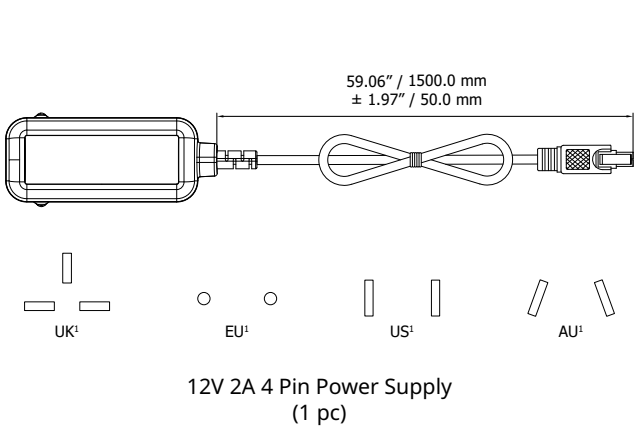

LTE/5G Antennas (4 pcs, SMA Male)

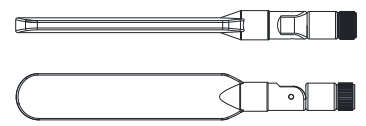


Dual Band Wi-Fi Antennas (2 Pcs, RP SMA Male)


<sup>1</sup> The power supply plug will be different based on the delivery address.

## Connection Pin-Out

### BR1 Mini 5G

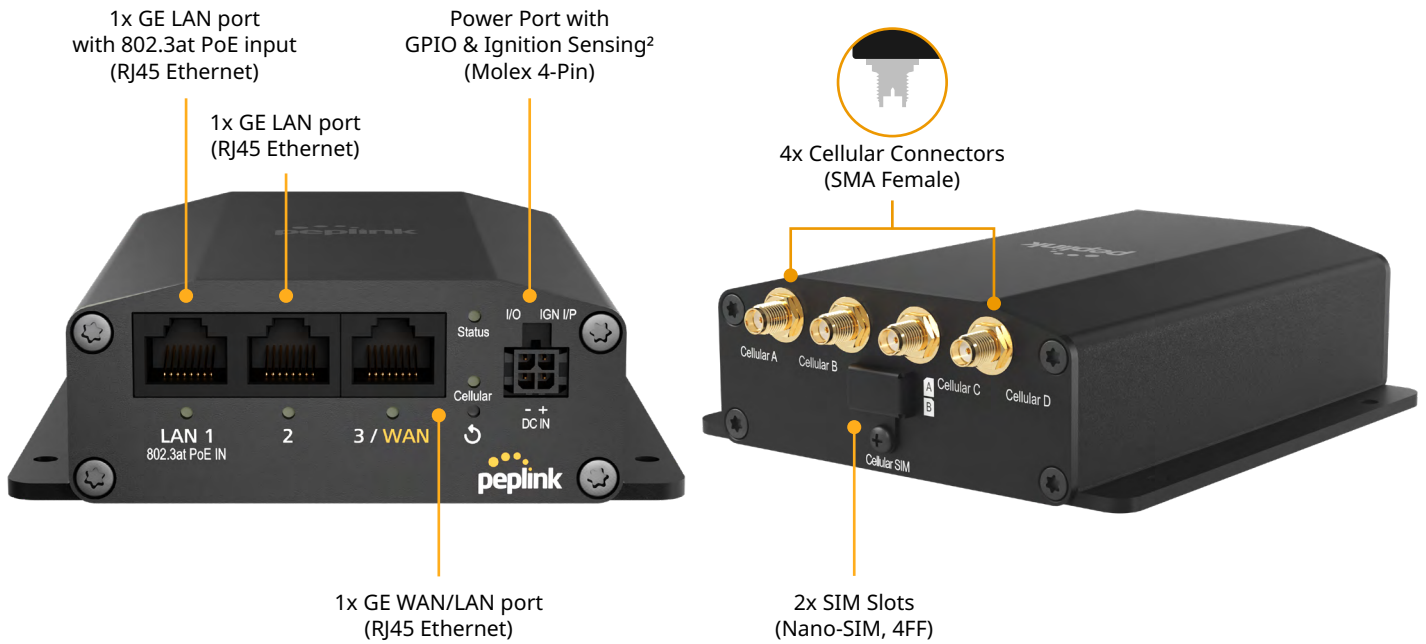

### BR1 Mini 5G (with Wi-Fi)

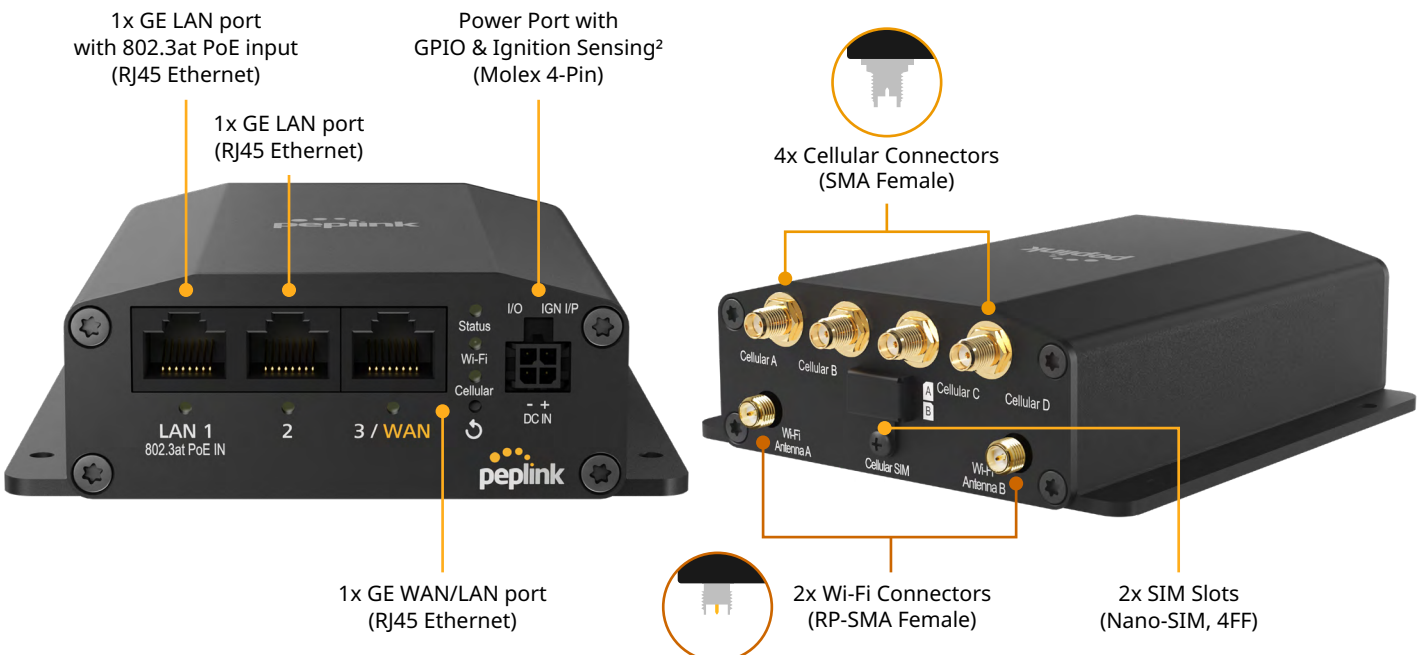

<sup>2</sup> Click [here](#) to explore GPIO and Ignition Sensing features.