




BR2 Pro


Hardware Reference Guide

Packing List Information


Router

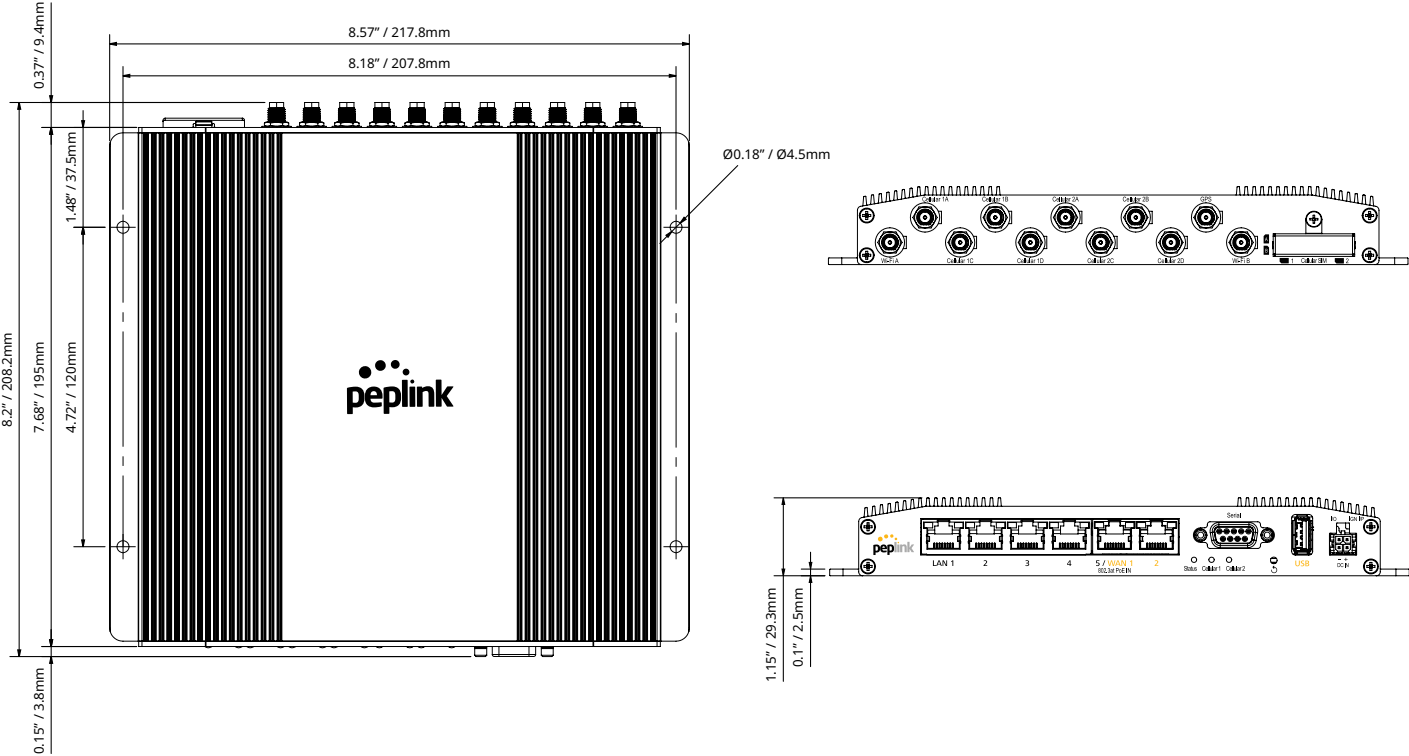


Accessories

 


LTE/5G Antennas
(8 pcs, SMA Male)

 

Dual-Band Wi-Fi Antennas
(2 pcs, RP-SMA Male)

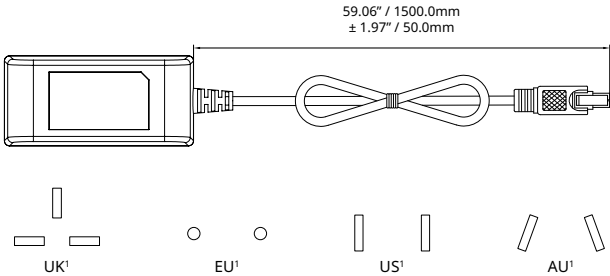

12V 3A 4-Pin Power Supply
(1 pc)

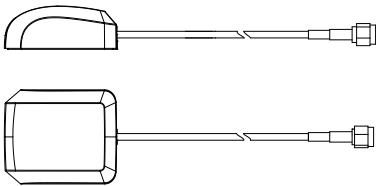


GPS Active Antenna
(1 pc, SMA Male)

¹ The power supply plug will vary according to region.

Interface Layout

BR2 Pro

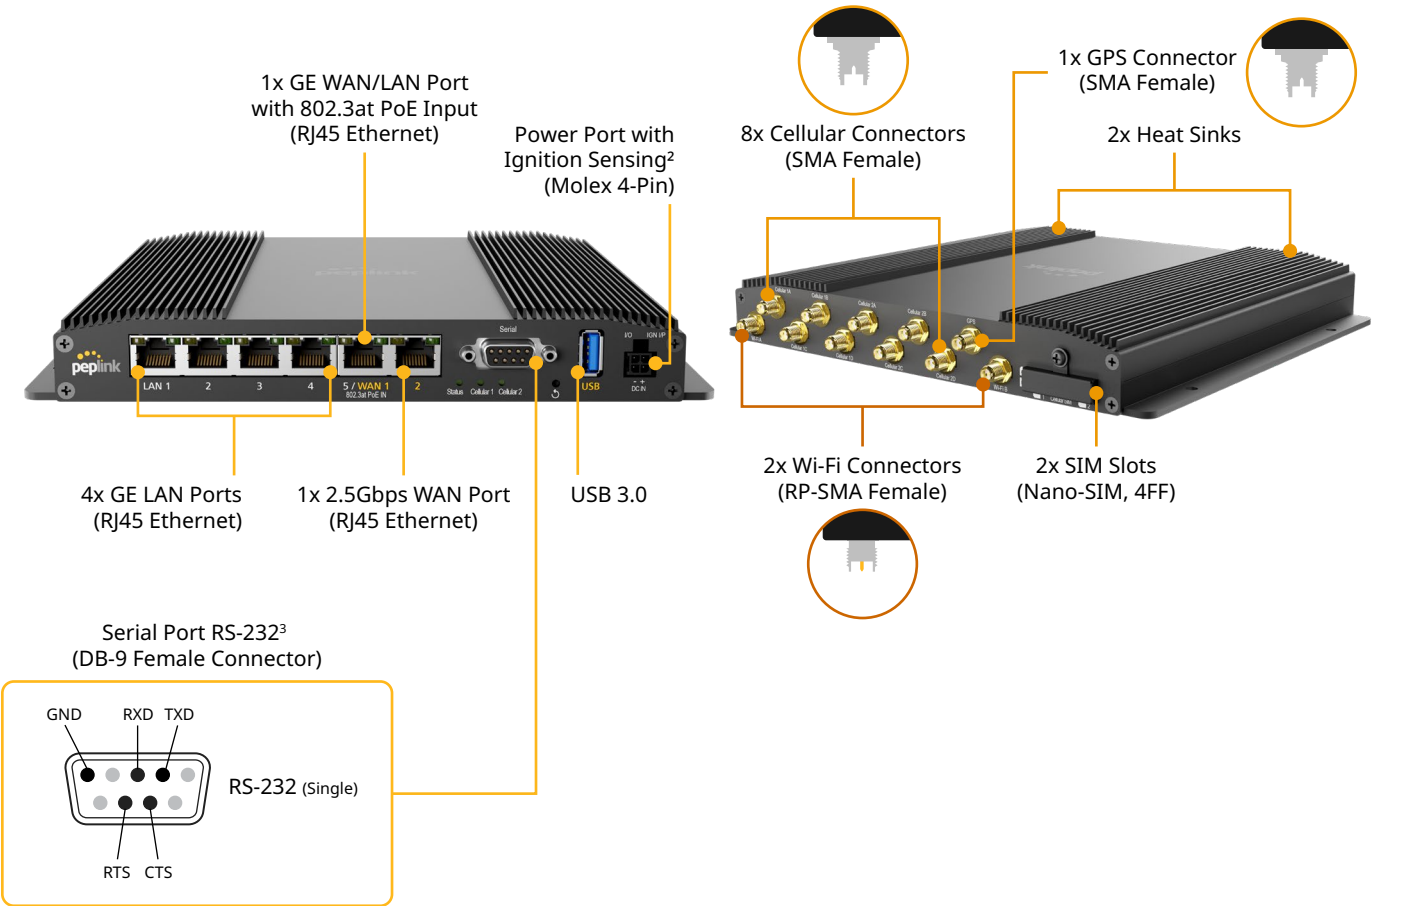

*Use the black pinouts for standard single-port connections.

² Click [here](#) to explore GPIO and Ignition Sensing features.

³ RS-232 Electrical Specifications

Feature	RS-232
Logic 0	+3V to +15V
Logic 1	-3V to -15V
Dead Area	-3V to +3V
Max Voltage	±18V
Max Distance	~15 meters