



# Multi-Orbit Series

## User Manual

### Peplink Products:

MAX Orbit 2 / MAX Orbit 4 / MAX Orbit 8

Peplink Firmware 8.6.0  
June 2026

#### COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.

Copyright © 2026 Peplink Ltd. All Rights Reserved. Peplink and the Peplink logo are trademarks of Peplink International Ltd. Other brands or products mentioned may be trademarks or registered trademarks of their respective owners.

# Table of Contents

|                                                         |           |
|---------------------------------------------------------|-----------|
| <b>Introduction and Scope</b>                           | <b>7</b>  |
| <b>Glossary</b>                                         | <b>8</b>  |
| <b>1 Product Features</b>                               | <b>9</b>  |
| 1.1 Supported Network Features                          | 9         |
| 1.2 Other Supported Features                            | 11        |
| <b>2 Multi-Orbit Series Router Overview</b>             | <b>12</b> |
| 2.1 MAX Orbit 2                                         | 12        |
| 2.2 MAX Orbit 4                                         | 14        |
| 2.3 MAX Orbit 8                                         | 16        |
| <b>3 Advanced Feature Summary</b>                       | <b>18</b> |
| 3.1 Drop-in Mode and LAN Bypass: Transparent Deployment | 18        |
| 3.2 QoS: Clearer VoIP                                   | 18        |
| 3.3 Per-User Bandwidth Control                          | 19        |
| 3.4 High Availability via VRRP                          | 19        |
| 3.5 USB Modem and Android Tethering                     | 20        |
| 3.6 Built-In Remote User VPN Support                    | 20        |
| 3.7 DPI Engine                                          | 20        |
| 3.8 NetFlow                                             | 21        |
| 3.9 Wi-Fi Air Monitoring                                | 21        |
| 3.10 SP Default Configuration                           | 21        |
| 3.11 Peplink Relay                                      | 22        |
| 3.12 DNS over HTTPS (DoH)                               | 22        |
| 3.13 Peplink InTouch                                    | 22        |
| 3.14 Synergy Mode                                       | 22        |
| 3.15 Virtual WAN on VLAN                                | 22        |
| <b>4 Installation</b>                                   | <b>23</b> |
| 4.1 Preparation                                         | 23        |
| 4.2 Constructing the Network                            | 23        |
| 4.3 Configuring the Network Environment                 | 24        |
| <b>5 Connecting to the Web Admin Interface</b>          | <b>25</b> |
| <b>6 SpeedFusion Connect</b>                            | <b>27</b> |
| 6.1 Activate SpeedFusion Connect Service                | 27        |
| 6.2 Enable SpeedFusion Connect                          | 28        |
| 6.3 Route by Cloud Application                          | 34        |

|                                              |            |
|----------------------------------------------|------------|
| 6.4 Route by Wi-Fi SSID                      | 35         |
| 6.5 Route by LAN Client                      | 36         |
| <b>7 Configuring the LAN Interface(s)</b>    | <b>37</b>  |
| 7.1 Basic Settings                           | 37         |
| 7.2 Port Settings                            | 46         |
| 7.3 Captive Portal                           | 47         |
| <b>8 Configuring the WAN Interface(s)</b>    | <b>51</b>  |
| 8.1 Orbit WAN / Ethernet WAN                 | 55         |
| 8.2 Wi-Fi WAN                                | 63         |
| 8.3 OpenVPN WAN                              | 67         |
| 8.4 Physical Interface Settings (Common)     | 70         |
| 8.5 WAN Health Check                         | 71         |
| 8.6 Bandwidth Allowance Monitoring           | 74         |
| 8.7 Additional Public IP address             | 75         |
| 8.8 Dynamic DNS Settings                     | 75         |
| <b>9 SpeedFusion VPN</b>                     | <b>77</b>  |
| 9.1 SpeedFusion VPN                          | 78         |
| <b>10 IPsec VPN</b>                          | <b>88</b>  |
| 10.1 IPsec VPN Settings                      | 88         |
| <b>11 GRE Tunnel</b>                         | <b>92</b>  |
| <b>12 OpenVPN</b>                            | <b>94</b>  |
| <b>13 Outbound Policy</b>                    | <b>95</b>  |
| 13.1 Adding Rules for Outbound Policy        | 95         |
| <b>14 Port Forwarding</b>                    | <b>105</b> |
| 14.1 UPnP / NAT-PMP Settings                 | 107        |
| <b>15 NAT Mappings</b>                       | <b>108</b> |
| <b>16 Media Fast</b>                         | <b>110</b> |
| 16.1 Setting Up MediaFast Content Caching    | 110        |
| 16.2 Viewing MediaFast Statistics            | 112        |
| 16.3 Prefetch Schedule                       | 113        |
| <b>17 Edge Computing</b>                     | <b>115</b> |
| 17.1 Configuring the ContentHub              | 115        |
| 17.2 Configure a website for ContentHub      | 115        |
| 17.3 Configure an application for ContentHub | 117        |
| <b>18 Docker</b>                             | <b>120</b> |
| <b>19 QoS</b>                                | <b>121</b> |
| 19.1 User Groups                             | 121        |

|                                  |            |
|----------------------------------|------------|
| 19.2 Bandwidth Control           | 121        |
| 19.3 Application Queue           | 122        |
| 19.4 Application                 | 123        |
| <b>20 Firewall</b>               | <b>125</b> |
| 20.1 Access Rules                | 126        |
| 20.2 Content Blocking            | 134        |
| <b>21 Routing Protocols</b>      | <b>136</b> |
| 21.1 OSPF & RIPv2                | 136        |
| 21.2 BGP                         | 138        |
| <b>22 Remote User Access</b>     | <b>143</b> |
| <b>23 Miscellaneous Settings</b> | <b>146</b> |
| 23.1 High Availability           | 146        |
| 23.2 RADIUS Server               | 150        |
| 23.3 Certificate Manager         | 152        |
| 23.4 Service Forwarding          | 153        |
| 23.5 Service Passthrough         | 156        |
| 23.6 UART                        | 157        |
| 23.7 GPS                         | 158        |
| 23.8 GPS Forwarding              | 159        |
| 23.9 GPS Receiver                | 160        |
| 23.10 Ignition Sensing           | 162        |
| Ignition Sensing installation    | 162        |
| GPIO Menu                        | 164        |
| 23.11 NTP Server                 | 165        |
| 23.12 Grouped Networks           | 166        |
| 23.13 UDP Relay                  | 167        |
| <b>24 AP</b>                     | <b>168</b> |
| 24.1 AP Controller               | 168        |
| 24.2 Wireless SSID               | 168        |
| 24.3 Wireless Mesh               | 183        |
| 24.4 Settings                    | 184        |
| <b>25 AP Controller Status</b>   | <b>191</b> |
| 25.1 Info                        | 191        |
| 25.2 Access Point                | 193        |
| 25.3 Wireless SSID               | 196        |
| 25.4 Wireless Client             | 197        |
| 25.5 Mesh / WDS                  | 198        |



|                                   |            |
|-----------------------------------|------------|
| 25.6 Nearby Device                | 199        |
| 25.7 Event Log                    | 199        |
| <b>26 Toolbox</b>                 | <b>200</b> |
| <b>27 Switch</b>                  | <b>201</b> |
| 27.1 Switch Controller            | 201        |
| 27.2 Admin Security               | 202        |
| 27.3 Switch Information           | 204        |
| 27.4 STP                          | 204        |
| 27.5 Switch Ports                 | 205        |
| 27.6 LACP (802.3ad) Configuration | 208        |
| <b>28 System Settings</b>         | <b>209</b> |
| 28.1 Admin Security               | 209        |
| 28.2 Firmware                     | 214        |
| 28.3 Time                         | 216        |
| 28.4 Schedule                     | 217        |
| 28.5 Email Notification           | 218        |
| 28.6 Event Log                    | 222        |
| 28.7 SNMP                         | 223        |
| 28.8 InControl                    | 225        |
| 28.9 Configuration                | 226        |
| 28.10 Feature Add-ons             | 227        |
| 28.11 Reboot                      | 227        |
| <b>29 Tools</b>                   | <b>228</b> |
| 29.1 Ping                         | 228        |
| 29.2 Traceroute Test              | 229        |
| 29.3 Wake-on-LAN                  | 229        |
| 29.4 WAN Analysis                 | 230        |
| 29.5 CLI (Command Line Support)   | 233        |
| 29.6 Storage Manager              | 234        |
| 29.7 External Storage             | 235        |
| 29.8 Package Manager              | 235        |
| <b>30 Status</b>                  | <b>236</b> |
| 30.1 Device                       | 236        |
| 30.2 GPS Data                     | 238        |
| 30.3 Active Sessions              | 239        |
| 30.4 Client List                  | 241        |
| 30.5 UPnP / NAT-PMP               | 242        |

|                                                                                                |            |
|------------------------------------------------------------------------------------------------|------------|
| 30.6 OSPF & RIPv2                                                                              | 242        |
| 30.7 BGP                                                                                       | 243        |
| 30.8 SpeedFusion VPN                                                                           | 243        |
| 30.9 Event Log                                                                                 | 248        |
| <b>31 WAN Quality</b>                                                                          | <b>250</b> |
| <b>32 Usage Reports</b>                                                                        | <b>251</b> |
| 32.1 Real-Time                                                                                 | 251        |
| 32.2 Hourly                                                                                    | 252        |
| 32.3 Daily                                                                                     | 252        |
| 32.4 Monthly                                                                                   | 253        |
| <b>Appendix A: Restoration of Factory Defaults</b>                                             | <b>256</b> |
| <b>Appendix B: Overview of ports used by Peplink SD-WAN routers and other Peplink services</b> | <b>257</b> |

## Introduction and Scope

Peplink routers provide link aggregation and load balancing across multiple WAN connections, allowing a combination of technologies like multi-orbit satellite, Ethernet, and Wi-Fi to be utilized to connect to the Internet.

The Multi-Orbit Series has a range of SD-WAN products suitable for many different deployments and markets. Entry level models such as the MAX Orbit 2 are suitable for smaller sites or branch offices. High-capacity models such as the MAX Orbit 8 are suitable for larger organizations and head offices.

This manual covers setting up Peplink routers and provides an introduction to their features and usage.

### Tips

Want to know more about Peplink routers? Visit our YouTube Channel for a video introduction!



<https://youtu.be/13M-JHRAICA>

## Glossary

The following terms, acronyms, and abbreviations are frequently used in this manual:

| Term        | Definition                            |
|-------------|---------------------------------------|
| DHCP        | Dynamic Host Configuration Protocol   |
| DNS         | Domain Name System                    |
| FQDN        | Fully Qualified Domain Name           |
| HTTP        | Hyper-Text Transfer Protocol          |
| ICMP        | Internet Control Message Protocol     |
| IP          | Internet Protocol                     |
| LAN         | Local Area Network                    |
| MAC Address | Media Access Control Address          |
| MTU         | Maximum Transmission Unit             |
| MSS         | Maximum Segment Size                  |
| NAT         | Network Address Translation           |
| PPPoE       | Point to Point Protocol over Ethernet |
| QoS         | Quality of Service                    |
| SNMP        | Simple Network Management Protocol    |
| TCP         | Transmission Control Protocol         |
| UDP         | User Datagram Protocol                |
| VPN         | Virtual Private Network               |
| VRRP        | Virtual Router Redundancy Protocol    |
| WAN         | Wide Area Network                     |
| WINS        | Windows Internet Name Service         |
| WLAN        | Wireless Local Area Network           |

# 1 Product Features

Peplink routers enable all LAN users to share broadband Internet connections, and they provide advanced features to enhance Internet access.

Our Multi-Orbit Series routers connect to multiple satellite terminals through their Orbit WAN ports, and allow simultaneous Internet connections across multiple satellite links. These connections can be bonded together using our SpeedFusion technology. This allows better reliability, larger bandwidth, and increased coverage compared to using only one satellite link.

Below is a list of supported features on Peplink routers. Features vary by model. For more information, please see [peplink.com/products](https://www.peplink.com/products).

## 1.1 Supported Network Features

### 1.1.1 WAN

- Ethernet WAN connection in full/half duplex
- Static IP support for PPPoE
- USB mobile connection(s)
- Wi-Fi WAN connection
- Network address translation (NAT)/port address translation (PAT)
- Inbound and outbound NAT mapping
- IPsec NAT-T and PPTP packet passthrough
- MAC address clone and passthrough
- Customizable MTU and MSS values
- WAN connection health check
- Dynamic DNS (supported service providers: [changeip.com](https://changeip.com), [dyndns.org](https://dyndns.org), [no-ip.org](https://no-ip.org), [tzo.com](https://tzo.com) and [DNS-O-Matic](https://DNS-O-Matic.com))
- Ping, DNS lookup, and HTTP-based health check

### 1.1.2 LAN

- Wi-Fi AP
- Ethernet LAN ports
- DHCP server on LAN
- Extended DHCP option support
- Static routing rules
- VLAN on LAN support

### **1.1.3 VPN**

- SpeedFusion VPN with SpeedFusion™
- SpeedFusion VPN performance analyzer
- X.509 certificate support
- VPN load balancing and failover among selected WAN connections
- Bandwidth bonding and failover among selected WAN connections
- IPsec VPN for network-to-network connections (works with Cisco and Juniper)
- Ability to route Internet traffic to a remote VPN peer
- Optional pre-shared key setting
- SpeedFusion™ throughput, ping, and traceroute tests
- PPTP server
- PPTP and IPsec passthrough

### **1.1.4 Firewall**

- Outbound (LAN to WAN) firewall rules
- Inbound (WAN to LAN) firewall rules per WAN connection
- Intrusion detection and prevention
- Specification of NAT mappings
- Outbound firewall rules can be defined by destination domain name

### **1.1.5 Captive Portal**

- Splash screen of open networks, login page for secure networks
- Customizable built-in captive portal
- Supports linking to outside page for captive portal

### **1.1.6 Outbound Policy**

- Link load distribution per TCP/UDP service
- Persistent routing for specified source and/or destination IP addresses per TCP/UDP service
- Traffic prioritization and DSL optimization
- Prioritize and route traffic to VPN tunnels with Priority and Enforced algorithms

### **1.1.7 AP Controller**

- Configure and manage Peplink AP devices
- Review the status of connected APs

### **1.1.8 QoS**

- Quality of service for different applications and custom protocols
- User group classification for different service levels
- Bandwidth usage control and monitoring on group- and user-level
- Application prioritization for custom protocols and DSL/cable optimization

## 1.2 Other Supported Features


- User-friendly web-based administration interface
- HTTP and HTTPS support for web admin interface (default redirection to HTTPS)
- Configurable web administration port and administrator password
- Firmware upgrades, configuration backups, ping, and traceroute via web admin interface
- Remote web-based configuration (via WAN and LAN interfaces)
- Time server synchronization
- SNMP
- Email notification
- Read-only user access for web admin
- Shared IP drop-in mode
- Authentication and accounting by RADIUS server for web admin
- Built-in WINS servers\*
- Syslog
- SIP passthrough
- PPTP packet passthrough
- Event log
- Active sessions
- Client list
- WINS client list \*
- UPnP / NAT-PMP
- Real-time, hourly, daily, and monthly bandwidth usage reports and charts
- IPv6 support
- Support USB tethering on Android 2.2+ phones

\* Not supported on MAX Surf-On-The-Go, and BR1 variants

## 2 Multi-Orbit Series Router Overview

### 2.1 MAX Orbit 2

#### 2.1.1 Panel Appearance

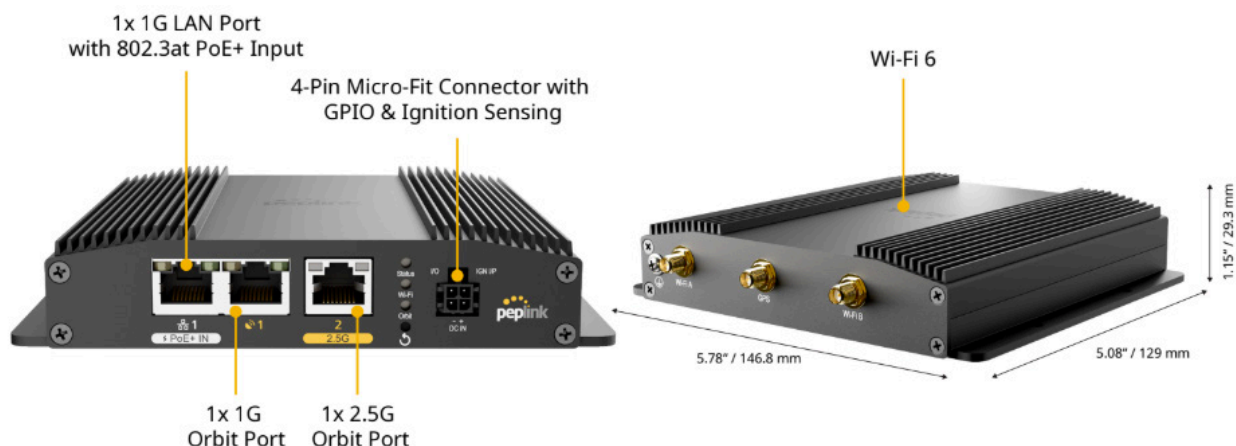

#### 2.1.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:

| Status Indicators |              |                     |
|-------------------|--------------|---------------------|
| <b>Status</b>     | OFF          | System initializing |
|                   | Red          | Booting up or busy  |
|                   | Blinking red | Boot up error       |
|                   | Green        | Ready               |

| Cellular Indicators |                 |                                                      |
|---------------------|-----------------|------------------------------------------------------|
| <b>Orbit</b>        | OFF             | No Starlink connected                                |
|                     | Blinking Slowly | One or more Starlink dish not detected or obstructed |
|                     | Green           | All connected Orbit port detected Starlink dish      |

| Wi-Fi Indicators        |     |                                  |
|-------------------------|-----|----------------------------------|
| <b>Wi-Fi / Wi-Fi AP</b> | OFF | Disabled intermittent            |
|                         | ON  | Connected to wireless network(s) |




| LAN Ports |                      |                                                       |
|-----------|----------------------|-------------------------------------------------------|
| Right LED | Green                | 1000 Mbps                                             |
|           | OFF                  | 10 Mbps / 100 Mbps or port is not connected           |
|           | ON                   | Port is connected without traffic                     |
| Left LED  | Blinking             | Data is transferring                                  |
|           | OFF                  | No data is being transferred or port is not connected |
| Port Type | Auto MDI/MDI-X ports |                                                       |

| Orbit Port |                      |                                                       |
|------------|----------------------|-------------------------------------------------------|
| Right LED  | Green                | 1000 Mbps                                             |
|            | OFF                  | 10 Mbps / 100 Mbps or port is not connected           |
|            | ON                   | Port is connected without traffic                     |
| Left LED   | Blinking             | Data is transferring                                  |
|            | OFF                  | No data is being transferred or port is not connected |
| Port Type  | Auto MDI/MDI-X ports |                                                       |

| 2.5GE Orbit Port |                      |                                                       |
|------------------|----------------------|-------------------------------------------------------|
| Right LED        | Green                | 2.5 Gbps                                              |
|                  | Orange               | 1000 Mbps                                             |
|                  | OFF                  | 10 Mbps / 100 Mbps or port is not connected           |
|                  | ON                   | Port is connected without traffic                     |
| Left LED         | Blinking             | Data is transferring                                  |
|                  | OFF                  | No data is being transferred or port is not connected |
| Port Type        | Auto MDI/MDI-X ports |                                                       |

## 2.2 MAX Orbit 4

### 2.2.1 Panel Appearance

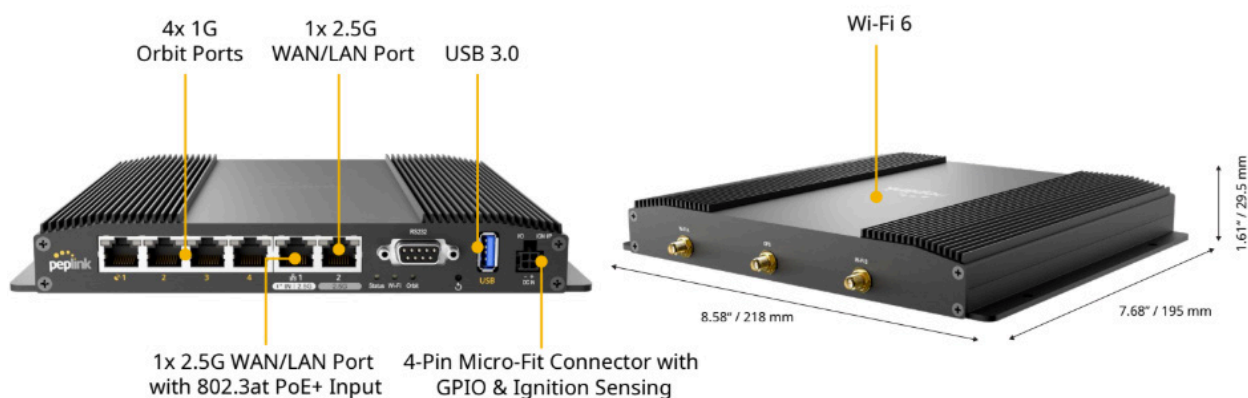

### 2.2.2 LED Indicators

| Status Indicators |              |                     |
|-------------------|--------------|---------------------|
| Status            | OFF          | System initializing |
|                   | Red          | Booting up or busy  |
|                   | Blinking red | Boot up error       |
|                   | Green        | Ready               |

| Orbit Indicators |                 |                                                      |
|------------------|-----------------|------------------------------------------------------|
| Orbit            | OFF             | No Starlink connected                                |
|                  | Blinking Slowly | One or more Starlink dish not detected or obstructed |
|                  | Green           | All connected Orbit port detected Starlink dish      |


| Wi-Fi Indicators |     |                                  |
|------------------|-----|----------------------------------|
| Wi-Fi / Wi-Fi AP | OFF | Disabled intermittent            |
|                  | ON  | Connected to wireless network(s) |

| WAN / LAN Ports |                      |                                                       |
|-----------------|----------------------|-------------------------------------------------------|
| Right LED       | Green                | 2.5 Gbps                                              |
|                 | Orange               | 1000 Mbps                                             |
|                 | OFF                  | 10 Mbps / 100 Mbps or port is not connected           |
| Left LED        | ON                   | Port is connected without traffic                     |
|                 | Blinking             | Data is transferring                                  |
|                 | OFF                  | No data is being transferred or port is not connected |
| Port Type       | Auto MDI/MDI-X ports |                                                       |

| Orbit Port |                      |                                                       |
|------------|----------------------|-------------------------------------------------------|
| Right LED  | Green                | 1000 Mbps                                             |
|            | OFF                  | 10 Mbps / 100 Mbps or port is not connected           |
|            | ON                   | Port is connected without traffic                     |
| Left LED   | Blinking             | Data is transferring                                  |
|            | OFF                  | No data is being transferred or port is not connected |
| Port Type  | Auto MDI/MDI-X ports |                                                       |

## 2.3 MAX Orbit 8

### 2.3.1 Panel Appearance

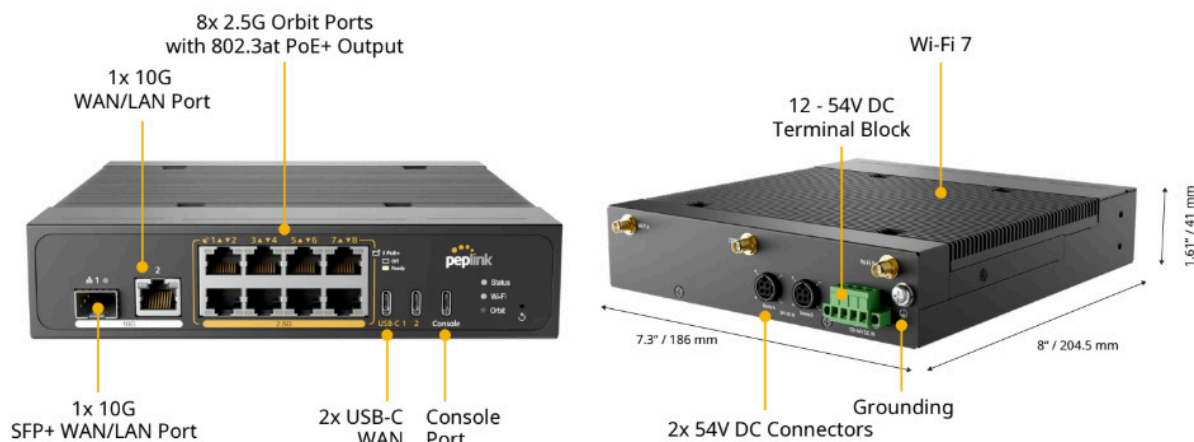

### 2.3.2 LED Behaviour

| Power and Status Indicators |                              |
|-----------------------------|------------------------------|
| Status                      | OFF – Upgrading firmware     |
|                             | Red – Booting up or busy     |
|                             | Blinking red – Boot up error |
|                             | Green – Ready                |

| Orbit Indicators |                 |                                                      |
|------------------|-----------------|------------------------------------------------------|
| Orbit            | OFF             | No Starlink connected                                |
|                  | Blinking Slowly | One or more Starlink dish not detected or obstructed |
|                  | Green           | All connected Orbit port detected Starlink dish      |

| WAN / LAN Port (10GBASE-T) |        |                       |
|----------------------------|--------|-----------------------|
| Right                      | Green  | 10 Gbps               |
|                            | Orange | 1000 Mbps / 2500 Mbps |
|                            | OFF    | 100 Mbps              |

|                          |          |                                   |
|--------------------------|----------|-----------------------------------|
| <b>Left</b>              | OFF      | Port is not connected             |
|                          | Blinking | Data is transferring              |
|                          | ON       | Port is connected without traffic |
| <b>2.5GE Orbit Ports</b> |          |                                   |
| <b>Green LED</b>         | ON       | PoE+ Ready                        |
|                          | OFF      | PoE Off                           |
| <b>Orange LED</b>        | OFF      | Port is not connected             |
|                          | Blinking | Data is transferring              |
|                          | ON       | Port is connected without traffic |
| <b>Port Type</b>         |          | Auto MDI/MDI-X ports              |
| <b>SFP+ Ports</b>        |          |                                   |
| <b>Green LED</b>         | OFF      | Port is not connected             |
|                          | Blinking | Data is transferring              |
|                          | ON       | Port is connected without traffic |

|                      |                              |
|----------------------|------------------------------|
| <b>Console Ports</b> |                              |
| <b>Console Port</b>  | Reserved for engineering use |

## 3 Advanced Feature Summary

### 3.1 Drop-in Mode and LAN Bypass: Transparent Deployment



As your organization grows, it may require more bandwidth, but modifying your network can be tedious. In **Drop-in Mode**, you can conveniently install your Peplink router without making any changes to your network. For any reason your Peplink router loses power, the **LAN Bypass** will safely and automatically bypass the Peplink router to resume your original network connection.


*Note: Drop-in mode is compatible for All MAX models except MAX BR1 IP67*

### 3.2 QoS: Clearer VoIP



VoIP and videoconferencing are highly sensitive to latency. With QoS, Peplink routers can detect VoIP traffic and assign it the highest priority, giving you crystal-clear calls.

### 3.3 Per-User Bandwidth Control

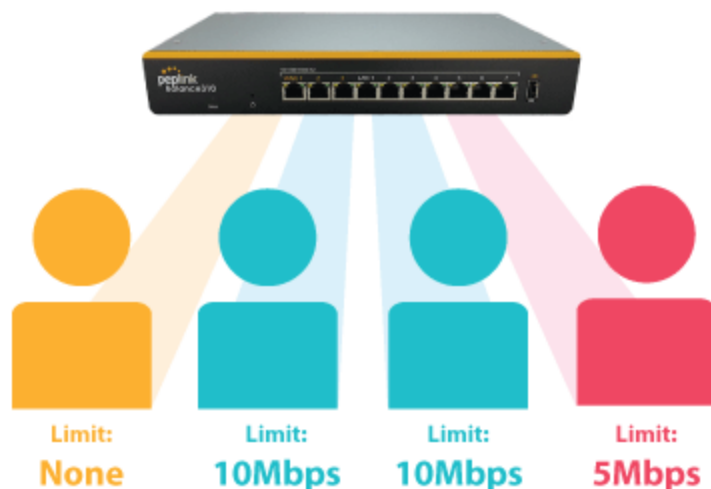

With per-user bandwidth control, you can define bandwidth control policies for up to 3 groups of users to prevent network congestion. Define groups by IP address and subnet, and set bandwidth limits for every user in the group.

### 3.4 High Availability via VRRP



When your organization has a corporate requirement demanding the highest availability with no single point of failure, you can deploy two Peplink routers in **High Availability mode**. With High Availability mode, the second device will take over when needed.

*Compatible with: MAX Orbit 2, MAX Orbit 4, MAX Orbit 8*

### 3.5 USB Modem and Android Tethering



For increased WAN diversity, plug in a USB LTE modem as a backup. Peplink routers are compatible with over [200 modem types](#). You can also tether to smartphones running Android 4.1.X and above.

*Compatible with: MAX Orbit 4, MAX Orbit 8*

### 3.6 Built-In Remote User VPN Support



Use OpenVPN or L2TP with IPsec to safely and conveniently connect remote clients to your private network. L2TP with IPsec is supported by most devices, but legacy devices can also connect using PPTP.

[Click here for the full instructions on setting up L2TP with IPsec.](#)

[Click here for the full instructions on setting up OpenVPN connections](#)

### 3.7 DPI Engine

The DPI report written in the updated KB article will show further information on InControl2 through breaking down application categories into subcategories.


<https://forum.peplink.com/t/ic2-deep-packet-inspection-dpi-reports-and-everything-you-need-to-know-about-it/10151/>



## 3.8 NetFlow

NetFlow protocol is used to track network traffic. Tracking information from NetFlow can be sent to the NetFlow collector, which analyzes data and generates reports for review.

*Note: To enable this feature, go to <https://<Device's IP>/cgi-bin/MANGA/support.cgi>*

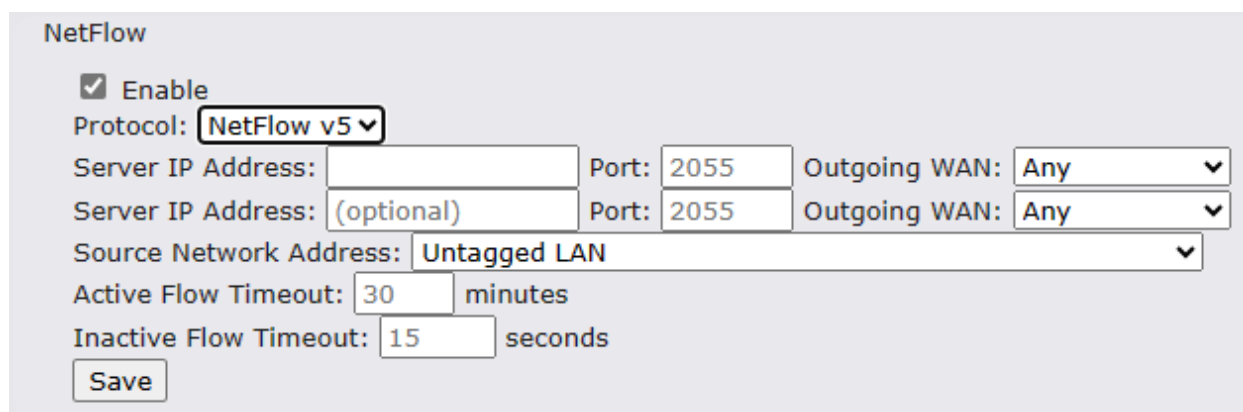

**NetFlow**

☒ Enable

Protocol: **NetFlow v5** ▼

Server IP Address:  Port:  Outgoing WAN: **Any** ▼

Server IP Address: (optional)  Port:  Outgoing WAN: **Any** ▼

Source Network Address: **Untagged LAN** ▼

 
Active Flow Timeout:  minutes

Inactive Flow Timeout:  seconds

## 3.9 Wi-Fi Air Monitoring

Peplink routers support Wi-Fi “Air Monitoring Mode” which is used to troubleshoot remotely and proactively monitor Wi-Fi and WAN performance. The report can be viewed under InControl 2 > Reports > AirProbe Reports after enabling Wi-Fi Air Monitoring.

*Note: To enable this feature, go to <https://<Device's IP>/cgi-bin/MANGA/support.cgi>*



• **Wi-Fi Air Monitoring**

☒ Enable

WARNING: Any supported Wi-Fi / AP features will cease to function when Wi-Fi Air Monitoring is turned on.

## 3.10 SP Default Configuration

The SP Default Configuration feature written in the updated KB article allows for the provisioning of custom made settings (a.k.a. InControl2 configuration) via the Ethernet LAN port and is ideal for those wanting to do a bulk deployment of many Peplink devices.

*Note: If you would like to use this feature, please contact your purchase point (Eg. VAD).*

### 3.11 Peplink Relay

Cloud Service Providers often restrict access to certain applications. With SFC Relay, you can route traffic before going out to the Internet, allowing access to previously restricted applications experienced with the public SpeedFusion Cloud nodes. Available as an add-on for your enterprise branch router or as an upgradable license to your Peplink router, SFC Relay is sure to impress you and any peers you give access to.

<https://youtu.be/99XcwIDH-TA?si=BC2uo3vUKMgBzmD3>

### 3.12 DNS over HTTPS (DoH)

DoH provides the benefits of communicating DNS information over a secure HTTPS connection in an encrypted manner. The protocol offers increased privacy and confidentiality by preventing data interception and man-in-the-middle attacks.

### 3.13 Peplink InTouch

InTouch is Peplink's zero-touch remote network management solution, leveraging InControl 2 and a SpeedFusion Connect (formerly known as SpeedFusion Cloud) data plan. This service extends a network administrator's ability to reach any device UI backed by a Peplink/Peplink router. To configure InTouch, all you need is a valid InControl 2 subscription, a SpeedFusion Connect data plan, and a Peplink/Peplink router (which requires the latest 8.2.0 firmware).

To watch a demonstration and read the FAQ, visit

<https://www.peplink.com/enterprise-solutions/intouch/>

Or learn to configure InTouch at <https://youtu.be/zq0iavHGkJw>

### 3.14 Synergy Mode

Synergy mode is a cascade multiple devices and combine the number of WANs to a single device virtually. All the WANs on the Synergized Device will appear as native WAN interfaces at the Synergy Controller and it can be managed like the built-in WAN interfaces.

[https://forum.peplink.com/t/synergy-mode-\(firmware-8.3.0\)/639be7d8af8c71a6f3050323/](https://forum.peplink.com/t/synergy-mode-(firmware-8.3.0)/639be7d8af8c71a6f3050323/)

### 3.15 Virtual WAN on VLAN

The Virtual WAN Activation License allows you to create 1 x virtual WAN on a particular VLAN, on either WAN or LAN interface. This means that you can create a virtual WAN on VLAN for a WAN port, or a virtual WAN on VLAN for a LAN port.

<https://forum.peplink.com/t/b20x-virtual-wan-activation-license-faq/6204bac7d90b9e6355e96e8d/1>

## 4 Installation

The following section details connecting Peplink routers to your network.

### 4.1 Preparation

Before installing your Peplink router, please prepare the following as appropriate for your installation:

- At least one Internet/WAN access account and/or Wi-Fi access information
- Depending on network connection type(s), one or more of the following:
  - **Ethernet WAN:** A 10/100/1000BaseT UTP cable with RJ45 connector
  - **USB:** A USB modem
  - **Wi-Fi WAN:** Wi-Fi antennas
- A computer installed with the TCP/IP network protocol and a supported web browser. Supported browsers include Microsoft Internet Explorer 11 or above, Mozilla Firefox 24 or above, Apple Safari 7 or above, and Google Chrome 18 or above.

### 4.2 Constructing the Network

At a high level, construct the network according to the following steps:

1. With an Ethernet cable, connect a computer to one of the LAN ports on the Peplink router. Repeat with different cables for up to 4 computers to be connected.
2. Connect either another Ethernet cable or a USB modem to one of the WAN ports or USB ports respectively, or connect to Wi-Fi as WAN on the Peplink router. Repeat the same process for any additional WAN ports.
3. Connect the power adapter to the power connector on the rear panel of the Peplink router, and then plug it into a power outlet.

## 4.3 Configuring the Network Environment

To ensure that the Peplink router works properly in the LAN environment and can access the Internet via WAN connections, please refer to the following setup procedures:

- LAN configuration

For basic configuration, refer to **Section 8, Connecting to the Web Admin Interface**.

For advanced configuration, go to **Section 9, Configuring the LAN Interface(s)**.

- WAN configuration

For basic configuration, refer to **Section 8, Connecting to the Web Admin Interface**.

For advanced configuration, go to **Section 9.2, Captive Portal**.

## 5 Connecting to the Web Admin Interface

1. Start a web browser on a computer that is connected with the Peplink router through the LAN.
2. To connect to the router's web admin interface, enter the following LAN IP address in the address field of the web browser:

http://192.168.50.1


(This is the default LAN IP address for Peplink routers.)

3. Enter the following to access the web admin interface.


**Username:** admin

**Password:** admin


(This is the default username and password for Peplink routers).

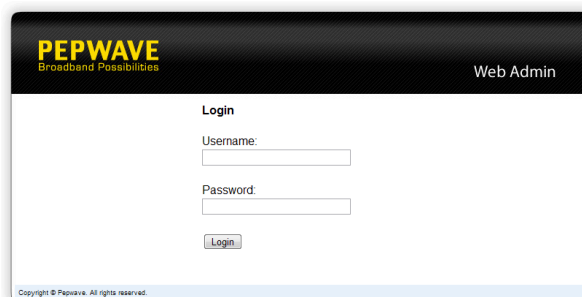

- You must change the default password on the first successful login.
- Password requirements are: A minimum of 10 lower AND upper case characters, including at least 1 number.
- When HTTP is selected, the URL will be redirected to HTTPS by default.

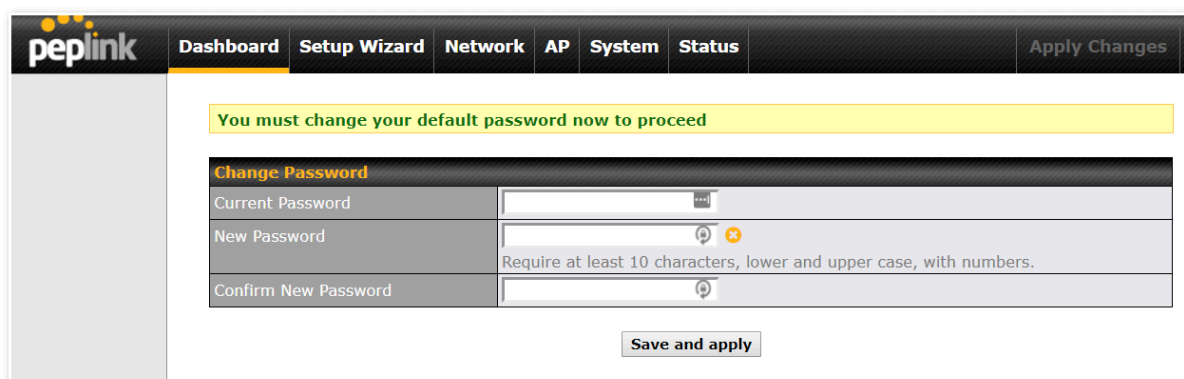

After successful login, the **Dashboard** of the web admin interface will be displayed.

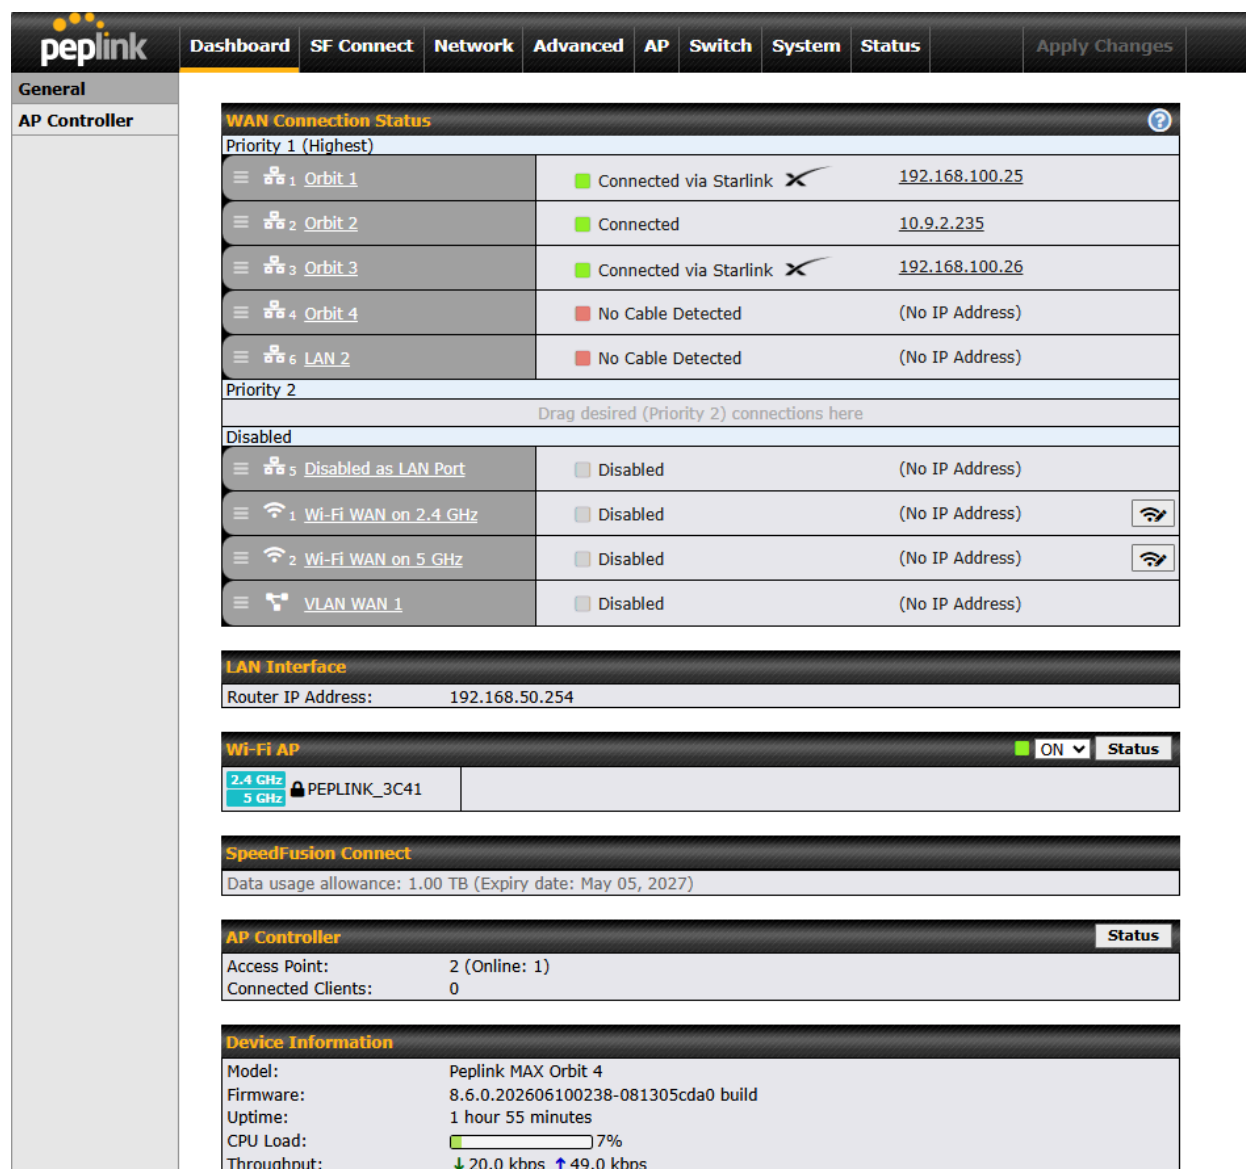

**peplink** Dashboard SF Connect Network Advanced AP Switch System Status Apply Changes

**General**

**AP Controller**

**WAN Connection Status** ?

Priority 1 (Highest)

|         |                        |                 |
|---------|------------------------|-----------------|
| Orbit 1 | Connected via Starlink | 192.168.100.25  |
| Orbit 2 | Connected              | 10.9.2.235      |
| Orbit 3 | Connected via Starlink | 192.168.100.26  |
| Orbit 4 | No Cable Detected      | (No IP Address) |
| LAN 2   | No Cable Detected      | (No IP Address) |

Priority 2

Drag desired (Priority 2) connections here

Disabled

|                      |          |                 |
|----------------------|----------|-----------------|
| Disabled as LAN Port | Disabled | (No IP Address) |
| Wi-Fi WAN on 2.4 GHz | Disabled | (No IP Address) |
| Wi-Fi WAN on 5 GHz   | Disabled | (No IP Address) |
| VLAN WAN 1           | Disabled | (No IP Address) |

**LAN Interface**

Router IP Address: 192.168.50.254

**Wi-Fi AP** ON Status

2.4 GHz 5 GHz PEPLINK\_3C41

**SpeedFusion Connect**

Data usage allowance: 1.00 TB (Expiry date: May 05, 2027)

**AP Controller** Status

Access Point: 2 (Online: 1)

Connected Clients: 0

**Device Information**

Model: Peplink MAX Orbit 4

Firmware: 8.6.0.202606100238-081305cda0 build

Uptime: 1 hour 55 minutes

CPU Load: 7%

Throughput: ↓ 20.0 kbps ↑ 49.0 kbps

The **Dashboard** shows current Orbit, WAN, LAN, and Wi-Fi AP statuses. Here, you can change WAN connection priority and switch on/off the Wi-Fi AP. For further information on setting up these connections, please refer to **Sections 8 and 9**.

**Device Information** displays details about the device, including model name, firmware version, and uptime. For further information, please refer to **Section 22**.

### Important Note

Configuration changes (e.g. WAN, LAN, admin settings, etc.) will take effect only after clicking the **Save** button at the bottom of each page. The **Apply Changes** button causes the changes to be saved and applied.

## 6 SpeedFusion Connect

With Peplink products, your device is able to connect to SpeedFusion Connect without the use of a second endpoint. This service has wide access to a number of SpeedFusion endpoints hosted from around the world, providing your device with unbreakable connectivity wherever you are.\*



\*SpeedFusion Connect is supported in firmware version 8.1.0 and above. SpeedFusion Connect is a subscription basis. SpeedFusion Connect license can be purchased at <https://estore.peplink.com/> > **SpeedFusion Service** > **SpeedFusion Connect**.

### 6.1 Activate SpeedFusion Connect Service

All Care plans now come with SpeedFusion Connect included. This data allowance will automatically begin and end in accordance with your warranty. No activation is required.

## 6.2 Enable SpeedFusion Connect

Access the Web Admin of the device you want to create as the Peplink Relay Server, navigating to the “**SFC Protect**” tab.

### SpeedFusion Connect

Aggregate your bandwidth, connect you to different geo-location, and more.



**Client Mode - for Outbound accesses**  
Choose SFC Location to connect.

#### Outbound Traffic Steering Priority



 
**Route by Wi-Fi SSID**  
Send traffic via SFC locations by Wi-Fi SSID.



**Route by LAN Client**  
Send traffic via SFC locations by LAN Clients' MAC Address.



**Route by Cloud Application**  
Send traffic for Google, Microsoft, Zoom, and other cloud services via SFC locations.



**Relay Mode - for Inbound accesses**

To setup a Peplink Relay Mode, select “**Relay Mode – for Inbound accesses**” > Choose the **SFC Protect Location** you wish to connect to > Click on the **Green tick button** to confirm the change.

User may also get the suggestions cloud location based on latency by click “[here](#)”.

### SFC > Setup Relay Mode

Allow remote peers to access local networks, and the internet via this device.

| SpeedFusion Connect Relay | SFC Location    |  |
|---------------------------|-----------------|--|
|                           | Singapore (SIN) |  |

To get suggestions for the cloud location based on your latency, click [here](#).



The Protect private networks option blocks traffic from Relay Clients to private IP address ranges, including:

- 10.0.0.0/8
- 100.64.0.0/10
- 172.16.0.0/12
- 192.168.0.0/16
- 169.254.0.0/16

Enabling this option prevents access to these private networks from Relay Clients to protect your private networks and devices. This can improve the security of your local network against unwanted traffic from Relay Clients.

| Access Control Settings |                               |
|-------------------------|-------------------------------|
| Network Access          | <span>?</span> All networks ▼ |
| Device Access           | Allow all remote devices ▼    |
| Save                    |                               |

To block other devices from connecting, select “Block all except the allowed list” and add allowed devices serial number under the list.

| Access Control Settings |                                     |                      |                                                        |
|-------------------------|-------------------------------------|----------------------|--------------------------------------------------------|
| Network Access          | <span>?</span> All networks ▼       |                      |                                                        |
| Device Access           | Block all except the allowed list ▼ |                      |                                                        |
| Allowed Device          | Serial Number                       | Note                 |                                                        |
|                         | <input type="text"/>                | <input type="text"/> | <input style="float: right;" type="button" value="+"/> |
| Save                    |                                     |                      |                                                        |

The Relay Sharing Code will be generated, and other peers can use this code to establish a SpeedFusion Connect Protect that will forward the traffics to this device, allowing them to access local networks and the internet via your WAN connection.

## SFC > Setup Relay Mode

Allow remote peers to access local networks, and the internet via this device.

| SpeedFusion Connect Relay            | SFC Location                                   | <span>?</span>                                        |
|--------------------------------------|------------------------------------------------|-------------------------------------------------------|
| <a href="#">SFC-RELAY-SERVER-SIN</a> | Relay Sharing Code: <b>2660-6980-9477-5614</b> | <span style="color: red; font-weight: bold;">✖</span> |

To connect to SpeedFusion Connect Protect, you can select a **SFC Protect Location** of your choice, or simply and **Automatic** then the device will establish connection to the nearest SFC Protect server.

Choose **Automatic** > Click on the green tick button to confirm the change.

## SFC > Choose SFC Location

You can connect up to 3 different sfc locations.

| SpeedFusion Connect | SFC Location |                                     |
|---------------------|--------------|-------------------------------------|
|                     | Automatic    | <input checked="" type="checkbox"/> |

To get suggestions for the cloud location based on your latency, click [here](#).

Or you may select **Relay Sharing** and use your **Relay Sharing Code** to create a profile if you have set up a Peplink Relay Client on another device.

## SFC > Choose SFC Location

You can connect up to 3 different sfc locations.

| SpeedFusion Connect | SFC Location                                |                                     |
|---------------------|---------------------------------------------|-------------------------------------|
|                     | [Relay Sharing]<br>e.g. 1234-5678-1234-5678 | <input checked="" type="checkbox"/> |

To get suggestions for the cloud location based on your latency, click [here](#).

Click on **Apply Changes** to save the change.

| Dashboard | SF Connect | Network | Advanced | AP | Switch | System | Status | Apply Changes |
|-----------|------------|---------|----------|----|--------|--------|--------|---------------|
|           |            |         |          |    |        |        |        |               |

Saved! Changes will be effective after clicking the 'Apply Changes' button.

## SFC > Choose SFC Location

| SpeedFusion Connect | SFC Location |                                     |
|---------------------|--------------|-------------------------------------|
| SFC                 | Automatic    | <input checked="" type="checkbox"/> |
|                     | ---          | <input type="checkbox"/>            |

To get suggestions for the cloud location based on your latency, click [here](#).

By default, the router will build a SpeedFusion tunnel to the SpeedFusion Connect Protect.

|                                                                                                     |                                                |                                                                    |
|-----------------------------------------------------------------------------------------------------|------------------------------------------------|--------------------------------------------------------------------|
| <b>Wi-Fi AP</b>                                                                                     |                                                | <span style="color: green;">ON</span> <span>▼</span> <b>Status</b> |
| No Wi-Fi AP                                                                                         |                                                |                                                                    |
| <b>SpeedFusion Connect Protect</b>                                                                  |                                                |                                                                    |
| SFC                                                                                                 | <span style="color: green;">Established</span> |                                                                    |
| Data usage allowance: <span style="background-color: #cccccc;">00000000</span> (Display data usage) |                                                |                                                                    |

If you are running a latency sensitive service like video streaming or VOIP, a WAN Smoothing sub-tunnel can be created. Navigate to **SFC Protect > Client Mode – for Outbound accesses > SFC**.

## SFC > Choose SFC Location

| SpeedFusion Connect | SFC Location |                                      |
|---------------------|--------------|--------------------------------------|
| SFC                 | Automatic    | <span style="color: red;">✖</span>   |
|                     | ---          | <span style="color: green;">✔</span> |

To get suggestions for the cloud location based on your latency, click [here](#).

A SpeedFusion Connect Protect Profile configuration window will pop out. Click on the **+** sign to create the WAN Smoothing sub-tunnel.

| SpeedFusion Connect Protect Profile |                                     |
|-------------------------------------|-------------------------------------|
| Enable                              | <input checked="" type="checkbox"/> |
| SFC Protect Location                | Automatic <span>▼</span>            |


  

|   |                 |                                                             |
|---|-----------------|-------------------------------------------------------------|
| 1 | 2 - WAN Smoo... | <span style="border: 1px solid red; padding: 2px;">+</span> |
|---|-----------------|-------------------------------------------------------------|

| Tunnel Options           |                                                                                                                                                                                       |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local / Remote Tunnel ID | 2                                                                                                                                                                                     |
| Tunnel Name              | WAN Smoothing                                                                                                                                                                         |
| Data Port                | <span>?</span> <input checked="" type="radio"/> Auto <input type="radio"/> Custom <input type="text"/>                                                                                |
| Bandwidth Limit          | <span>?</span> <input type="checkbox"/>                                                                                                                                               |
| TCP Ramp Up              | <span>?</span> <input type="checkbox"/>                                                                                                                                               |
| WAN Smoothing            | <div> <span>?</span> Overall Redundancy Level <span>Normal</span> <span>▼</span> </div> <div> <span>?</span> Maximum Level on the Same Link <span>Normal</span> <span>▼</span> </div> |
| Forward Error Correction | <span>?</span> <span>Off</span> <span>▼</span>                                                                                                                                        |
| Receive Buffer           | <span>?</span> <input type="text" value="0"/> ms                                                                                                                                      |
| Packet Fragmentation     | <span>?</span> <input checked="" type="radio"/> Always <input type="radio"/> Use DF Flag                                                                                              |

Click on **Save** and **Apply Changes** to save the configuration. Now, the router has 2 Speedfusion tunnels to the SpeedFusion Connect Protect.

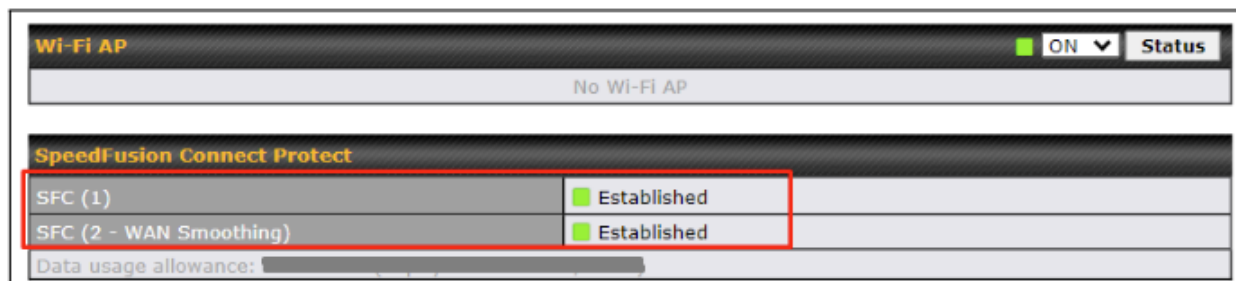

Data usage allowance is able to check from the below SpeedFusion Connect from Dashboard.

## Status

Data usage allowance: [remaining data] (Expiry date: 2025)      Remaining SFC data usage occurs.

Fair usage policy (Expiry date: 2025)      Device with active care plan but exceeded SFC data usage. This mode will reduce the throughput to 10 Mbps

Create an outbound policy to steer the internet traffic to go into SFC Protect. Please go to **Advanced > Outbound Policy**, click on **Add Rule** to create a new outbound policy.

**PEPWAVE**
Dashboard
SFC Protect
Network
**Advanced**
AP
System
Status
Apply Changes

**Advanced**

- SpeedFusion VPN
- IPsec VPN
- GRE Tunnel
- OpenVPN
- Outbound Policy**
- Port Forwarding

**NAT Mappings**
**QoS**

- User Groups
- Bandwidth Control
- Application Queue
- Application

**Firewall**

- Access Rules
- Content Blocking

**Routing Protocols**

- OSPF & RIPv2
- BGP

**Remote User Access**

**Add a New Custom Rule**

Service Name

Enable

☒

Source

Destination

Mask: 255.255.255.0 (/24)

Protocol

Algorithm

Priority Order

Highest Priority
SFC Protect: SFC
WAN: WAN
WAN: Cellular
WAN: Wi-Fi WAN on 2.4 GHz
WAN: Wi-Fi WAN on 5 GHz
Lowest Priority

Not In Use

When No Connections are Available

Terminate Sessions on Connection Recovery

☐ Enable

Save

Cancel

**Outbound Policy**

Custom

Rules (👉 Drag and drop rows by the left to change rule order) ?

| Service                            | Algorithm                        | Source                      | Destination | Protocol / Port |                                     |
|------------------------------------|----------------------------------|-----------------------------|-------------|-----------------|-------------------------------------|
| PepVPN / OSPF / BGP / RIPv2 Routes |                                  |                             |             |                 |                                     |
| SpeedFusion Cloud Routes           |                                  |                             |             |                 |                                     |
| 👉 to internet                      | Priority<br>VPN: SFC (1 - Def... | IP Address<br>192.168.50.10 | Any         | Any             | <input checked="" type="checkbox"/> |
| 👉 HTTPS Persistence                | Persistence (Src)<br>(Auto)      | Any                         | Any         | TCP<br>443      | <input checked="" type="checkbox"/> |
| Default                            | (Auto)                           |                             |             |                 |                                     |
| Add Rule                           |                                  |                             |             |                 |                                     |

**Expert Mode**

Enabled

## 6.3 Route by Cloud Application

Optimize Cloud Application allows you to route Internet traffic through SpeedFusion Connect Protect based on the application. Go to **SFC Protect > Route by Cloud Application**.

 
### SpeedFusion Connect

Aggregate your bandwidth, connect you to different geo-location, and more.



**Client Mode - for Outbound accesses**  
Choose SFC Location to connect.

#### Outbound Traffic Steering Priority



**Route by Cloud Application**  
Send traffic for Google, Microsoft, Zoom, and other cloud services via SFC locations.


Select a Cloud application to route through SpeedFusion Connect Protect from the drop down list

> Click > Save > Apply Changes.

Click the to remove a selected Cloud application from routing through SpeedFusion Connect Protect.

### SFC > Optimize Cloud Application

Traffic of the selected cloud application will be redirected to the assigned SFC.

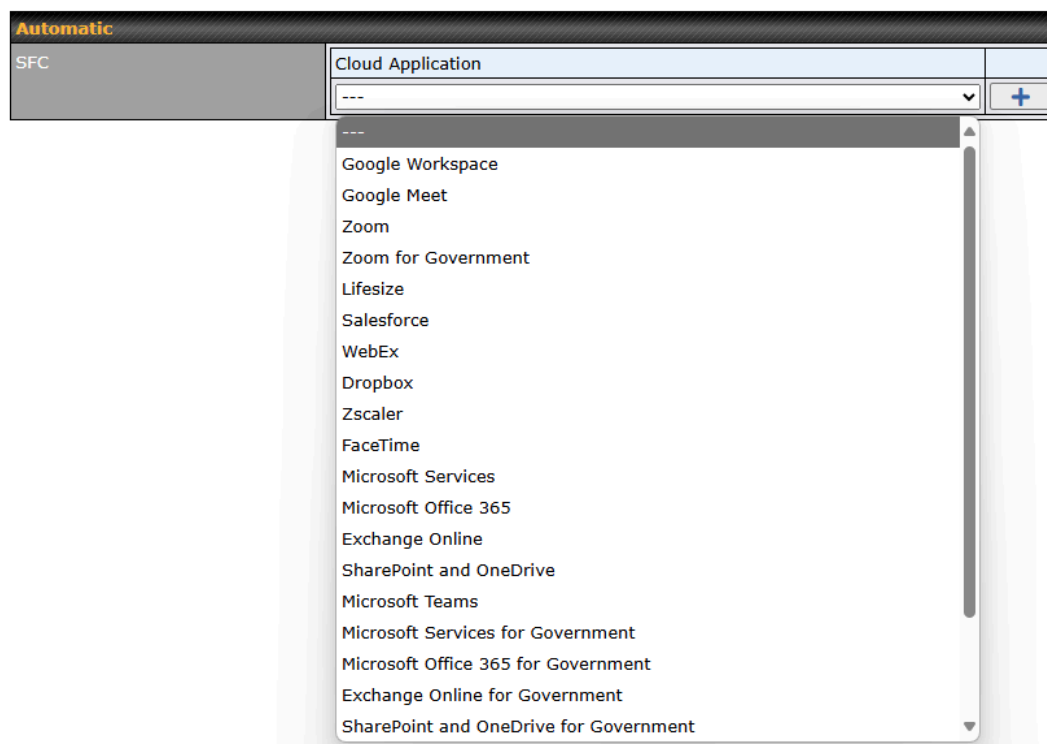

## 6.4 Route by Wi-Fi SSID

SpeedFusion Connect Protect provides a convenient way to route the Wi-Fi client to the cloud from **SFC Protect > Route by Wi-Fi SSID**.

### SpeedFusion Connect

Aggregate your bandwidth, connect you to different geo-location, and more.



**Client Mode - for Outbound accesses**  
Choose SFC Location to connect.

#### Outbound Traffic Steering Priority



**Route by Cloud Application**  
Send traffic for Google, Microsoft, Zoom, and other cloud services via SFC locations.



**Route by Wi-Fi SSID**  
Send traffic via SFC locations by Wi-Fi SSID.

Create a new SSID for SFC Protect. The new SSID will inherit all settings from one of the existing SSIDs including the Security Policy. Then click **Save** followed by **Apply Changes**.

### SFC > Link Wi-Fi to SFC

The new SSID will inherit all settings from the existing SSID including the Security Policy.

| Automatic |                |                           |  |
|-----------|----------------|---------------------------|--|
| SFC       | Reference SSID | SSID for SFC              |  |
|           | MBX-5GHz-SSID  | MBX-5GHz-SSID (Automatic) |  |
|           | ---            |                           |  |

Save

SFC Protect SSID will be shown on **Dashboard**.

| Wi-Fi AP         |                            |                  | ON | Status |
|------------------|----------------------------|------------------|----|--------|
| 2.4 GHz<br>5 GHz | 2.4 GHz<br>5 GHz  test-sfc | 2.4 GHz<br>5 GHz |    |        |

| SpeedFusion Connect Protect |             |
|-----------------------------|-------------|
| SFC (1)                     | Established |
| SFC (2 - WAN Smoothing)     | Established |

## 6.5 Route by LAN Client

SpeedFusion Connect Protect provides a convenient way to route the LAN client to the cloud from **SFC Protect > Route by LAN Client**.

### SpeedFusion Connect

Aggregate your bandwidth, connect you to different geo-location, and more.



**Client Mode - for Outbound accesses**  
Choose SFC Location to connect.

#### Outbound Traffic Steering Priority



**Route by Cloud Application**  
Send traffic for Google, Microsoft, Zoom, and other cloud services via SFC locations.



**Route by Wi-Fi SSID**  
Send traffic via SFC locations by Wi-Fi SSID.



**Route by LAN Client**  
Send traffic via SFC locations by LAN Clients' MAC Address.

Choose a client from the drop down list > Click + > Save > Apply Changes.

### SFC > Connect Clients to SFC

Traffic from the selected clients will be redirected to the assigned SFC.

| Automatic |                                                                                             |               |                                                                                       |
|-----------|---------------------------------------------------------------------------------------------|---------------|---------------------------------------------------------------------------------------|
| SFC       | Client                                                                                      | IP Address    |                                                                                       |
|           | LAPTOP-  | 192.168.52.75 |  |

Save



## 7 Configuring the LAN Interface(s)

### 7.1 Basic Settings

LAN interface settings are located at **Network > LAN > Network Settings**. Navigating to that page will show the following dashboard:

| LAN                                                                                            | VLAN | IP Address / Network |                                                                                     |
|------------------------------------------------------------------------------------------------|------|----------------------|-------------------------------------------------------------------------------------|
| Untagged LAN  | [1]  | 192.168.50.1/24      |                                                                                     |
| VLAN 123                                                                                       | 123  | 192.168.123.1/24     |  |
| New LAN                                                                                        |      |                      |                                                                                     |

This represents the LAN interfaces that are active on your router (including VLAN). A gray “X” means that the VLAN is used in other settings and cannot be deleted. You can find which settings are using the VLAN by hovering over the gray “X”.

Alternatively, a red “X” means that there are no settings using the VLAN. You can delete that VLAN by clicking the red “X”

Note: Default VLAN 1 is used for untagged LAN. Unused VLAN will be assigned if user has configured VLAN 1 for some other LAN network in previous firmware version.

Clicking on any of the existing LAN interfaces (or creating a new one) will show the following :

**IP Settings**

IP Address
255.255.255.0 (/24)

**IP Settings**

**IP Address** The IP address and subnet mask of the Peplink router on the LAN.

**Network Settings**

Name

VLAN ID

Inter-VLAN routing
☒

**Network Settings**

**Name** Enter a name for the LAN.

|                           |                                                        |
|---------------------------|--------------------------------------------------------|
| <b>VLAN ID</b>            | Enter a number for your VLAN                           |
| <b>Inter-VLAN routing</b> | Check this box to enable routing between virtual LANs. |

| Layer 2 SpeedFusion VPN Bridging          |                                                                                                                                           |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| SpeedFusion VPN Profiles to Bridge        | No profile is available                                                                                                                   |
| Spanning Tree Protocol                    | <input type="checkbox"/>                                                                                                                  |
| DHCP Option 82 Injection                  | <input checked="" type="checkbox"/>                                                                                                       |
| Override IP Address when bridge connected | <input checked="" type="radio"/> Do not override <input type="radio"/> Static <input type="radio"/> By DHCP <input type="radio"/> As None |

**Help** Close

If you want to enable DHCP Option 82 Injection, please click [here](#).

This allow the device to inject Option 82 with Device Name information before forwarding the DHCP Request packet to SpeedFusion VPN peer, such that the DHCP Server can identify where does this request come from.

| Layer 2 SpeedFusion VPN Bridging                 |                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SpeedFusion VPN Profiles to Bridge</b>        | The remote network of the selected SpeedFusion VPN profiles will be bridged with this local LAN, creating a Layer 2 SpeedFusion VPN, they will be connected and operate like a single LAN, and any broadcast or multicast packets will be sent over the VPN.                                                 |
| <b>Spanning Tree Protocol</b>                    | Click the box will enable STP for this layer 2 profile bridge.                                                                                                                                                                                                                                               |
| <b>DHCP Option 82</b>                            | Click on the question Mark if you want to enable DHCP Option 82.<br>This allows the device to inject Option 82 with Router Name information before forwarding the DHCP Request packet to a SpeedFusion VPN peer, such that the DHCP Server can identify where the request originates from.                   |
| <b>Override IP Address when bridge connected</b> | Select "Do not override" if the LAN IP address and local DHCP server should remain unchanged after the Layer 2 SpeedFusion VPN is up.<br><br>If you choose to override the IP address when the VPN is connected, the device will not act as a router, and most Layer 3 routing functions will cease to work. |

| DHCP Server                         |                                                                                   |                                                                                                                                                                                                                                           |                       |          |             |                         |  |     |                   |  |   |
|-------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|----------|-------------|-------------------------|--|-----|-------------------|--|---|
| DHCP Server                         |  | <input checked="" type="checkbox"/> Enable                                                                                                                                                                                                |                       |          |             |                         |  |     |                   |  |   |
| DHCP Server Logging                 |                                                                                   | <input checked="" type="checkbox"/>                                                                                                                                                                                                       |                       |          |             |                         |  |     |                   |  |   |
| IP Range                            |                                                                                   | 192.168.49.11 - 192.168.49.244                                                                                                                                                                                                            | 255.255.255.0 (/24) ▼ |          |             |                         |  |     |                   |  |   |
| Lease Time                          |                                                                                   | 1 Days 0 Hours 0 Mins                                                                                                                                                                                                                     |                       |          |             |                         |  |     |                   |  |   |
| DNS Servers                         |                                                                                   | <input checked="" type="checkbox"/> Assign DNS server automatically                                                                                                                                                                       |                       |          |             |                         |  |     |                   |  |   |
| WINS Servers                        |                                                                                   | <input type="checkbox"/> Assign WINS server                                                                                                                                                                                               |                       |          |             |                         |  |     |                   |  |   |
| BOOTP                               |                                                                                   | <input type="checkbox"/>                                                                                                                                                                                                                  |                       |          |             |                         |  |     |                   |  |   |
| Extended DHCP Option                |                                                                                   | <table border="1"> <thead> <tr> <th>Option</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td colspan="2">No Extended DHCP Option</td> </tr> <tr> <td colspan="2" style="text-align: center;">Add</td> </tr> </tbody> </table>           |                       | Option   | Value       | No Extended DHCP Option |  | Add |                   |  |   |
| Option                              | Value                                                                             |                                                                                                                                                                                                                                           |                       |          |             |                         |  |     |                   |  |   |
| No Extended DHCP Option             |                                                                                   |                                                                                                                                                                                                                                           |                       |          |             |                         |  |     |                   |  |   |
| Add                                 |                                                                                   |                                                                                                                                                                                                                                           |                       |          |             |                         |  |     |                   |  |   |
| DHCP Exclusion Range                |  | <table border="1"> <thead> <tr> <th>Start IP</th> <th>End IP</th> <th></th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td style="text-align: center;">+</td> </tr> </tbody> </table>                                                |                       | Start IP | End IP      |                         |  |     | +                 |  |   |
| Start IP                            | End IP                                                                            |                                                                                                                                                                                                                                           |                       |          |             |                         |  |     |                   |  |   |
|                                     |                                                                                   | +                                                                                                                                                                                                                                         |                       |          |             |                         |  |     |                   |  |   |
| DHCP Reservation                    |  | <table border="1"> <thead> <tr> <th>Name</th> <th>MAC Address</th> <th>Static IP</th> <th></th> </tr> </thead> <tbody> <tr> <td></td> <td>00:00:00:00:00:00</td> <td></td> <td style="text-align: center;">+</td> </tr> </tbody> </table> |                       | Name     | MAC Address | Static IP               |  |     | 00:00:00:00:00:00 |  | + |
| Name                                | MAC Address                                                                       | Static IP                                                                                                                                                                                                                                 |                       |          |             |                         |  |     |                   |  |   |
|                                     | 00:00:00:00:00:00                                                                 |                                                                                                                                                                                                                                           | +                     |          |             |                         |  |     |                   |  |   |
| User Account IP Address Reservation |  | <table border="1"> <thead> <tr> <th>Username</th> <th>Static IP</th> <th></th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td style="text-align: center;">+</td> </tr> </tbody> </table>                                             |                       | Username | Static IP   |                         |  |     | +                 |  |   |
| Username                            | Static IP                                                                         |                                                                                                                                                                                                                                           |                       |          |             |                         |  |     |                   |  |   |
|                                     |                                                                                   | +                                                                                                                                                                                                                                         |                       |          |             |                         |  |     |                   |  |   |

| DHCP Server Settings       |                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>DHCP Server</b>         | <p>When this setting is enabled, the Peplink router's DHCP server automatically assigns an IP address to each computer that is connected via LAN and configured to obtain an IP address via DHCP. The Peplink router's DHCP server can prevent IP address collisions on the LAN.</p> <p>To enable DHCP bridge relay, please click the  icon on this menu item.</p> |
| <b>DHCP Server Logging</b> | Enable logging of DHCP events in the eventlog by selecting the checkbox.                                                                                                                                                                                                                                                                                                                                                                               |
| <b>IP Range</b>            | These settings allocate a range of IP addresses that will be assigned to LAN computers by the Peplink router's DHCP server.                                                                                                                                                                                                                                                                                                                            |
| <b>Lease Time</b>          | This setting specifies the length of time throughout which an IP address of a DHCP client remains valid. Upon expiration of <b>Lease Time</b> , the assigned IP address will no longer be valid and the IP address assignment must be renewed.                                                                                                                                                                                                         |
| <b>DNS Servers</b>         | This option allows you to input the DNS server addresses to be offered to DHCP clients. If <b>Assign DNS server automatically</b> is selected, the Peplink router's built-in DNS server address (i.e., LAN IP address) will be offered.                                                                                                                                                                                                                |
| <b>BOOTP</b>               | Check this box to enable BOOTP on older networks that still require it.                                                                                                                                                                                                                                                                                                                                                                                |

|                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Extended DHCP Option</b>                | In addition to standard DHCP options (e.g. DNS server address, gateway address, subnet mask), you can specify the value of additional extended DHCP options, as defined in RFC 2132. With these extended options enabled, you can pass additional configuration information to LAN hosts. To define an extended DHCP option, click the <b>Add</b> button, choose the option to define, and then enter its value. For values that are in IP address list format, you can enter one IP address per line in the provided text area input control. Each option can be defined once only.                                                                                                                                                                                                                                                                                                                                        |
| <b>DHCP Reservation</b>                    | <p>This setting reserves the assignment of fixed IP addresses for a list of computers on the LAN. The computers to be assigned fixed IP addresses on the LAN are identified by their MAC addresses. The fixed IP address assignment is displayed as a cross-reference list between the computers' names, MAC addresses, and fixed IP addresses.</p> <p><b>Name</b> (an optional field) allows you to specify a name to represent the device. MAC addresses should be in the format of <b>00:AA:BB:CC:DD:EE</b>. Press  to create a new record. Press  to remove a record. Reserved clients information can be imported from the <b>Client List</b>, located at <b>Status&gt;Client List</b>. For more details, please refer to <b>Section 22.3</b>.</p> |
| <b>User Account IP Address Reservation</b> | This setting reserves the fixed IP addresses assignment for the list of Remote User Access accounts.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

To configure DHCP relay, first click the  button found next to the **DHCP Server** option to display the settings.

| DHCP Relay Settings    |                                                                                                                                                                               |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DHCP Relay             |  <input checked="" type="checkbox"/> Enable                                                |
| DHCP Server IP Address |  <div> DHCP Server 1: <input type="text"/><br/> DHCP Server 2: <input type="text"/> </div> |
| DHCP Option 82         |  <input type="checkbox"/>                                                                  |
| DHCP Relay Logging     | <input type="checkbox"/>                                                                                                                                                      |

| DHCP Relay Settings           |                                                                                                                                                                                                                                                                                                                    |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>                 | Check this box to turn on DHCP relay. Click the  icon to disable DHCP relay.                                                                                                                                                   |
| <b>DHCP Server IP Address</b> | Enter the IP addresses of one or two DHCP servers in the provided fields. The DHCP servers entered here will receive relayed DHCP requests from the LAN. For active-passive DHCP server configurations, enter active and passive DHCP server relay IP addresses in <b>DHCP Server 1</b> and <b>DHCP Server 2</b> . |
| <b>DHCP Option 82</b>         | DHCP Option 82 includes device information as relay agent for the attached client when forwarding DHCP requests from client to server. This option also embeds the device's MAC address and network name in circuit and remote IDs. Check this box to enable DHCP Option 82.                                       |

## DHCP Relay Logging

Enable logging of DHCP Relay events in the eventlog by selecting the checkbox.

Once DHCP is set up, configure **LAN Physical Settings**, **Static Route Settings**, and **DNS Proxy Settings** as noted above.

| Static Route Settings |                     |                       |         |
|-----------------------|---------------------|-----------------------|---------|
| Static Route          | Destination Network | Subnet Mask           | Gateway |
|                       |                     | 255.255.255.0 (/24) ▼ |         |
|                       |                     |                       | +       |

### Static Route Settings

#### Static Route

This table is for defining static routing rules for the LAN segment. A static route consists of the network address, subnet mask, and gateway address. The address and subnet mask values are in w.x.y.z format.

The local LAN subnet and subnets behind the LAN will be advertised to the VPN. Remote routes sent over the VPN will also be accepted. Any VPN member will be able to route to the local subnets. Press to create a new route. Press to remove a route.

<sup>A</sup> - Advanced feature, please click the button on the top right hand corner of the Static Route section to activate and configure Virtual Network Mapping to resolve network address conflict with remote peers.

| Virtual Network Mapping |  |               |                    |
|-------------------------|--|---------------|--------------------|
| One-to-One NAT          |  | Local Network | Virtual Network    |
|                         |  | ▼             |                    |
|                         |  |               | +                  |
| Many-to-One NAT         |  | Local Network | Virtual IP Address |
|                         |  | ▼             |                    |
|                         |  |               | +                  |

In case of a network address conflict with remote peers (i.e. SpeedFusion VPN / IPsec VPN / IP Forwarding WAN are considered as remote connections), you can define Virtual Network Mapping to resolve it.

**Note: OSPF & RIPv2 settings should be updated as well to avoid advertising conflicted networks.**

For further details on virtual network mapping watch this video:

<https://youtu.be/C1FMdZCn3Z8>

### Virtual Network Mapping

#### One-to-One NAT

Every IP Address in the Local Network has a corresponding unique Virtual IP Address for NAT.

Traffic originating from the Local Network to remote connections will be SNAT'ed and behave like coming from the defined Virtual Network.

While traffic initiated by remote peers to the Virtual Network will be DNAT'ed accordingly.

#### Many-to-One NAT

The subnet range defined in Local Network will be mapped to a single Virtual IP Address for NAT. Traffic can only be initiated from local to remote, and these traffic will be NAT'ed and behaves like coming from the same Virtual IP Address.

| DNS Proxy Settings                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|------------------------------|--------------|-----------------------------------|----------------------|-----------------------------------------------|------|---------------------------------------------|--|------------------------------|----------------------|---------------------------------------|----------------------|
| Enable                                                                   | <input checked="" type="checkbox"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| DNS Caching                                                              | <input type="checkbox"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| Include Google Public DNS Servers                                        | <input type="checkbox"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| Local DNS Records                                                        | <input <="" td="" type="button" value="?"/> <td> <table border="1"> <thead> <tr> <th>Host Name</th> <th>IP Address</th> <th>TTL</th> <th></th> </tr> </thead> <tbody> <tr> <td><input type="text"/></td> <td><input type="text"/></td> <td>3600</td> <td><input type="button" value="+"/></td> </tr> </tbody> </table> </td>                                                                                                                                                                                                                                                        | <table border="1"> <thead> <tr> <th>Host Name</th> <th>IP Address</th> <th>TTL</th> <th></th> </tr> </thead> <tbody> <tr> <td><input type="text"/></td> <td><input type="text"/></td> <td>3600</td> <td><input type="button" value="+"/></td> </tr> </tbody> </table>                                                                                                                                                                                                                                            | Host Name                        | IP Address                   | TTL          |                                   | <input type="text"/> | <input type="text"/>                          | 3600 | <input type="button" value="+"/>            |  |                              |                      |                                       |                      |
| Host Name                                                                | IP Address                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | TTL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| <input type="text"/>                                                     | <input type="text"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 3600                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <input type="button" value="+"/> |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| Domain Lookup Policy                                                     | <input <="" td="" type="button" value="?"/> <td> <table border="1"> <thead> <tr> <th>Domain</th> <th>Connection</th> <th></th> </tr> </thead> <tbody> <tr> <td><input type="text"/></td> <td><input type="text"/></td> <td><input type="button" value="+"/></td> </tr> </tbody> </table> </td>                                                                                                                                                                                                                                                                                      | <table border="1"> <thead> <tr> <th>Domain</th> <th>Connection</th> <th></th> </tr> </thead> <tbody> <tr> <td><input type="text"/></td> <td><input type="text"/></td> <td><input type="button" value="+"/></td> </tr> </tbody> </table>                                                                                                                                                                                                                                                                          | Domain                           | Connection                   |              | <input type="text"/>              | <input type="text"/> | <input type="button" value="+"/>              |      |                                             |  |                              |                      |                                       |                      |
| Domain                                                                   | Connection                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| <input type="text"/>                                                     | <input type="text"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | <input type="button" value="+"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| DNS Resolvers                                                            | <input <="" td="" type="button" value="?"/> <td colspan="2"> <table border="1"> <tbody> <tr> <td><input type="checkbox"/> WAN</td> <td>192.168.52.1</td> </tr> <tr> <td><input type="checkbox"/> Cellular</td> <td></td> </tr> <tr> <td><input type="checkbox"/> Wi-Fi WAN on 2.4 GHz</td> <td></td> </tr> <tr> <td><input type="checkbox"/> Wi-Fi WAN on 5 GHz</td> <td></td> </tr> <tr> <td><input type="checkbox"/> SFC</td> <td><input type="text"/></td> </tr> <tr> <td><input type="checkbox"/> Untagged LAN</td> <td><input type="text"/></td> </tr> </tbody> </table> </td> | <table border="1"> <tbody> <tr> <td><input type="checkbox"/> WAN</td> <td>192.168.52.1</td> </tr> <tr> <td><input type="checkbox"/> Cellular</td> <td></td> </tr> <tr> <td><input type="checkbox"/> Wi-Fi WAN on 2.4 GHz</td> <td></td> </tr> <tr> <td><input type="checkbox"/> Wi-Fi WAN on 5 GHz</td> <td></td> </tr> <tr> <td><input type="checkbox"/> SFC</td> <td><input type="text"/></td> </tr> <tr> <td><input type="checkbox"/> Untagged LAN</td> <td><input type="text"/></td> </tr> </tbody> </table> |                                  | <input type="checkbox"/> WAN | 192.168.52.1 | <input type="checkbox"/> Cellular |                      | <input type="checkbox"/> Wi-Fi WAN on 2.4 GHz |      | <input type="checkbox"/> Wi-Fi WAN on 5 GHz |  | <input type="checkbox"/> SFC | <input type="text"/> | <input type="checkbox"/> Untagged LAN | <input type="text"/> |
| <input type="checkbox"/> WAN                                             | 192.168.52.1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| <input type="checkbox"/> Cellular                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| <input type="checkbox"/> Wi-Fi WAN on 2.4 GHz                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| <input type="checkbox"/> Wi-Fi WAN on 5 GHz                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| <input type="checkbox"/> SFC                                             | <input type="text"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| <input type="checkbox"/> Untagged LAN                                    | <input type="text"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| Preferred connections are shown with <input checked="" type="checkbox"/> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |
| <input type="button" value="Save"/>                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                  |                              |              |                                   |                      |                                               |      |                                             |  |                              |                      |                                       |                      |

| DNS Proxy Settings                       |                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>                            | To enable the DNS proxy feature, check this box, and then set up the feature at <b>Network &gt; LAN &gt; DNS Proxy Settings</b> . A DNS proxy server can be enabled to serve DNS requests originating from LAN/PPTP/SpeedFusion™ peers. Requests are forwarded to the <b>DNS servers/resolvers</b> defined for each WAN connection.                                         |
| <b>DNS Caching</b>                       | This field is to enable DNS caching on the built-in DNS proxy server. When the option is enabled, queried DNS replies will be cached until the records' TTL has been reached. This feature can help improve DNS lookup time. However, it cannot return the most up-to-date result for those frequently updated DNS records. By default, <b>DNS Caching</b> is disabled.     |
| <b>Include Google Public DNS Servers</b> | When this option is <b>enabled</b> , the DNS proxy server will also forward DNS requests to Google's Public DNS Servers, in addition to the DNS servers defined in each WAN. This could increase the DNS service's availability. This setting is disabled by default.                                                                                                       |
| <b>Local DNS Records</b>                 | This table is for defining custom local DNS records. A static local DNS record consists of a host name and IP address. When looking up the host name from the LAN to LAN IP of the Peplink router, the corresponding IP address will be returned. Press <input type="button" value="+"/> to create a new record. Press <input type="button" value="x"/> to remove a record. |
| <b>Domain Lookup Policy</b>              | DNS Proxy will lookup the domain names defined in this table using the specified connections only.                                                                                                                                                                                                                                                                          |

## DNS Resolvers <sup>A</sup>


This field specifies which DNS servers can receive forwarded DNS requests. If no DNS server is selected, then all of them will be selected by default.

If you wish to select a SpeedFusion VPN peer, enter the IP address(es) of the VPN peer's DNS server.

Incoming queries will be forwarded to one of the selected servers. If none of the selected servers can be reached, then the router will forward incoming queries to all servers with healthy WAN connections.

<sup>A</sup> - Advanced feature, please click the  button on the top right hand corner to activate.

Finally, if needed, configure Bonjour forwarding, Apple's zero configuration networking protocol. Once VLAN configuration is complete, click **Save** to store your changes.

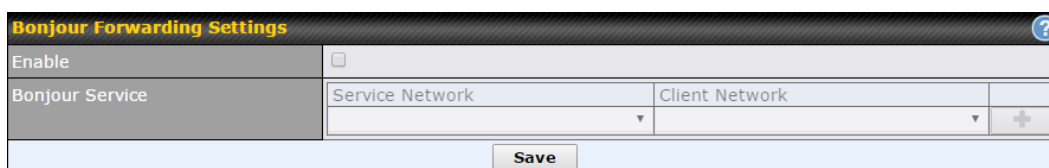


| Bonjour Forwarding Settings |                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>               | Check this box to turn on Bonjour forwarding.                                                                                                                                                                                                                                                                                           |
| <b>Bonjour Service</b>      | Choose <b>Service</b> and <b>Client</b> networks from the drop-down menus, and then click  to add the networks. To delete an existing Bonjour listing, click  . |

## Drop-In Mode

Drop-in mode (or transparent bridging mode) eases the installation of the Peplink MAX on a live network between the firewall and router, such that changes to the settings of existing equipment are not required.

The following diagram illustrates drop-in mode setup:

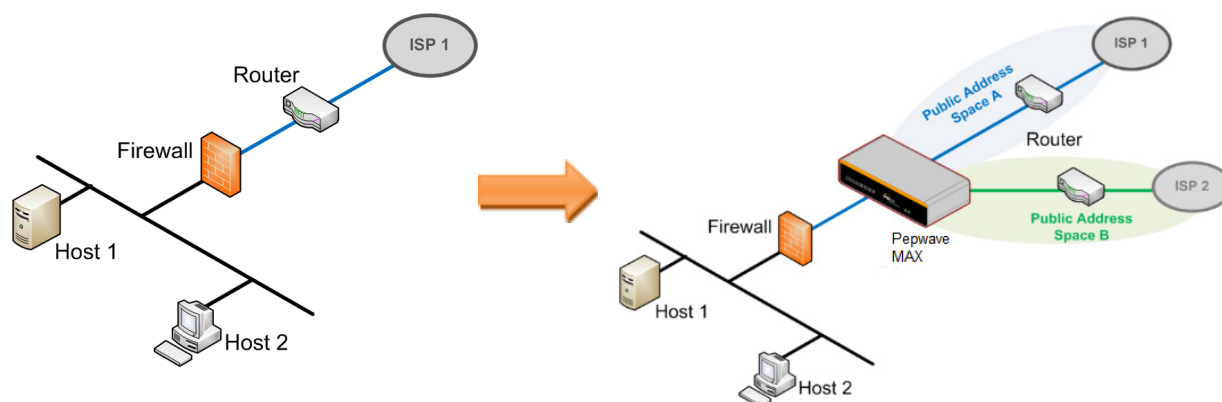

Check the box Enable to enable the Drop-in Mode. After enabling this feature and selecting the WAN for Drop-in mode, various settings including the WAN's connection method and IP address will be automatically updated.

When drop-in mode is enabled, the LAN and the WAN for drop-in mode ports will be bridged. Traffic between the LAN hosts and WAN router will be forwarded between the devices. In this case, the hosts on both sides will not notice any IP or MAC address changes.

After successfully setting up the Peplink MAX as part of the network using drop-in mode, it will, depending on model, support one or more WAN connections. Some MAX units also support multiple WAN connections after activating drop-in mode, though a SpeedFusion license may be required to activate more than one WAN port.

**Please note the Drop-In Mode is mutually exclusive with VLAN.**



| Drop-In Mode Settings                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                               |                                  |                     |             |  |                      |                       |                                  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|---------------------|-------------|--|----------------------|-----------------------|----------------------------------|
| Enable                                                                                                                                                                                                                                                                                                                                      | <input checked="" type="checkbox"/>                                                                                                                                                                                                                                                                                                                                                           |                                  |                     |             |  |                      |                       |                                  |
| WAN for Drop-In Mode                                                                                                                                                                                                                                                                                                                        | <div> <div>?</div> <div>WAN ▾</div> <div> <input checked="" type="checkbox"/> Apply NAT on VLAN networks outgoing Internet traffic<br/>           VLAN network(s) may route their outgoing Internet traffic to this unit. When this checkbox is checked their traffic will be NAT'd before forwarding out of this WAN. Leave this checkbox checked if you are not sure.         </div> </div> |                                  |                     |             |  |                      |                       |                                  |
| Share Drop-In IP                                                                                                                                                                                                                                                                                                                            | <div>?</div> <input checked="" type="checkbox"/>                                                                                                                                                                                                                                                                                                                                              |                                  |                     |             |  |                      |                       |                                  |
| Shared IP Address                                                                                                                                                                                                                                                                                                                           | <div>?</div> <input type="text"/> 255.255.255.0 (/24) ▾                                                                                                                                                                                                                                                                                                                                       |                                  |                     |             |  |                      |                       |                                  |
| Static Route                                                                                                                                                                                                                                                                                                                                | <table border="1"> <thead> <tr> <th>Destination Network</th> <th>Subnet Mask</th> <th></th> </tr> </thead> <tbody> <tr> <td><input type="text"/></td> <td>255.255.255.0 (/24) ▾</td> <td><input type="button" value="+"/></td> </tr> </tbody> </table>                                                                                                                                        |                                  | Destination Network | Subnet Mask |  | <input type="text"/> | 255.255.255.0 (/24) ▾ | <input type="button" value="+"/> |
| Destination Network                                                                                                                                                                                                                                                                                                                         | Subnet Mask                                                                                                                                                                                                                                                                                                                                                                                   |                                  |                     |             |  |                      |                       |                                  |
| <input type="text"/>                                                                                                                                                                                                                                                                                                                        | 255.255.255.0 (/24) ▾                                                                                                                                                                                                                                                                                                                                                                         | <input type="button" value="+"/> |                     |             |  |                      |                       |                                  |
| WAN Default Gateway                                                                                                                                                                                                                                                                                                                         | <div> <div>?</div> <div> <input type="text"/> <div> <input checked="" type="checkbox"/> I have other host(s) on WAN segment           </div> <div>             IP Address <input type="text"/> - <input type="text"/> </div> <div> <input type="button" value="↓"/> </div> <div> <input type="text"/> </div> <div> <input type="button" value="✕"/> </div> </div> </div>                      |                                  |                     |             |  |                      |                       |                                  |
| WAN DNS Servers                                                                                                                                                                                                                                                                                                                             | <div> <div>?</div> <div>             DNS server 1: <input type="text"/><br/>             DNS server 2: <input type="text"/> </div> </div>                                                                                                                                                                                                                                                     |                                  |                     |             |  |                      |                       |                                  |
| <p>NOTE: The DHCP Server Settings will be overwritten.</p> <p>The following WAN settings will be overwritten: Connection Method, MTU, Health Check, Additional Public IP, and Dynamic DNS Settings.</p> <p>The PPTP Server will be disabled.</p> <p>Tip: please review the DNS Forwarding setting under the Service Forwarding section.</p> |                                                                                                                                                                                                                                                                                                                                                                                               |                                  |                     |             |  |                      |                       |                                  |

| Drop-in Mode Settings                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>                        | Drop-in mode eases the installation of the Peplink MAX on a live network between the existing firewall and router, such that no configuration changes are required on existing equipment. Check the box to enable the drop-in mode feature.                                                                                                                                                                                                                                                                                                                                   |
| <b>WAN for Drop-In Mode</b>          | Select the WAN port to be used for drop-in mode. If <b>WAN</b> is selected, the high availability feature will be disabled automatically.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Shared Drop-In IP<sup>A</sup></b> | <p>When this option is enabled, the passthrough IP address will be used to connect to WAN hosts (email notification, remote syslog, etc.). The MAX will listen for this IP address when WAN hosts access services provided by the MAX (web admin access from the WAN, DNS server requests, etc.).</p> <p>To connect to hosts on the LAN (email notification, remote syslog, etc.), the default gateway address will be used. The MAX will listen for this IP address when LAN hosts access services provided by the MAX (web admin access from the WAN, DNS proxy, etc.).</p> |

|                                      |                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Shared IP Address<sup>A</sup></b> | Access to this IP address will be passed through to the LAN port if this device is not serving the service being accessed. The shared IP address will be used in connecting to hosts on the WAN (e.g., email notification, remote syslog, etc.) The device will also listen on the IP address when hosts on the WAN access services served on this device (e.g., web admin accesses from WAN, DNS server, etc.) |
| <b>WAN Default Gateway</b>           | Enter the WAN router's IP address in this field. If there are more hosts in addition to the router on the WAN segment, click the  button next to "WAN Default Gateway" and check the other <b>host(s) on the WAN segment</b> box and enter the IP address of the hosts that need to access LAN devices or be accessed by others.                                                                                |
| <b>WAN DNS Servers</b>               | Enter the selected WAN's corresponding DNS server IP addresses.                                                                                                                                                                                                                                                                                                                                                 |

<sup>A</sup> - Advanced feature, please click the button on the top right-hand corner to activate.

## 7.2 Port Settings

To configure port settings, navigate to **Network > Port Settings**

| Port Settings |      |           |               |                  |       |  |
|---------------|------|-----------|---------------|------------------|-------|--|
| ID            | Name | Port Type | VLAN Networks | PVID             | Speed |  |
| 1             |      | Trunk     | Any           | Untagged LAN (1) | Auto  |  |
| 2             |      | Trunk     | Any           | Untagged LAN (1) | Auto  |  |
| 3             |      | Trunk     | Any           | Untagged LAN (1) | Auto  |  |
| 4             |      | Trunk     | Any           | Untagged LAN (1) | Auto  |  |

On this screen, you can enable specific ports, as well as determine the speed of the LAN ports, whether each port is a trunk or access port, as well as which VLAN each link belongs to, if any.

Untagged frames received by the port are classified to a VLAN indicated by Port VLAN Identifier (PVID). All frames from the VLAN are untagged on egress. PVID option is only configurable when Port Type is set to "Trunk".

## 7.3 Captive Portal

The captive portal serves as a gateway that clients have to pass if they wish to access the internet using your router. To configure, navigate to **Network > LAN > Captive Portal**.

Captive Portal

General Settings

|             |                                                                                                                              |         |  |
|-------------|------------------------------------------------------------------------------------------------------------------------------|---------|--|
| Name        |                                                                                                                              |         |  |
| Enable      | <input checked="" type="checkbox"/> Untagged LAN                                                                             |         |  |
| Hostname    | <input type="text"/>                                                                                                         | Default |  |
| Access Mode | <input checked="" type="radio"/> Open Access <input type="radio"/> User Authentication <input type="radio"/> External Server |         |  |

Portal Access Settings

| Access Quota                       | <input type="text" value="30"/> mins (0: Unlimited)<br><input type="text" value="0"/> MB (0: Unlimited)                                                                                     |                                    |  |                      |   |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|--|----------------------|---|
| Quota Reset Time                   | <input checked="" type="radio"/> Daily at <input type="text" value="00"/> :00<br><input type="radio"/> 1440 minutes after quota reached                                                     |                                    |  |                      |   |
| Inactive Timeout                   | <input type="text" value="0"/> minutes (0: No Timeout)                                                                                                                                      |                                    |  |                      |   |
| Allowed Networks                   | <table> <tr> <th>Domain Name / IP Address / Network</th> <th></th> </tr> <tr> <td><input type="text"/></td> <td>+</td> </tr> </table>                                                       | Domain Name / IP Address / Network |  | <input type="text"/> | + |
| Domain Name / IP Address / Network |                                                                                                                                                                                             |                                    |  |                      |   |
| <input type="text"/>               | +                                                                                                                                                                                           |                                    |  |                      |   |
| Allowed Clients                    | <table> <tr> <th>MAC / IP Address / Host Identifier</th> <th></th> </tr> <tr> <td><input type="text"/></td> <td>+</td> </tr> </table>                                                       | MAC / IP Address / Host Identifier |  | <input type="text"/> | + |
| MAC / IP Address / Host Identifier |                                                                                                                                                                                             |                                    |  |                      |   |
| <input type="text"/>               | +                                                                                                                                                                                           |                                    |  |                      |   |
| Splash Page                        | <input checked="" type="radio"/> Built-in <input type="radio"/> External, URL: <input type="text" value="http://"/>                                                                         |                                    |  |                      |   |
| Popup Handling                     | <input type="checkbox"/> Bypass Popup (Redirection only takes place on normal browser)<br><input type="checkbox"/> Automatically show splash page on Safari for Apple (iOS / macOS) devices |                                    |  |                      |   |
| Logout Hostname                    | <input type="text" value="(Not configured)"/>                                                                                                                                               |                                    |  |                      |   |

Click [here](#) to preview / customize built-in splash page

Save

Cancel

| Captive Portal Settings |                                                                                                                                                            |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>             | Enter the name for the Captive Portal.                                                                                                                     |
| <b>Enable</b>           | Check <b>Enable</b> and then, optionally, select the LANs/VLANs that will use the captive portal.                                                          |
| <b>Hostname</b>         | To customize the portal's form submission and redirection URL, enter a new URL in this field. To reset the URL to factory settings, click <b>Default</b> . |

## Access Mode

Click **Open Access** to allow clients to freely access your router. Click **User Authentication** to force your clients to authenticate before accessing your router.

Select **External Server** to use the Captive Portal with a HotSpot system.

As described in the following knowledgebase article:

<https://forum.peplink.com/t/using-hotspotsystem-wi-fi-on-Peplink-max-routers/>

## Authentication

When selecting the “**User Authentication**” in the Access Mode field, you will see the available option for the Authentication via drop-down list:

- RADIUS Server

|                |                                                                                                                              |
|----------------|------------------------------------------------------------------------------------------------------------------------------|
| Access Mode    | <input type="radio"/> Open Access <input checked="" type="radio"/> User Authentication <input type="radio"/> External Server |
| Authentication | RADIUS Server ▼                                                                                                              |

| RADIUS Settings             |                                                                                                                                                                    |                                                                          |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
|                             | Primary                                                                                                                                                            | Secondary                                                                |
| Authentication Protocol     | PAP ▼                                                                                                                                                              |                                                                          |
|                             | You may click <a href="#">here</a> to define RADIUS Server Authentication profile, or you may go to <a href="#">RADIUS Server</a> page to define multiple profiles |                                                                          |
| Authentication Host         | <input type="text"/>                                                                                                                                               | <input type="text"/>                                                     |
| Authentication Port         | 1812                                                                                                                                                               | 1812                                                                     |
| Authentication Secret       | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters                                                                                           | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters |
|                             | You may click <a href="#">here</a> to define RADIUS Server Accounting profile, or you may go to <a href="#">RADIUS Server</a> page to define multiple profiles     |                                                                          |
| Accounting Host             | <input type="text"/>                                                                                                                                               | <input type="text"/>                                                     |
| Accounting Port             | 1813                                                                                                                                                               | 1813                                                                     |
| Accounting Secret           | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters                                                                                           | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters |
| CoA-DM                      | <input type="checkbox"/>                                                                                                                                           |                                                                          |
| Accounting Interim Interval | ? <input type="text"/>                                                                                                                                             |                                                                          |
| NAS-Identifier              | ? Device Name ▼                                                                                                                                                    |                                                                          |

- LDAP Server

|                |                                                                                                                              |
|----------------|------------------------------------------------------------------------------------------------------------------------------|
| Access Mode    | <input type="radio"/> Open Access <input checked="" type="radio"/> User Authentication <input type="radio"/> External Server |
| Authentication | LDAP Server ▼                                                                                                                |

| LDAP Settings |                                                                                       |
|---------------|---------------------------------------------------------------------------------------|
| LDAP Server   | <input type="text"/> Port <input type="text"/> <input type="button" value="Default"/> |
|               | <input type="checkbox"/> Use DN/Password to bind to LDAP Server                       |
| Base DN       | <input type="text"/>                                                                  |
| Base Filter   | <input type="text"/>                                                                  |

Fill in the necessary information to complete your connection to the server and enable authentication.

## External Server

When selecting the “**External Server**” in the Access Mode field, you will see the available option for the Service Type via drop-down list:

- CoovaChilli

|                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                              | <div> <div> Access Mode <input type="radio"/> Open Access <input type="radio"/> User Authentication <input checked="" type="radio"/> External Server </div> <div> Server Type <span>?</span> CoovaChilli </div> </div> <div> <b>CoovaChilli Settings</b> </div> <div> UAM Secret <input type="text"/> <input checked="" type="checkbox"/> Hide Characters </div> <ul style="list-style-type: none"> <li>HotspotSystem</li> </ul> <div> <div> Access Mode <input type="radio"/> Open Access <input type="radio"/> User Authentication <input checked="" type="radio"/> External Server </div> <div> Server Type <span>?</span> HotspotSystem </div> </div> <div> <b>HotspotSystem Settings</b> </div> <div> Operator Username <input type="text"/> </div> <div> Location ID <input type="text"/> </div> <div> Splash Page Domain <span>?</span> customer.hotspotsystem.com </div> |
|                              | Fill in the necessary information to complete your connection to the server and enable authentication.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Access Quota</b>          | Set a time and data cap to each user's Internet usage.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Quota Reset Time</b>      | This menu determines how your usage quota resets. Setting it to <b>Daily</b> will reset it at a specified time every day. Setting a number of <b>minutes after quota reached</b> establish a timer for each user that begins after the quota has been reached.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Inactive Timeout</b>      | Clients will get disconnected when the inactive the configured time is reached. Default 0: no timeout                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Allowed Networks</b>      | Add networks that can bypass the captive Portal in this field.<br>To whitelist a network, enter the domain name / IP address here and click  . To delete an existing network from the list of allowed networks, click the  button next to the listing.                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Allowed Clients</b>       | Add MAC address and /or IP addresses for client devices that are allowed to bypass the Captive Portal. Clients accessing these domains and IP addresses will not be redirected to the splash page.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Splash Page</b>           | Here, you can choose between using the Peplink router's built-in captive portal and redirecting clients to a URL you define.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Popup Handling</b>        | Configurable options for popup handling:<br>- Bypass Popup (Redirection only takes place on normal browser)<br>- Automatically show splash page on Safari for Apple (iOS / macOS) devices                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Logout Hostname</b>       | A hostname that can be used to logout captive portal when being accessed on browser.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Customize splash page</b> | Click on the provided link in the Captive portal profile to customize the splash page.<br>A new browser tab is opened with a WYSIWYG editor of the splash page<br>o edit the content, click on the corresponding element after switching Edit Mode to ON.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

Captive Portal



# PEPWAVE

☐ Use uploaded Logo Image  
☒ Use default Logo Image  
☐ Choose File No file chosen

NOTE: Size max 512KB. Supported images types: JPEG, PNG and GIF.

EMPTY STRING

☒ I have read and agree to the [terms and conditions](#) ?

You must accept the terms and conditions before you can proceed

Agree

Powered by Pepwave.

Portal Configuration

|                     |                                     |
|---------------------|-------------------------------------|
| Show Quota Status   | <input checked="" type="checkbox"/> |
| Custom Landing Page | <input type="checkbox"/>            |

Page: Login v

Edit mode ON ?

Save

## 8 Configuring the WAN Interface(s)

WAN Interface settings are located at **Network > WAN**. To reorder WAN priority, drag on the appropriate WAN by holding the left mouse button, move it to the desired priority (the first one would be the highest priority, the second one would be lower priority, and so on), and drop it by releasing the mouse button.

**WAN Connection Status**

| Priority 1 (Highest)                       |                        |                 |
|--------------------------------------------|------------------------|-----------------|
| Orbit 1                                    | Connected via Starlink | 192.168.100.25  |
| Orbit 2                                    | Connected              | 10.9.2.235      |
| Orbit 3                                    | Connected via Oneweb   | 192.168.100.26  |
| Orbit 4                                    | No Cable Detected      | (No IP Address) |
| LAN 2                                      | No Cable Detected      | (No IP Address) |
| Priority 2                                 |                        |                 |
| Drag desired (Priority 2) connections here |                        |                 |
| Disabled                                   |                        |                 |
| Wi-Fi WAN on 2.4 GHz                       | Disabled               | (No IP Address) |
| Wi-Fi WAN on 5 GHz                         | Disabled               | (No IP Address) |
| VLAN WAN 1                                 | Disabled               | (No IP Address) |

Click [here](#) to show all disabled as LAN Connections.

**DNS over HTTPS**  
Disabled

**WAN Quality Monitoring**  
Auto

**Synergy Controller**  
Disabled

**Orbit WAN**

|          |         |
|----------|---------|
| Starlink | Orbit 1 |
| OneWeb   | Orbit 3 |

To enable a particular WAN connection, drag on the appropriate WAN by holding the left mouse button, move it to the **Disabled** row, and drop it by releasing the mouse button.

You can also set priorities on the **Dashboard**. Click the **WAN** button in the corresponding row to modify the connection setting.

### Important Note

Connection details will be changed and become effective immediately after clicking the **Save and Apply** button.

## IPv6

IPv6

Disabled

You can also enable IPv6 support in this section.

## DNS over HTTPS (DoH)

DNS over HTTPS

Disabled

You can enable DoH (DNS over HTTPS) support in this section.

DNS over HTTPS

Enable

?

☒

Server

Cloudflare

Cloudflare

Quad9

Google DNS

OpenDNS

Custom URL:

Save

 
Cancel

| DNS over HTTPS |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>  | When this option is enabled, the DNS proxy server will use HTTPS connections to forward DNS requests to the DoH resolver; it will not fallback to traditional UDP DNS options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Server</b>  | <p>The options to configure DoH with a predefined server are:</p> <ul style="list-style-type: none"> <li>Cloudflare - The DNS server IP addresses for <b>Cloudflare</b> will be using 1.1.1.1, which is unfiltered.</li> <li>Quad9 - The DNS server IP addresses for <b>Quad9</b> will be using 9.9.9.9 and 142.112.112.112, which is malware blocking and DNSSEC.</li> <li>Google DNS - The DNS server IP addresses for <b>Google DNS</b> will be using 8.8.8.8 and 8.8.4.4, which is RFC8484 standard.</li> <li>OpenDNS - The DNS server IP addresses for <b>OpenDNS</b> will be using 208.67.222.222 and 208.67.220.220, which is standard DNS.</li> <li>Custom URL - You may select <b>Custom URL:</b>, and enter the <b>resolver URL</b> and <b>IP address</b>.</li> </ul> |



## WAN Quality Monitoring


This settings advice how WAN Quality information is being gathered.




By default, WAN Quality will always be observed and gathered automatically. With customized choice of WAN connections, the device will always observe WAN Quality of those selected WAN connections. Other WAN connections may stop observing WAN Quality information if it is not necessary for the underlying features.

## Synergy Mode

 You can enable the Synergy Controller in this section.



You may click this  to enable the Synergy Controller. By default, the setting is disabled.

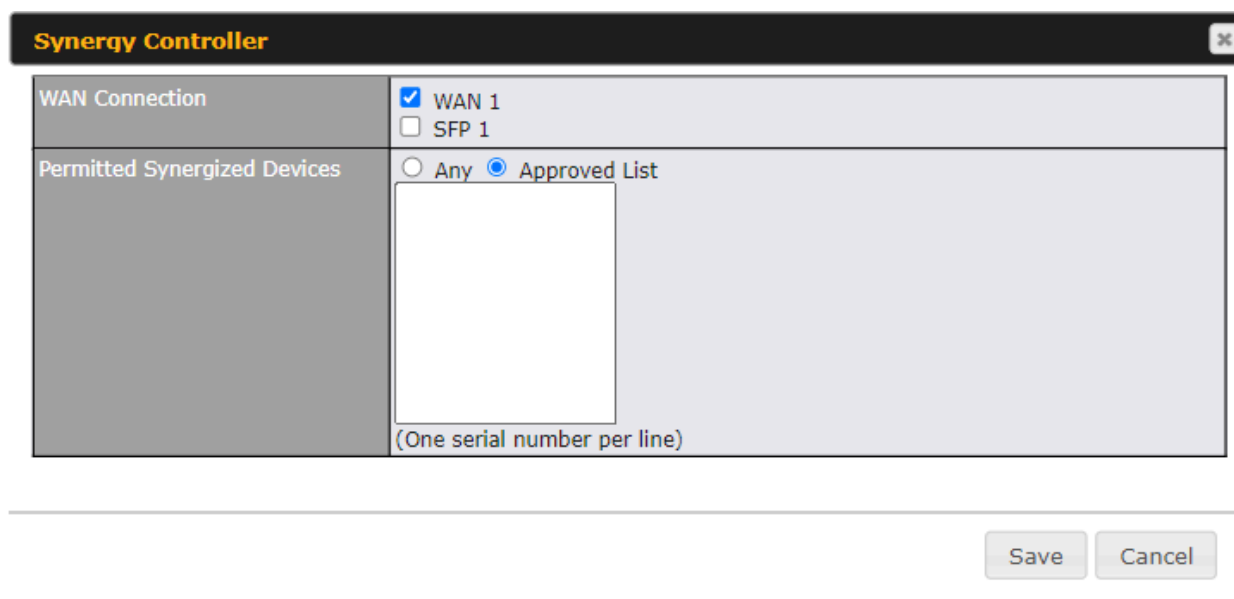

|                                                                           |                                                                                                                                                                                   |
|---------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Synergy Controller</b>                                                 |                                                                                                                                                                                   |
| WAN Connection                                                            | <input checked="" type="checkbox"/> WAN 1<br><input type="checkbox"/> SFP 1                                                                                                       |
| Permitted Synergized Devices                                              | <input type="radio"/> Any <input checked="" type="radio"/> Approved List<br><div style="border: 1px solid black; height: 100px; width: 100%;"></div> (One serial number per line) |
| <input type="button" value="Save"/> <input type="button" value="Cancel"/> |                                                                                                                                                                                   |

You may select the WAN connection to use as a Synergy Link which will connect to synergized devices.

## Orbit WAN

The option is to enable Starlink / OneWeb management on the selected WAN connection.

| Orbit WAN |                    |                                                                                     |
|-----------|--------------------|-------------------------------------------------------------------------------------|
| Starlink  | Orbit 1<br>Orbit 3 |  |
| OneWeb    | Disabled           |                                                                                     |

You may click this  to show the WAN connection list to select which WAN connection to enable the management.

Orbit WAN

Starlink

WAN Connection

Clear

All

☒ Orbit 1  
☐ Orbit 2  
☒ Orbit 3  
☐ Orbit 4  
☐ LAN 1  
☐ LAN 2  
☐ USB  
☐ Wi-Fi WAN on 2.4 GHz  
☐ Wi-Fi WAN on 5 GHz  
☐ VLAN WAN 1

Ignore Outages



☐

OneWeb

WAN Connection

Clear

All

☐ Orbit 1  
☐ Orbit 2  
☐ Orbit 3  
☐ Orbit 4  
☐ LAN 1  
☐ LAN 2  
☐ USB  
☐ Wi-Fi WAN on 2.4 GHz  
☐ Wi-Fi WAN on 5 GHz  
☐ VLAN WAN 1

| Starlink                       |                                                                                                                                              |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>WAN connection</b>          | WAN option to enable Starlink management.                                                                                                    |
| <b>Ignore Starlink Outages</b> | Enable the device to ignore all outages (e.g., obstructed, no downlink, no pings).<br>The WAN will only go down when its health check fails. |
| OneWeb                         |                                                                                                                                              |
| <b>WAN connection</b>          | WAN option to enable OneWeb management.                                                                                                      |

<https://www.peplink.com>

54

Copyright @ 2026 Peplink

## 8.1 Orbit WAN / Ethernet WAN

There are four possible connection methods for the Ethernet WAN connection:

1. DHCP
2. Static IP
3. PPPoE
4. L2TP
5. GRE

### 8.1.1 DHCP Connection

The DHCP connection method is suitable if the ISP provides an IP address automatically using DHCP (e.g., satellite modem, WiMAX modem, cable, Metro Ethernet, etc.).

| WAN Connection Settings      |                                                                                                                                                                                                                              |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WAN Connection Name          | <input type="text" value="WAN"/>                                                                                                                                                                                             |
| Enable                       | <input checked="" type="checkbox"/>                                                                                                                                                                                          |
| Connection Priority          | <input checked="" type="radio"/> Always-on (Priority 1) <input type="radio"/> Backup                                                                                                                                         |
| Independent from Backup WANs | <input type="checkbox"/>                                                                                                                                                                                                     |
| Connection Method            | <input type="text" value="DHCP"/>                                                                                                                                                                                            |
| Routing Mode                 | <input checked="" type="radio"/> NAT <input type="radio"/> IP Forwarding                                                                                                                                                     |
| Management IP Address        | <input type="text" value="255.255.255.0"/> (/24)                                                                                                                                                                             |
| Custom Hostname              | <input type="checkbox"/>                                                                                                                                                                                                     |
| DNS Servers                  | <input checked="" type="checkbox"/> Obtain DNS server address automatically<br><input type="checkbox"/> Use the following DNS server address(es)<br>DNS Server 1: <input type="text"/><br>DNS Server 2: <input type="text"/> |
| IP Passthrough               | <input type="checkbox"/>                                                                                                                                                                                                     |
| Standby State                | <input checked="" type="radio"/> Remain connected <input type="radio"/> Disconnect                                                                                                                                           |
| Reply to ICMP Ping           | <input checked="" type="radio"/> Yes <input type="radio"/> No                                                                                                                                                                |
| Upload Bandwidth             | <input type="text" value="1"/> Gbps                                                                                                                                                                                          |
| Download Bandwidth           | <input type="text" value="1"/> Gbps                                                                                                                                                                                          |

| DHCP Connection Settings   |                                                                          |
|----------------------------|--------------------------------------------------------------------------|
| <b>WAN Connection Name</b> | Enter a name to represent this WAN connection.                           |
| <b>Enable</b>              | This setting enables the WAN connection. If schedules have been defined, |

|                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                     | you will be able to select a schedule to apply to the connection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Connection Priority</b>          | <p>This option allows you to configure the WAN connection whether for normal daily usage or as a backup connection only.</p> <p>If <b>Always-on</b> is chosen, the WAN connection will be kept on continuously, regardless of the priority of other WAN connections.</p> <p>If <b>Backup</b> is chosen, the WAN connection will depend on other WAN connections. It will not be used when one or more higher priority dependent WAN connections are connected.</p>                                                                                                                                                                                                                          |
| <b>Independent from Backup WANs</b> | If this is checked, the connection will be working independent from other Backup WAN connections. Those in <b>Backup Priority</b> will ignore the status of this WAN connection, and will be used when none of the other higher priority connections are available.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Routing Mode</b>                 | NAT allows substituting the real address in a packet with a mapped address that is routable on the destination network. By clicking the help  icon in this field, you can display the <b>IP Forwarding</b> option, if your network requires it.                                                                                                                                                                                                                                                                                                                                                          |
| <b>Management IP Address</b>        | <p><b>Management IP Address</b> is available for configuration when you click <a href="#">here</a> for other DHCP settings.</p> <p>This option allows you to configure the management IP address for the DHCP WAN connection.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Custom Hostname</b>              | If your service provider's DHCP server requires you to supply a hostname value upon acquiring an IP address, you may enter the value here. If your service provider does not provide you with the value, you can safely bypass this option.                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>DNS Servers</b>                  | <p>Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection.</p> <p>Selecting <b>Obtain DNS server address automatically</b> results in the DNS servers being assigned by the WAN DHCP server to be used for outbound DNS lookups over the connection. (The DNS servers are obtained along with the WAN IP address assigned from the DHCP server.)</p> <p>When <b>Use the following DNS server address(es)</b> is selected, you may enter custom DNS server addresses for this WAN connection into the <b>DNS Server 1</b> and <b>DNS Server 2</b> fields.</p> |

|                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>IP Passthrough</b>     | <p>When this <b>IP Passthrough</b> option is active, after the ethernet WAN connection is up, the router's DHCP server will offer the connection's IP address to one LAN client. All incoming or outgoing traffic will be routed without NAT.</p> <p>Regardless the WAN connection's state, the router always binds to the LAN IP address (Default: 192.168.50.1). So when the ethernet WAN is connected, the LAN client could access the router's web admin by manually configuring its IP address to the same subnet as the router's LAN IP address (e.g. 192.168.50.10).</p> <p>Note: when this option is firstly enabled, the LAN client may not be able to refresh its IP address to the ethernet WAN IP address in a timely fashion. The LAN client may have to manually renew its IP address from DHCP server. After this option is enabled, the DHCP lease time will be 2 minutes. I.e. the LAN client could refresh its IP address and access the network at most one minute after the ethernet WAN connection goes up.</p> |
| <b>Standby State</b>      | <p>This option allows you to choose whether to remain connected when this WAN connection is no longer in the highest priority and has entered the standby state. When <b>Remain connected</b> is chosen, upon bringing up this WAN connection to active, it will be immediately available for use.</p> <p>If this WAN connection is charged by connection time, you may want to set this option to <b>Disconnect</b> so that connection will be made only when needed.</p> <p>SpeedFusion VPN may use connected standby WAN for failover if link failure detected on the higher priority WAN, you can set this option to Disconnect to avoid data passing through.</p>                                                                                                                                                                                                                                                                                                                                                               |
| <b>Reply to ICMP PING</b> | <p>If the checkbox is <b>unticked</b>, this option is disabled and the system will not reply to any ICMP ping echo requests to the WAN IP addresses of this WAN connection.</p> <p>Default: <b>ticked</b> (Yes)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Upload Bandwidth</b>   | <p>This field refers to the maximum upload speed.</p> <p>This value is referenced when default weight is chosen for outbound traffic and traffic prioritization. A correct value can result in effective traffic prioritization and efficient use of upstream bandwidth.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Download Bandwidth</b> | <p>This field refers to the maximum download speed.</p> <p>Default weight control for outbound traffic will be adjusted according to this value.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## 8.1.2 Static IP Connection

The Static IP connection method is suitable if your ISP provides a static IP address to connect directly.

|                   |                                                                                                                                                            |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connection Method |  Static IP ▼                                                              |
| Routing Mode      |  <input checked="" type="radio"/> NAT <input type="radio"/> IP Forwarding |
| IP Address        |  <input type="text"/>                                                     |
| Subnet Mask       | 255.255.255.0 (/24) ▼                                                                                                                                      |
| Default Gateway   | <input type="text"/>                                                                                                                                       |
| DNS Servers       | <input checked="" type="checkbox"/> Use the following DNS server address(es)<br>DNS Server 1: <input type="text"/><br>DNS Server 2: <input type="text"/>   |

| Static IP Settings                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Routing Mode</b>                               | NAT allows substituting the real address in a packet with a mapped address that is routable on the destination network. By clicking the help icon in this field, you can display the <b>IP Forwarding</b> option, if your network requires it.                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>IP Address / Subnet Mask / Default Gateway</b> | These settings allow you to specify the information required in order to communicate on the Internet via a fixed Internet IP address. The information is typically determined by and can be obtained from the ISP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>DNS Servers</b>                                | <p>Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection.</p> <p>Selecting <b>Obtain DNS server address automatically</b> results in the DNS servers being assigned by the WAN DHCP server to be used for outbound DNS lookups over the connection. (The DNS servers are obtained along with the WAN IP address assigned from the DHCP server.</p> <p>When <b>Use the following DNS server address(es)</b> is selected, you may enter custom DNS server addresses for this WAN connection into the <b>DNS Server 1</b> and <b>DNS Server 2</b> fields.</p> |

### 8.1.3 PPPoE Connection

The PPPoE connection method is suitable if your ISP provides a login ID/password to connect via PPPoE.

|                         |                                                                                                                                                                                                                              |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connection Method       |  PPPoE ▼                                                                                                                                    |
| Routing Mode            |  <input checked="" type="radio"/> NAT <input type="radio"/> IP Forwarding                                                                   |
| PPPoE User Name         | <input type="text"/>                                                                                                                                                                                                         |
| PPPoE Password          | <input type="password"/>                                                                                                                                                                                                     |
| Confirm PPPoE Password  | <input type="password"/>                                                                                                                                                                                                     |
| Service Name (Optional) | <input type="text"/><br>Leave it blank unless it is provided by ISP                                                                                                                                                          |
| IP Address (Optional)   |  <input type="text"/><br>Leave it blank unless it is provided by ISP                                                                        |
| Keep-Alive Interval     |  <input type="text" value="6"/> seconds(s)                                                                                                  |
| Keep-Alive Retry        |  <input type="text" value="6"/>                                                                                                             |
| DNS Servers             | <input checked="" type="checkbox"/> Obtain DNS server address automatically<br><input type="checkbox"/> Use the following DNS server address(es)<br>DNS Server 1: <input type="text"/><br>DNS Server 2: <input type="text"/> |

| PPPoE Settings                   |                                                                                                                                                                                                                                                |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Routing Mode</b>              | NAT allows substituting the real address in a packet with a mapped address that is routable on the destination network. By clicking the help icon in this field, you can display the <b>IP Forwarding</b> option, if your network requires it. |
| <b>PPPoE Username / Password</b> | Enter the required information in these fields in order to connect via PPPoE to the ISP. The parameter values are determined by and can be obtained from the ISP.                                                                              |
| <b>Confirm PPPoE Password</b>    | Verify your password by entering it again in this field.                                                                                                                                                                                       |
| <b>Service Name (Optional)</b>   | Service name is provided by the ISP.<br><b>Note: Leave this field blank unless it is provided by your ISP.</b>                                                                                                                                 |
| <b>IP Address (Optional)</b>     | If your ISP provides a PPPoE IP address, enter it here.<br><b>Note: Leave this field blank unless it is provided by your ISP.</b>                                                                                                              |
| <b>Keep Alive Interval</b>       | This is the time interval between each Keep-Alive packet.                                                                                                                                                                                      |
| <b>Keep-Alive Retry</b>          | This is the number of consecutive Keep-Alive check failures before treating PPPoE connection as down.                                                                                                                                          |
| <b>DNS Servers</b>               | Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection.                                                         |

Selecting **Obtain DNS server address automatically** results in the DNS servers being assigned by the WAN DHCP server to be used for outbound DNS lookups over the connection. (The DNS servers are obtained along with the WAN IP address assigned from the DHCP server.)

When **Use the following DNS server address(es)** is selected, you may enter custom DNS server addresses for this WAN connection into the **DNS Server 1** and **DNS Server 2** fields.

### 8.1.4 L2TP Connection

L2TP has all the compatibility and convenience of PPTP with greater security. Combine this with IPsec for a good balance between ease of use and security.

|                          |                                                                                                                                                                                                                              |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connection Method        |  L2TP                                                                                                                                       |
| Routing Mode             |  <input checked="" type="radio"/> NAT <input type="radio"/> IP Forwarding                                                                   |
| L2TP User Name           | <input type="text"/>                                                                                                                                                                                                         |
| L2TP Password            | <input type="password"/>                                                                                                                                                                                                     |
| Confirm L2TP Password    | <input type="password"/>                                                                                                                                                                                                     |
| Server IP Address / Host | <input type="text"/>                                                                                                                                                                                                         |
| Address Type             | <input checked="" type="radio"/> Dynamic IP <input type="radio"/> Static IP                                                                                                                                                  |
| DNS Servers              | <input checked="" type="checkbox"/> Obtain DNS server address automatically<br><input type="checkbox"/> Use the following DNS server address(es)<br>DNS Server 1: <input type="text"/><br>DNS Server 2: <input type="text"/> |

### L2TP Settings

|                                 |                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Routing Mode</b>             | NAT allows substituting the real address in a packet with a mapped address that is routable on the destination network. By clicking the help icon in this field, you can display the <b>IP Forwarding</b> option, if your network requires it. |
| <b>L2TP Username / Password</b> | Enter the required information in these fields in order to connect via L2TP to your ISP.<br>The parameter values are determined by and can be obtained from your ISP.                                                                          |
| <b>Confirm L2TP Password</b>    | Verify your password by entering it again in this field.                                                                                                                                                                                       |
| <b>Server IP Address / Host</b> | L2TP server address is a parameter which is provided by your ISP.<br><b>Note: Leave this field blank unless it is provided by your ISP.</b>                                                                                                    |
| <b>Address Type</b>             | Your ISP will also indicate whether the server IP address is Dynamic or Static. Please click the appropriate value.                                                                                                                            |



## DNS Servers

Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection.

Selecting **Obtain DNS server address automatically** results in the DNS servers assigned by the PPPoE server to be used for outbound DNS lookups over the WAN connection.

(The DNS servers are obtained along with the WAN IP address assigned from the PPPoE server.)

When **Use the following DNS server address(es)** is selected, you can enter custom DNS server addresses for this WAN connection into the **DNS server 1** and **DNS server 2** fields.

## 8.1.5 GRE Connection

This connection method is suitable if your ISP provides a static WAN IP and Tunnel IP via GRE.

|                          |                                                                                                                                                             |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connection Method        |  GRE                                                                       |
| Routing Mode             |  <input checked="" type="radio"/> NAT <input type="radio"/> IP Forwarding |
| WAN IP Address           | <input type="text"/>                                                                                                                                        |
| WAN Subnet Mask          | 255.255.255.0 (/24)                                                      |
| WAN Default Gateway      | <input type="text"/>                                                                                                                                        |
| Remote GRE Host          | <input type="text"/>                                                                                                                                        |
| Tunnel Local IP Address  | <input type="text"/>                                                                                                                                        |
| Tunnel Remote IP Address | <input type="text"/>                                                                                                                                        |
| Outgoing NAT IP Address  | <input type="text"/>                                                                                                                                        |
| DNS Servers              | <input checked="" type="checkbox"/> Use the following DNS server address(es)<br>DNS Server 1: <input type="text"/><br>DNS Server 2: <input type="text"/>    |

## GRE Settings

### Routing Mode

NAT allows substituting the real address in a packet with a mapped address that is routable on the destination network. By clicking the help icon in this field, you can display the **IP Forwarding** option, if your network requires it.

### WAN IP Address / Subnet Mask / Default Gateway

These settings allow you to specify the information required in order to communicate on the Internet via a fixed Internet IP address. The information is typically determined by and can be obtained from the ISP.

### Remote GRE Host

This field allows you to enter the IP address of the remote GRE.

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Tunnel Local IP Address</b>  | This field allows you to enter the IP address of the local tunnel for the GRE tunnel connection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Tunnel Remote IP Address</b> | This field allows you to enter the IP address of the remote tunnel for the GRE tunnel connection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Outgoing NAT IP Address</b>  | This field is to enter the NAT IP address for outgoing via GRE tunnel.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>DNS Servers</b>              | <p>Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection.</p> <p>Selecting <b>Obtain DNS server address automatically</b> results in the DNS servers assigned by the PPPoE server to be used for outbound DNS lookups over the WAN connection.<br/>(The DNS servers are obtained along with the WAN IP address assigned from the PPPoE server.)</p> <p>When <b>Use the following DNS server address(es)</b> is selected, you can enter custom DNS server addresses for this WAN connection into the <b>DNS server 1</b> and <b>DNS server 2</b> fields.</p> |

## 8.2 Wi-Fi WAN

|                                                                                                                                                                                              |                                                                                                                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Disabled                                                                                                                                                                                     |                                                                                                                                       |
| ⋮  Cellular                                                                                                 | <input type="checkbox"/> Disabled (No IP Address)                                                                                     |
| ⋮  1 Wi-Fi WAN on 2.4 GHz  | <input type="checkbox"/> Disabled (No IP Address)  |
| ⋮  2 Wi-Fi WAN on 5 GHz                                                                                     | <input type="checkbox"/> Disabled (No IP Address)  |

To access/configure the Wi-Fi WAN settings, click **Network > Wi-Fi WAN Connection Name**.

| WAN Connection Settings                                                                                        |                                                                                       |
|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| WAN Connection Name                                                                                            | Wi-Fi WAN on 2.4 GHz                                                                  |
| Enable                                                                                                         | <input checked="" type="checkbox"/>                                                   |
| Connection Priority                                                                                            | <input checked="" type="radio"/> Always-on (Priority 1) <input type="radio"/> Backup  |
| Independent from Backup WANs  | <input type="checkbox"/>                                                              |
| Routing Mode                 | <input checked="" type="radio"/> NAT <input type="radio"/> IP Forwarding              |
| Standby State               | <input checked="" type="radio"/> Remain connected<br><input type="radio"/> Disconnect |
| Reply to ICMP Ping          | <input checked="" type="radio"/> Yes <input type="radio"/> No                         |

| WAN Connection Settings             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>WAN Connection Name</b>          | Enter a name to represent this Wi-Fi WAN connection.                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Enable</b>                       | Click the checkbox to toggle the on and off state of this connection.                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Connection Priority</b>          | <p>This option allows you to configure the WAN connection whether for normal daily usage or as a backup connection only.</p> <p>If <b>Always-on</b> is chosen, the WAN connection will be kept on continuously, regardless of the priority of other WAN connections.</p> <p>If <b>Backup</b> is chosen, the WAN connection will depend on other WAN connections. It will not be used when one or more higher priority dependent WAN connections are connected.</p> |
| <b>Independent from Backup WANs</b> | If this is checked, the connection will be working independent from other Backup WAN connections. Those in Backup Priority will ignore the status of this WAN connection, and will be used when none of the other higher priority connections are available.                                                                                                                                                                                                       |

|                           |                                                                                                                                                                                                                                                                                                                    |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Routing Mode</b>       | <p>This option allows you to select the routing method to be used in routing IP frames via the WAN connection. The mode can be either NAT (Network Address Translation) or IP Forwarding.</p> <p>In the case if you need to choose IP Forwarding for your scenario. Click the  button to enable IP Forwarding.</p> |
| <b>Standby State</b>      | <p>This setting specifies the state of the WAN connection while in standby. The available options are <b>Remain Connected</b> and <b>Disconnect</b>.</p>                                                                                                                                                           |
| <b>Reply to ICMP PING</b> | <p>If this setting is disabled, the WAN connection will not respond to ICMP ping requests. By default, this setting is enabled.</p>                                                                                                                                                                                |

**Wi-Fi WAN Settings**


|                             |                                                                    |
|-----------------------------|--------------------------------------------------------------------|
| Channel Width               | Auto                                                               |
| Channel                     | <input checked="" type="radio"/> Auto <input type="radio"/> Custom |
| Output Power                | Max <input type="checkbox"/> Boost                                 |
| Data Rate                   | <input checked="" type="radio"/> Auto <input type="radio"/> Fixed  |
| Roaming                     | <input type="checkbox"/> Enable                                    |
| Connect to Any Open Mode AP | <input type="radio"/> Yes <input checked="" type="radio"/> No      |
| Beacon Miss Counter         | 5                                                                  |
| Channel Scan Interval       | 50 ms                                                              |

| Wi-Fi WAN Settings   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Channel Width</b> | <p>Select the channel width for this Wi-Fi WAN. 20MHz will have greater support for older devices using 2.4Ghz, while 40MHz is appropriate for networks with newer devices that connect using 5Ghz</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Channel</b>       | <p>Determine whether the channel will be automatically selected. If you select custom, the following table will appear:</p> <div> <div>Scan Channels</div> <div> <div>Clear All</div> <div>           2.4GHz:<br/> <input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 3 <input checked="" type="checkbox"/> 4 <input checked="" type="checkbox"/> 5<br/> <input checked="" type="checkbox"/> 6 <input checked="" type="checkbox"/> 7 <input checked="" type="checkbox"/> 8 <input checked="" type="checkbox"/> 9 <input checked="" type="checkbox"/> 10<br/> <input checked="" type="checkbox"/> 11         </div> </div> <div>OK Cancel</div> </div> |
| <b>Output Power</b>  | <p>If you are setting up a network with many Wi-Fi devices in close proximity, then you can configure the output power here. Click the “boost” button for additional power. However, with that option ticked, output power may exceed local regulatory limits.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

|                                    |                                                                                                                                                                          |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Data Rate</b>                   | Selecting Auto will enable the router to automatically determine the best data rate, while manually selecting a rate will force devices to connect using the fixed rate. |
| <b>Roaming</b>                     | Checking this box will enable Wi-Fi roaming. Click the  icon for additional options.  |
| <b>Connect to Any Open Mode AP</b> | This option is to specify whether the Wi-Fi WAN will connect to any open mode access points it finds.                                                                    |
| <b>Beacon Miss Counter</b>         | This sets the threshold for the number of missed beacons.                                                                                                                |
| <b>Channel Scan Interval</b>       | Configure Channel Scan Interval in ms.                                                                                                                                   |

### 8.2.1 Creating Wi-Fi Connection Profiles

You can manually create a profile to connect to a Wi-Fi connection. This is useful for creating a profile for connecting to hidden-SSID access points. Click **Network > Wi-Fi WAN > Create Profile...** to get started.

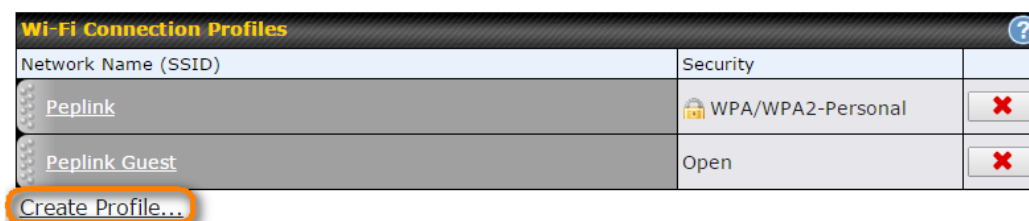

This will open a window similar to the one shown below

Create Wi-Fi Connection Profile

Wi-Fi Connection

|                     |                                                                                                                                                                                                                              |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Network Name (SSID) | <input type="text"/>                                                                                                                                                                                                         |
| Security            | WPA2/WPA3-Personal                                                                                                                                                                                                           |
| Shared Key          | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters                                                                                                                                                     |
| Preferred BSSID     | <input type="checkbox"/>                                                                                                                                                                                                     |
| Connection Method   | <input type="button" value="?"/> DHCP                                                                                                                                                                                        |
|                     | Click <a href="#">here</a> for other DHCP settings                                                                                                                                                                           |
| DNS Servers         | <input checked="" type="checkbox"/> Obtain DNS server address automatically<br><input type="checkbox"/> Use the following DNS server address(es)<br>DNS Server 1: <input type="text"/><br>DNS Server 2: <input type="text"/> |

OK

Cancel

| Wi-Fi Connection Profile Settings |                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Network Name (SSID)               | Enter a name to represent this Wi-Fi connection.                                                                                                                                                                                                                                                                                                                                      |
| Security                          | This option allows you to select which security policy is used for this wireless network. Available options: <ul style="list-style-type: none"> <li>• Open</li> <li>• WEP</li> <li>• Enhanced Open (OWE)</li> <li>• WPA3 -Personal</li> <li>• WPA2/WPA3 -Personal</li> <li>• WPA/ WPA2 – Personal</li> <li>• WPA/ WPA2 – ENTERprise</li> <li>• 802.1X with dynamic WEP key</li> </ul> |
| Shared Key                        | Enter the password for the wireless network.                                                                                                                                                                                                                                                                                                                                          |
| Preferred BSSID                   | Configure the BSSID. The BSSID is the MAC address of the wireless access point (WAP).                                                                                                                                                                                                                                                                                                 |
| Connected Method                  | Choose DHCP or Static IP for the Wi-Fi WAN connection method.                                                                                                                                                                                                                                                                                                                         |
| DNS Servers                       | Configure the DNS servers that this WAN connection should use.                                                                                                                                                                                                                                                                                                                        |

## 8.3 OpenVPN WAN

OpenVPN WAN is a standalone “WAN” which will appear in both your router and your InControl2 dashboards. You will be able to configure the priority of the physical WANs to connect to the OpenVPN server (similar to IPsec’s “WAN Connection Priority”). You can also customize OpenVPN’s outbound policy, firewall, etc.

\* OpenVPN WAN license is required. Click on the below link for more details.

<https://forum.peplink.com/t/introducing-the-openvpn-wan-license-partner-discussion/30291>

**WAN Connection Settings**
✕

| WAN Connection Settings     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WAN Connection Name         | OpenVPN WAN 1                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Enable                      | <input type="checkbox"/>                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Connection Method           | <span style="color: #007bff;">?</span> OpenVPN ▼                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Routing Mode                | <span style="color: #007bff;">?</span> <input checked="" type="radio"/> NAT                                                                                                                                                                                                                                                                                                                                                                                      |
| OpenVPN Profile             | <span style="color: #007bff;">?</span> <div style="border: 1px dashed #ccc; padding: 20px; text-align: center; margin-top: 10px;"> <p><b>Choose a file</b> or drag it here</p> </div>                                                                                                                                                                                                                                                                            |
| Login Credential (Optional) | Username: <input style="width: 150px;" type="text"/><br>Password: <input style="width: 150px;" type="password"/><br><input checked="" type="checkbox"/> Hide Characters                                                                                                                                                                                                                                                                                          |
| DNS Servers                 | <input checked="" type="checkbox"/> Obtain DNS server address automatically<br><input type="checkbox"/> Use the following DNS server address(es)<br>DNS Server 1: <input style="width: 100px;" type="text"/><br>DNS Server 2: <input style="width: 100px;" type="text"/><br><small>Click <a href="#">here</a> to set this WAN's DNS servers as Preferred DNS resolvers for DNS leak protection. You can unset this setting in LAN Network Settings page.</small> |
| Standby State               | <span style="color: #007bff;">?</span> <input type="radio"/> Remain connected<br><input checked="" type="radio"/> Disconnect                                                                                                                                                                                                                                                                                                                                     |
| Reply to ICMP Ping          | <span style="color: #007bff;">?</span> <input checked="" type="radio"/> Yes <input type="radio"/> No                                                                                                                                                                                                                                                                                                                                                             |
| Upload Bandwidth            | <span style="color: #007bff;">?</span> <input style="width: 50px;" type="text" value="1"/> Gbps ▼                                                                                                                                                                                                                                                                                                                                                                |
| Download Bandwidth          | <span style="color: #007bff;">?</span> <input style="width: 50px;" type="text" value="1"/> Gbps ▼                                                                                                                                                                                                                                                                                                                                                                |

## WAN Connection Settings

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>WAN Connection Name</b>         | Enter a name to represent this WAN connection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Enable</b>                      | This setting enables the WAN connection. If schedules have been defined, you will be able to select a schedule to apply to the connection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Connection Method</b>           | OpenVPN.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Routing Mode</b>                | This field shows that <b>NAT</b> (network address translation) will be applied to the traffic routed over this WAN connection. <b>IP Forwarding</b> is available when you click the link in the help  icon.                                                                                                                                                                                                                                                                                                                                                 |
| <b>OpenVPN Profile</b>             | Upload the OpenVPN profile (.ovpn) from the OpenVPN server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Login Credential (Optional)</b> | This field is optional to key in the respective username and password to connect to OpenVPN server if needed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>DNS Servers</b>                 | <p>Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection.</p> <p>Selecting Obtain DNS server address automatically results in the DNS servers assigned by the WAN DHCP server being used for outbound DNS lookups over the connection. (The DNS servers are obtained along with the WAN IP address assigned by the DHCP server.) When the following DNS server address(es) is selected, you may enter custom DNS server addresses for this WAN connection into the DNS server 1 and DNS server 2 fields.</p> |



|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Connection Priority</b> | <p>This option allows you to configure the WAN connection whether for normal daily usage or as a backup connection only.</p> <p>If <b>Always-on</b> is chosen, the WAN connection will be kept on continuously, regardless of the priority of other WAN connections.</p> <p>If <b>Backup</b> is chosen, the WAN connection will depend on other WAN connections. It will not be used when one or more higher priority dependent WAN connections are connected.</p>                                                                                                                                                                                              |
| <b>Standby State</b>       | <p>This option allows you to choose whether to remain connected when this WAN connection is no longer in the highest priority and has entered the standby state. When <b>Remain connected</b> is chosen, upon bringing up this WAN connection to active, it will be immediately available for use.</p> <p>If this WAN connection is charged by connection time, you may want to set this option to <b>Disconnect</b> so that connection will be made only when needed. SpeedFusion VPN may use connected standby WAN for failover if link failure detected on the higher priority WAN, you can set this option to Disconnect to avoid data passing through.</p> |
| <b>Reply to ICMP PING</b>  | <p>If the checkbox is <b>unticked</b>, this option is disabled and the system will not reply to any ICMP ping echo requests to the WAN IP addresses of this WAN connection.</p> <p>Default: <b>ticked</b> (Yes)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Upload Bandwidth</b>    | <p>This field refers to the maximum upload speed.</p> <p>This value is referenced when default weight is chosen for outbound traffic and traffic prioritization. A correct value can result in effective traffic prioritization and efficient use of upstream bandwidth.</p>                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Download Bandwidth</b>  | <p>This field refers to the maximum download speed.</p> <p>Default weight control for outbound traffic will be adjusted according to this value.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## Physical Interface Settings (OpenVPN)

| Physical Interface Settings |                                                                                                                                                                                                                                                                           |          |               |   |                            |   |       |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|---------------|---|----------------------------|---|-------|
| MTU                         | <input type="radio"/> Auto <input checked="" type="radio"/> Custom <input type="text" value="1440"/>                                                                                                                                                                      |          |               |   |                            |   |       |
| Uplink Connection Priority  | <table border="1"> <thead> <tr> <th>Priority</th> <th>WAN Selection</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>WAN1-Maxis-30M-BF008867851</td> </tr> <tr> <td>2</td> <td>-----</td> </tr> </tbody> </table> <input type="checkbox"/> Failback on Connection Recovery | Priority | WAN Selection | 1 | WAN1-Maxis-30M-BF008867851 | 2 | ----- |
| Priority                    | WAN Selection                                                                                                                                                                                                                                                             |          |               |   |                            |   |       |
| 1                           | WAN1-Maxis-30M-BF008867851                                                                                                                                                                                                                                                |          |               |   |                            |   |       |
| 2                           | -----                                                                                                                                                                                                                                                                     |          |               |   |                            |   |       |

### MTU

This field is for specifying the Maximum Transmission Unit value of the WAN connection. An excessive MTU value can cause file downloads stall shortly after connected. You may consult your ISP for the connection's MTU value. Default value is 1440.

### Uplink Connection Priority

Specify the order of WAN connections to be used to establish this OpenVPN connection. The healthy WAN with highest priority will be used.

When Failback on Connection Recovery is enabled, once a higher priority WAN is recovered, OpenVPN connection will be disconnected and use that WAN to establish the connection again.

## 8.4 Physical Interface Settings (Common)

The remaining WAN-related settings are common to the WAN connection:

| Physical Interface Settings |                                                                                                                      |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------|
| Port Speed                  | <input type="text" value="Auto"/>                                                                                    |
| MTU                         | <input type="radio"/> Auto <input checked="" type="radio"/> Custom <input type="text" value="1440"/>                 |
| MSS                         | <input checked="" type="radio"/> Auto <input type="radio"/> Custom                                                   |
| MAC Address Clone           | <input checked="" type="radio"/> Default <input type="radio"/> Custom <input type="text" value="10:56:CA:15:92:5D"/> |
| VLAN                        | <input type="checkbox"/>                                                                                             |

### Physical Interface Settings

#### Speed

This is the port speed of the WAN connection. It should be set to the same speed as the connected device in case of any port negotiation problems.

When a static speed is set, you may choose whether to advertise its speed to the

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                          | <p>peer device or not. Advertise Speed is selected by default. You can choose not to advertise the port speed if the port has difficulty in negotiating with the peer device.</p> <p>Default: Auto</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>MTU</b>               | <p>This field is for specifying the Maximum Transmission Unit value of the WAN connection. An excessive MTU value can cause file downloads stall shortly after connected. You may consult your ISP for the connection's MTU value. Default value is 1440.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>MSS</b>               | <p>This field is for specifying the Maximum Segment Size of the WAN connection.</p> <p>When Auto is selected, MSS will be depended on the MTU value. When Custom is selected, you may enter a value for MSS. This value will be announced to remote TCP servers for maximum data that it can receive during the establishment of TCP connections.</p> <p>Some Internet servers are unable to listen to MTU setting if ICMP is filtered by firewall between the connections.</p> <p>Normally, MSS equals to MTU minus 40. You are recommended to reduce the MSS only if changing of the MTU value cannot effectively inform some remote servers to size down data size.</p> <p>Default: Auto</p> |
| <b>MAC Address Clone</b> | <p>Some service providers (e.g. cable network) identify the client's MAC address and require client to always use the same MAC address to connect to the network. If it is the case, you may change the WAN interface's MAC address to the client PC's one by entering the PC's MAC address to this field. If you are not sure, click the Default button to restore to the default value.</p>                                                                                                                                                                                                                                                                                                   |
| <b>VLAN</b>              | <p>Check the box to assign a VLAN to the interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## 8.5 WAN Health Check

To ensure traffic is routed to healthy WAN connections only, the Peplink router can periodically check the health of each WAN connection. The health check settings for each WAN connection can be independently configured via **Network > WAN Connection Name**

| Health Check Settings |                                                                                                                                                                                                                                                                                                                                                |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Method</b>         | <p>This setting specifies the health check method for the WAN connection. This value can be configured as <b>Disabled</b>, <b>PING</b>, <b>DNS Lookup</b>, or <b>HTTP</b>. The default method is <b>DNS Lookup</b>. For mobile Internet connections, the value of <b>Method</b> can be configured as <b>Disabled</b> or <b>SmartCheck</b>.</p> |
| Health Check Disabled |                                                                                                                                                                                                                                                                                                                                                |

|                     |   |          |
|---------------------|---|----------|
| Health Check Method | ? | Disabled |
|---------------------|---|----------|

Health Check disabled. Network problem cannot be detected.

When **Disabled** is chosen in the **Method** field, the WAN connection will always be considered as up. The connection will **NOT** be treated as down in the event of IP routing errors.

### Health Check Method: PING

|                     |   |                                                                                                                                             |
|---------------------|---|---------------------------------------------------------------------------------------------------------------------------------------------|
| Health Check Method | ? | PING                                                                                                                                        |
| PING Hosts          | ? | Host 1: <input type="text"/><br>Host 2: <input type="text"/><br><input checked="" type="checkbox"/> Use first two DNS servers as PING Hosts |

ICMP ping packets will be issued to test the connectivity with a configurable target IP address or hostname. A WAN connection is considered as up if ping responses are received from either one or both of the ping hosts.

### PING Hosts

This setting specifies IP addresses or hostnames with which connectivity is to be tested via ICMP ping. If **Use first two DNS servers as Ping Hosts** is checked, the target ping host will be the first DNS server for the corresponding WAN connection. Reliable ping hosts with a high uptime should be considered. By default, the first two DNS servers of the WAN connection are used as the ping hosts.

### Health Check Method: DNS Lookup

|                          |   |                                                                                                                                                                                                                  |
|--------------------------|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Health Check Method      | ? | DNS Lookup                                                                                                                                                                                                       |
| Health Check DNS Servers | ? | Host 1: <input type="text"/><br>Host 2: <input type="text"/><br><input checked="" type="checkbox"/> Use first two DNS servers as Health Check DNS Servers<br><input type="checkbox"/> Include public DNS servers |

DNS lookups will be issued to test connectivity with target DNS servers. The connection will be treated as up if DNS responses are received from one or both of the servers, regardless of whether the result was positive or negative.

### Health Check DNS Servers

This field allows you to specify two DNS hosts' IP addresses with which connectivity is to be tested via DNS lookup.

If **Use first two DNS servers as Health Check DNS Servers** is checked, the first two DNS servers will be the DNS lookup targets for checking a connection's health. If the box is not checked, **Host 1** must be filled, while a value for **Host 2** is optional.

If **Include public DNS servers** is selected and no response is received from all specified DNS servers, DNS lookups will also be issued to some public DNS servers. A WAN connection will be treated as down only if there is also no response received from the public DNS servers.

Connections will be considered as up if DNS responses are received from any one of the health check DNS servers, regardless of a positive or negative result. By default, the first two DNS servers of the WAN connection are used as the health check DNS servers.

### Health Check Method: HTTP

HTTP connections will be issued to test connectivity with configurable URLs and strings to match.

|                     |                                                                                                                                                             |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Health Check Method |  HTTP                                                                      |
| URL 1               |  http:// <input type="text"/><br>Matching String: <input type="checkbox"/> |
| URL 2               |  http:// <input type="text"/><br>Matching String: <input type="checkbox"/> |

#### URL1

#### WAN Settings>WAN Edit>Health Check Settings>URL1

HTTP request will be sent according to the specified URL. Health check result is determined based on the HTTP response status code. Status code 2xx, 301 and 302 are classified as success. If Matching String is provided, health check will be determined as success only when the HTTP response content contains the specified string.

#### URL 2

#### WAN Settings>WAN Edit>Health Check Settings>URL2

If URL2 is also provided, a health check will pass if either one of the tests passed.

|                       |                                                                                       |           |
|-----------------------|---------------------------------------------------------------------------------------|-----------|
| Timeout               |  10 | second(s) |
| Health Check Interval |  5 | second(s) |
| Health Check Retries  |  3 |           |
| Recovery Retries      |  3 |           |

### Other Health Check Settings

#### Timeout

This setting specifies the timeout in seconds for ping/DNS lookup requests. The default timeout is **5 seconds**.

#### Health Check Interval

This setting specifies the time interval in seconds between ping or DNS lookup requests. The default health check interval is **5 seconds**.

#### Health Check Retries

This setting specifies the number of consecutive ping/DNS lookup timeouts after which the Peplink router will treat the corresponding WAN connection as down. Default health retries is set to **3**. Using the default **Health Retries** setting of **3**, the corresponding WAN connection will be treated as down after three consecutive timeouts.

#### Recovery Retries

This setting specifies the number of consecutive successful ping/DNS lookup responses that must be received before the Peplink router treats a previously down WAN connection as up again. By default, **Recover Retries** is set to **3**. Using the default setting, a WAN connection that is treated as down will be considered as up again upon receiving three consecutive successful ping/DNS lookup responses.

### Automatic Public DNS Server Check on DNS Test Failure

When the health check method is set to **DNS Lookup** and health checks fail, the Peplink router will automatically perform DNS lookups on public DNS servers. If the tests are successful, the WAN may not be down, but rather the target DNS server malfunctioned. You will see the following warning message on the main page:

**⚠ Failed to receive DNS response from the health-check DNS servers for WAN connection 3. But public DNS server lookup test via the WAN passed. So please check the DNS server settings.**

## 8.6 Bandwidth Allowance Monitoring


| Bandwidth Allowance Monitor |                                                                                                                                                                                                                                                          |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bandwidth Allowance Monitor | <input checked="" type="checkbox"/> Enable                                                                                                                                                                                                               |
| Action                      | Email notification is currently disabled. You can get notified when usage hits 75%/95% of monthly allowance by enabling <a href="#">Email Notification</a> .<br><input checked="" type="checkbox"/> Disconnect when usage hits 100% of monthly allowance |
| Start Day                   | On <input type="text" value="1st"/> of each month at 00:00 midnight                                                                                                                                                                                      |
| Monthly Allowance           | <input type="text"/> GB                                                                                                                                                                                                                                  |

| Bandwidth Allowance Monitor |                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Action</b>               | <p>If <b>Email Notification</b> is enabled, you will be notified by email when usage hits 75% and 95% of the monthly allowance.</p> <p>If <b>Disconnect when usage hits 100% of monthly allowance</b> is checked, this WAN connection will be disconnected automatically when the usage hits the monthly allowance. It will not resume connection unless this option has been turned off or the usage has been reset when a new billing cycle starts.</p> |
| <b>Start Day</b>            | This option allows you to define which day of the month each billing cycle begins.                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Monthly Allowance</b>    | This field is for defining the maximum bandwidth usage allowed for the WAN connection each month.                                                                                                                                                                                                                                                                                                                                                         |

### Disclaimer

Due to different network protocol overheads and conversions, the amount of data reported by this Peplink device is not representative of actual billable data usage as metered by your network provider. Peplink disclaims any obligation or responsibility for any events arising from the use of the numbers shown here.

## 8.7 Additional Public IP address

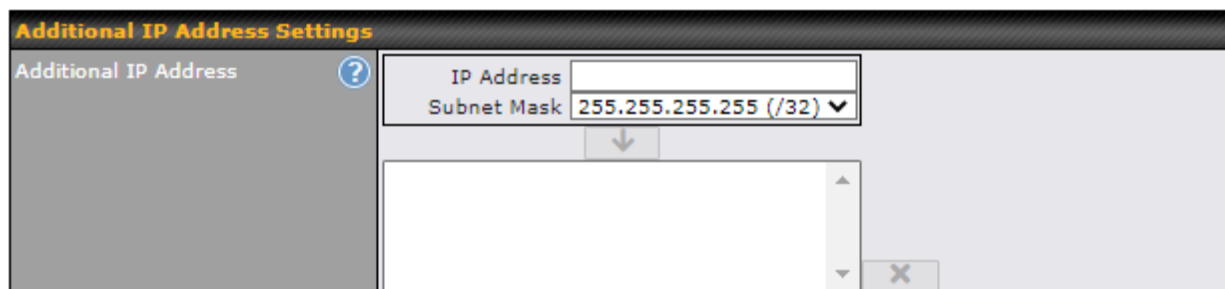

| Additional Public IP Settings |                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>IP Address List</b>        | <p><b>IP Address List</b> represents the list of fixed Internet IP addresses assigned by the ISP in the event that more than one Internet IP address is assigned to this WAN connection. Enter the fixed Internet IP addresses and the corresponding subnet mask, and then click the <b>Down Arrow</b> button to populate IP address entries to the <b>IP Address List</b>.</p> |

## 8.8 Dynamic DNS Settings

Peplink routers are capable of registering the domain name relationships to dynamic DNS service providers. Through registration with dynamic DNS service provider(s), the default public Internet IP address of each WAN connection can be associated with a host name. With dynamic DNS service enabled for a WAN connection, you can connect to your WAN's IP address from the external, even if its IP address is dynamic. You must register for an account from the listed dynamic DNS service providers before enabling this option.

If the WAN connection's IP address is a reserved private IP address (i.e., behind a NAT router), the public IP of each WAN will be automatically reported to the DNS service provider.

Either upon a change in IP addresses or every 23 days without link reconnection, the Peplink router will connect to the dynamic DNS service provider to perform an IP address update within the provider's records.

The settings for dynamic DNS service provider(s) and the association of hostname(s) are configured via **Network > WAN > Details > Dynamic DNS Service Provider/Dynamic DNS Settings**.

|                              |                                           |
|------------------------------|-------------------------------------------|
| Dynamic DNS Service Provider | <input type="text" value="changeip.com"/> |
| User ID                      | <input type="text"/>                      |
| Password                     | <input type="password"/>                  |
| Confirm Password             | <input type="password"/>                  |
| Hosts                        | <input type="text"/>                      |

### Dynamic DNS Settings

#### Dynamic DNS

This setting specifies the dynamic DNS service provider to be used for the WAN based on supported dynamic DNS service providers:

- Disabled
- changeip.com
- dyndns.org
- no-ip.org
- DNS-O-Matic
- Others...

Support custom Dynamic DNS servers by entering its URL. Works with any service compatible with DynDNS API.

Select **Disabled** to disable this feature.

#### User ID/ Username / Email

This setting specifies the registered user name for the dynamic DNS service.

#### Password

This setting specifies the password for the dynamic DNS service.

#### Hosts


This field allows you to specify a list of host names or domains to be associated with the public Internet IP address of the WAN connection. If you need to enter more than one host, use a carriage return to separate them.

### Important Note

In order to use dynamic DNS services, appropriate host name registration(s) and a valid account with a supported dynamic DNS service provider are required. A dynamic DNS update is performed whenever a WAN's IP address changes (e.g., the IP is changed after a DHCP IP refresh, reconnection, etc.). Due to dynamic DNS service providers' policy, a dynamic DNS host will automatically expire if the host record has not been updated for a long time. Therefore the Peplink router performs an update every 23 days, even if a WAN's IP address has not changed.



## 9 SpeedFusion VPN

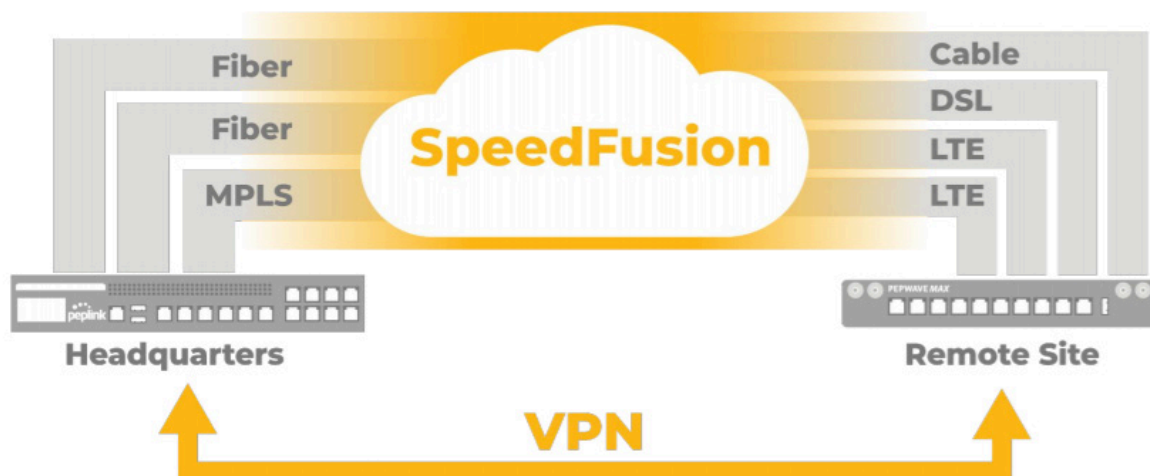

Peplink bandwidth bonding SpeedFusion™ is our patented technology that enables our SD-WAN routers to bond multiple Internet connections to increase site-to-site bandwidth and reliability. SpeedFusion functionality securely connects your Peplink router to another Peplink or Peplink device (Peplink Balance 210/310/380/580/710/1350 only). Data, voice, or video communications between these locations are kept confidential across the public Internet.

Bandwidth bonding SpeedFusion™ is specifically designed for multi-WAN environments. In case of failures and network congestion at one or more WANs, other WANs can be used to continue carrying the network traffic.


Different models of our SD-WAN routers have different numbers of site-to-site connections allowed. End-users who need to have more site-to-site connections can purchase a SpeedFusion license to increase the number of site-to-site connections allowed.

Peplink routers can aggregate all WAN connections' bandwidth for routing SpeedFusion™ traffic. Unless all the WAN connections of one site are down, Peplink routers can keep the VPN up and running.

VPN bandwidth bonding is supported in Firmware 5.1 or above. All available bandwidth will be utilized to establish the VPN tunnel, and all traffic will be load balanced at packet level across all links. VPN bandwidth bonding is enabled by default.

## 9.1 SpeedFusion VPN

To configure SpeedFusion VPN, navigate to **Advanced > SpeedFusion VPN**.

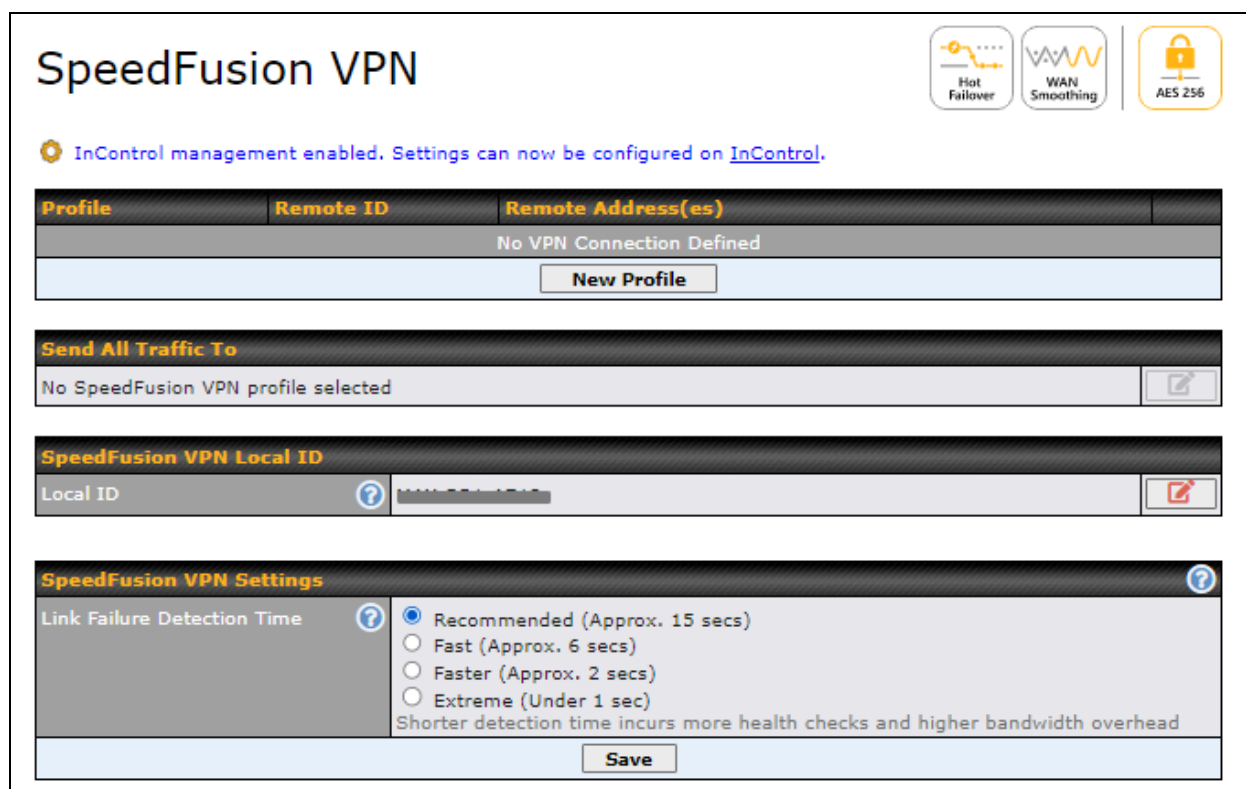

The local LAN subnet and subnets behind the LAN (defined under **Static Route** on the LAN settings page) will be advertised to the VPN. All VPN members (branch offices and headquarters) will be able to route to local subnets.

Note that all LAN subnets and the subnets behind them must be unique. Otherwise, VPN members will not be able to access each other.

All data can be routed over the VPN using the 256-bit AES encryption standard. To configure, navigate to **Advanced > SpeedFusion VPN** and click the **New Profile** button to create a new VPN profile (you may have to first save the displayed default profile in order to access the **New Profile** button). Each profile specifies the settings for making VPN connection with one remote Peplink or Peplink device. Note that available settings vary by model.

A list of defined SpeedFusion connection profiles and a **Link Failure Detection Time** option will be shown. Click the **New Profile** button to create a new VPN connection profile for making a VPN connection to a remote Peplink or Peplink device via the available WAN connections. Each profile is for making a VPN connection with one remote Peplink or Peplink Device.

| SpeedFusion VPN Profile <span>?</span>                   |                                                                                                                                                                                            |           |                |                      |                      |
|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|----------------|----------------------|----------------------|
| Name <span>?</span>                                      | <input type="text"/>                                                                                                                                                                       |           |                |                      |                      |
| Enable                                                   | <input checked="" type="checkbox"/>                                                                                                                                                        |           |                |                      |                      |
| Encryption <span>?</span>                                | <input checked="" type="radio"/> 256-bit AES <input type="radio"/> OFF                                                                                                                     |           |                |                      |                      |
| Authentication                                           | <input checked="" type="radio"/> Remote ID / Pre-shared Key                                                                                                                                |           |                |                      |                      |
| Remote ID / Pre-shared Key                               | <table border="1"> <thead> <tr> <th>Remote ID</th> <th>Pre-shared Key</th> </tr> </thead> <tbody> <tr> <td><input type="text"/></td> <td><input type="text"/></td> </tr> </tbody> </table> | Remote ID | Pre-shared Key | <input type="text"/> | <input type="text"/> |
| Remote ID                                                | Pre-shared Key                                                                                                                                                                             |           |                |                      |                      |
| <input type="text"/>                                     | <input type="text"/>                                                                                                                                                                       |           |                |                      |                      |
| NAT Mode <span>?</span>                                  | <input type="checkbox"/>                                                                                                                                                                   |           |                |                      |                      |
| Remote IP Address / Host Names (Optional) <span>?</span> | <input type="text"/><br><small>If this field is empty, this field on the remote unit must be filled</small>                                                                                |           |                |                      |                      |
| Cost <span>?</span>                                      | <input type="text" value="10"/>                                                                                                                                                            |           |                |                      |                      |
| Data Port <span>?</span>                                 | <input checked="" type="radio"/> Auto <input type="radio"/> Custom <input type="text"/>                                                                                                    |           |                |                      |                      |
| Bandwidth Limit <span>?</span>                           | <input type="checkbox"/>                                                                                                                                                                   |           |                |                      |                      |
| WAN Smoothing <span>?</span>                             | <input type="text" value="Off"/> ▼                                                                                                                                                         |           |                |                      |                      |
| Forward Error Correction <span>?</span>                  | <input type="text" value="Off"/> ▼                                                                                                                                                         |           |                |                      |                      |
| Receive Buffer <span>?</span>                            | <input type="text" value="0"/> ms                                                                                                                                                          |           |                |                      |                      |
| Packet Fragmentation <span>?</span>                      | <input checked="" type="radio"/> Always <input type="radio"/> Use DF Flag                                                                                                                  |           |                |                      |                      |
| Use IP ToS                                               | <input type="checkbox"/>                                                                                                                                                                   |           |                |                      |                      |
| Latency Difference Cutoff <span>?</span>                 | <input type="text" value="500"/> ms                                                                                                                                                        |           |                |                      |                      |

| SpeedFusion VPN Profile Settings  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                       | This field is for specifying a name to represent this profile. The name can be any combination of alphanumeric characters (0-9, A-Z, a-z), underscores ( _ ), dashes ( - ), and/or non-leading/trailing spaces ( ).                                                                                                                                                                                                                                                                                |
| <b>Enable</b>                     | When this box is checked, this VPN connection profile will be enabled. Otherwise, it will be disabled.                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Encryption</b>                 | By default, VPN traffic is encrypted with <b>256-bit AES</b> . If <b>Off</b> is selected on both sides of a VPN connection, no encryption will be applied.                                                                                                                                                                                                                                                                                                                                         |
| <b>Authentication</b>             | Select from <b>By Remote ID Only</b> , <b>Preshared Key</b> , or <b>X.509</b> to specify the method the Peplink MAX will use to authenticate peers. When selecting <b>By Remote ID Only</b> , be sure to enter a unique peer ID number in the <b>Remote ID</b> field.                                                                                                                                                                                                                              |
| <b>Remote ID / Pre-shared Key</b> | This optional field becomes available when <b>Remote ID / Pre-shared Key</b> is selected as the Peplink router's VPN <b>Authentication</b> method, as explained above. <b>Pre-shared Key</b> defines the pre-shared key used for this particular VPN connection. The VPN connection's session key will be further protected by the pre-shared key. The connection will be up only if the pre-shared keys on each side match. When the peer is running firmware 5.0+, this setting will be ignored. |

|                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                  | Enter Remote IDs either by typing out each Remote ID and Pre-shared Key, or by pasting a CSV. If you wish to paste a CSV, click the  icon next to the “Remote ID / Preshared Key” setting.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Remote ID/Remote Certificate</b>              | These optional fields become available when <b>X.509</b> is selected as the Peplink MAX's VPN authentication method, as explained above. To authenticate VPN connections using X.509 certificates, copy and paste certificate details into these fields. To get more information on a listed X.509 certificate, click the <b>Show Details</b> link below the field.                                                                                                                                                                                                                                                                                                                                                  |
| <b>Allow Shared Remote ID</b>                    | When this option is enabled, the router will allow multiple peers to run using the same remote ID.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>NAT Mode</b>                                  | Check this box to allow the local DHCP server to assign an IP address to the remote peer. When <b>NAT Mode</b> is enabled, all remote traffic over the VPN will be tagged with the assigned IP address using network address translation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Remote IP Address / Host Names (Optional)</b> | <p>If <b>NAT Mode</b> is not enabled, you can enter a remote peer's WAN IP address or hostname(s) here. If the remote uses more than one address, enter only one of them here. Multiple hostnames are allowed and can be separated by a space character or carriage return. Dynamic-DNS host names are also accepted.</p> <p>This field is optional. With this field filled, the Peplink MAX will initiate connection to each of the remote IP addresses until it succeeds in making a connection. If the field is empty, the Peplink MAX will wait for connection from the remote peer. Therefore, at least one of the two VPN peers must specify this value. Otherwise, VPN connections cannot be established.</p> |
| <b>Cost</b>                                      | <p>Define path cost for this profile.</p> <p>OSPF will determine the best route through the network using the assigned cost.</p> <p>Default: 10</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Data Port</b>                                 | <p>This field is used to specify a UDP port number for transporting outgoing VPN data. If <b>Default</b> is selected, UDP port 4500 will be used. Port 32015 will be used if the remote unit uses Firmware prior to version 5.4 or if port 4500 is unavailable. If <b>Custom</b> is selected, enter an outgoing port number from 1 to 65535.</p> <p>Click the  icon to configure data stream using TCP protocol [EXPERIMENTAL]. In the case TCP protocol is used, the exposed TCP session option can be authorised to work with TCP accelerated WAN link.</p>                                                                     |
| <b>Bandwidth Limit</b>                           | Define maximum download and upload speed to each individual peer. This functionality requires the peer to use SpeedFusion VPN version 4.0.0 or above.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>WAN Smoothing</b>                             | While using SpeedFusion VPN, utilize multiple WAN links to reduce the impact of packet loss and get the lowest possible latency at the expense of extra bandwidth consumption. This is suitable for streaming applications where the average bitrate requirement is much lower than the WAN's available bandwidth.                                                                                                                                                                                                                                                                                                                                                                                                   |

|                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                              | <p>Off - Disable WAN Smoothing.</p> <p>Normal - The total bandwidth consumption will be at most 2x of the original data traffic.</p> <p>Medium - The total bandwidth consumption will be at most 3x of the original data traffic.</p> <p>High - The total bandwidth consumption depends on the number of connected active tunnels.</p>                                                                                                                                                 |
| <b>Forward Error Correction</b>              | <p>Forward Error Correction (FEC) can help to recover packet loss by using extra bandwidth to send redundant data packets. Higher FEC level will recover packets on a higher loss rate link.</p> <p>The expected overhead of Low is 13.3% and High is 26.7%.</p> <p>Require peer using SpeedFusion VPN version 8.0.0 and above.</p>                                                                                                                                                    |
| <b>Receive Buffer</b>                        | <p>Receive Buffer can help to reduce out-of-order packets and jitter, but will introduce extra latency to the tunnel. Default is 0 ms, which disables the buffer, and maximum buffer size is 2000 ms.</p>                                                                                                                                                                                                                                                                              |
| <b>Packet Fragmentation</b>                  | <p>If the packet size is larger than the tunnel's MTU, it will be fragmented inside the tunnel in order to pass through.</p> <p>Select Always to fragment any packets that are too large to send, or Use DF Flag to only fragment packets with Don't Fragment bit cleared. This can be useful if your application does Path MTU Discovery, usually sending large packets with DF bit set, if allowing them to go through by fragmentation, the MTU will not be detected correctly.</p> |
| <b>Use IP ToS<sup>A</sup></b>                | <p>Checking this button enables the use of IP ToS header field.</p>                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Latency Difference Cutoff<sup>A</sup></b> | <p>Traffic will be stopped for links that exceed the specified millisecond value with respect to the lowest latency link. (e.g. Lowest latency is 100ms, a value of 500ms means links with latency 600ms or more will not be used)</p>                                                                                                                                                                                                                                                 |

<sup>A</sup> - Advanced feature, please click the  button on the top right-hand corner to activate.

To enable Layer 2 Bridging between SpeedFusion VPN profiles, navigate to **Network > LAN > Basic Settings > \*LAN Profile Name\*** and refer to instructions in section 9.1



| Traffic Distribution         |                                                                                   |                            |
|------------------------------|-----------------------------------------------------------------------------------|----------------------------|
| Policy                       |  | Dynamic Weighted Bonding ▼ |
| Congestion Latency Level     |  | Default ▼                  |
| Ignore Packet Loss Event     |  | <input type="checkbox"/>   |
| Disable Bufferbloat Handling |  | <input type="checkbox"/>   |
| Disable TCP ACK Optimization |  | <input type="checkbox"/>   |
| Packet Jitter Buffer         |  | 150 ms                     |

| Traffic Distribution                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Policy</b>                       | <p>This option allows you to select the desired out-bound traffic distribution policy:</p> <ul style="list-style-type: none"> <li>Bonding - Aggregate multiple WAN-to-WAN links into a single higher throughput tunnel.</li> <li>Dynamic Weighted Bonding - Aggregates WAN-to-WAN links with similar latencies.</li> </ul> <p>By default, Bonding is selected as a traffic distribution policy.</p>                                                             |
| <b>Congestion Latency Level</b>     | <p>For most WANs, especially on satellite and wireless networks, the latency will increase when the link becomes more congested.</p> <p>Setting the <b>Congestion Latency Level</b> to <b>Low</b> will treat the link as congested more aggressively.</p> <p>Setting it to <b>High</b> will allow the latency to increase more before treating it as congested.</p>                                                                                             |
| <b>Ignore Packet Loss Event</b>     | <p>By default, when there is packet loss, it is considered as a congestion event. If this is not the case, select this option to ignore the packet loss event.</p>                                                                                                                                                                                                                                                                                              |
| <b>Disable Bufferbloat Handling</b> | <p>Bufferbloat is a phenomenon on the WAN side when it is congested. The latency can become very high due to buffering on the uplink. By default, the Dynamic Weighted Bonding policy will try its best to mitigate bufferbloat by reducing TCP throughput when the WAN is congested. However, as a side effect, the tunnel might not achieve maximum bandwidth.</p> <p>Selecting this option will <b>disable</b> the bufferbloat handling mentioned above.</p> |
| <b>Disable TCP ACK Optimization</b> | <p>By default, TCP ACK will be forwarded to remote peers as fast as possible. This will consume more bandwidth, but may help to improve TCP performance as well.</p> <p>Selecting this option will <b>disable</b> the TCP ACK optimization mentioned above.</p>                                                                                                                                                                                                 |
| <b>Packet Jitter Buffer</b>         | <p>The default jitter buffer is 150ms, and can be modified from 0ms to 500ms. The jitter buffer may increase the tunnel latency. If you want to keep the latency as low as possible, you can set it to 0ms to disable the buffer.</p> <p><b>Note:</b> If the Receive Buffer is set, the Packet Jitter Buffer will be automatically disabled.</p>                                                                                                                |

| WAN Connection Priority <span>?</span> |               |           |                   |                      |                                        |
|----------------------------------------|---------------|-----------|-------------------|----------------------|----------------------------------------|
|                                        | Priority      | Direction | Connect to Remote | Cut-off latency (ms) | Suspension Time after Packet Loss (ms) |
| 1. WAN 1                               | 1 (Highest) ▼ | Up/Down ▼ | All ▼             | <input type="text"/> | <input type="text"/>                   |
| 2. WAN 2                               | 1 (Highest) ▼ | Up/Down ▼ | All ▼             | <input type="text"/> | <input type="text"/>                   |
| 3. Wi-Fi WAN                           | 1 (Highest) ▼ | Up/Down ▼ | All ▼             | <input type="text"/> | <input type="text"/>                   |
| 4. Cellular 1                          | 1 (Highest) ▼ | Up/Down ▼ | All ▼             | <input type="text"/> | <input type="text"/>                   |
| 5. Cellular 2                          | 1 (Highest) ▼ | Up/Down ▼ | All ▼             | <input type="text"/> | <input type="text"/>                   |
| 6. USB                                 | 1 (Highest) ▼ | Up/Down ▼ | All ▼             | <input type="text"/> | <input type="text"/>                   |

### WAN Connection Priority

#### WAN Connection Priority

If your device supports it, you can specify the priority of WAN connections to be used for making VPN connections. WAN connections set to **OFF** will never be used. Only available WAN connections with the highest priority will be used.

To enable asymmetric connections, connection mapping to remote WANs, cut-off latency, and packet loss suspension time, click the button.

### Send All Traffic To

No SpeedFusion VPN profile selected



### Send All Traffic To

This feature allows you to redirect all traffic to a specified SpeedFusion VPN connection. Click the button to select your connection and the following menu will appear:

Send All Traffic To

☒ Balance 2942-1257-1241 ▼  
 DNS Server  
  
  
☒ Backup Site Balance-4810-1825-068E-4810 ▼  
 DNS Server

You could also specify a DNS server to resolve incoming DNS requests. Click the checkbox next to **Backup Site** to designate a backup SpeedFusion profile that will take over, should the main SpeedFusion VPN connection fail.

## Outbound Policy/SpeedFusion VPN Outbound Custom Rules

Some models allow you to set outbound policy and custom outbound rules from **Advanced>SpeedFusion VPN**. See **Section 14** for more information on outbound policy settings.

The screenshot shows two configuration sections. The first, 'Outbound Policy', has a dropdown menu set to 'According to custom rules' and an edit icon. The second, 'PepVPN Outbound Custom Rules', is a table with columns: Service, Algorithm, Source, Destination, and Protocol. The 'Algorithm' column has '(Auto)' selected. Below the table is an 'Add Rule' button.

## SpeedFusion VPN Local ID

The screenshot shows a 'Local ID' field with a question mark icon and the text 'MAX-BR1-A712'. An edit icon is visible on the right side of the field.

## SpeedFusion VPN Local ID

The local ID is a text string to identify this local unit when establishing a VPN connection. When creating a profile on a remote unit, this local ID must be entered in the remote unit's **Remote ID** field. Click the icon to edit **Local ID**.

## Link Failure Detection Settings

The screenshot shows the 'Link Failure Detection Settings' section. It includes a 'Cold Failover Mode' checkbox (unchecked) and a 'Link Failure Detection Time' section. The 'Link Failure Detection Time' has five radio button options: 'Follow Device Setting - Recommended (Approx. 15 secs)' (selected), 'Recommended (Approx. 15 secs)', 'Fast (Approx. 6 secs)', 'Faster (Approx. 2 secs)', and 'Extreme (Under 1 sec)'. A note at the bottom states: 'Shorter detection time incurs more health checks and higher bandwidth overhead'.

## Link Failure Detection Settings

### Cold Failover Mode

Enabling Cold Failover Mode turns off link failure detection for standby WAN-to-WAN links, helping to lower bandwidth consumption.

### Link Failure Detection Time

The bonded VPN can detect routing failures on the path between two sites over each WAN connection. Failed WAN connections will not be used to route VPN traffic. Health check packets are sent to the remote unit to detect any failure. The more frequently checks are sent, the shorter the detection time, although more bandwidth will be consumed.

When **Recommended** (default) is selected, a health check packet is sent every five seconds, and the expected detection time is 15 seconds.

When **Fast** is selected, a health check packet is sent every three seconds, and the expected detection time is six seconds.

When **Faster** is selected, a health check packet is sent every second, and the



expected detection time is two seconds.

When **Extreme** is selected, a health check packet is sent every 0.1 second, and the expected detection time is less than one second.


<sup>A</sup> - Advanced feature, please click the  button on the top right-hand corner to activate.

### Important Note

Peplink proprietary SpeedFusion™ uses TCP port 32015 and UDP port 4500 for establishing VPN connections. If you have a firewall in front of your Peplink devices, you will need to add firewall rules for these ports and protocols to allow inbound and outbound traffic to pass through the firewall.

### Tip

Want to know more about VPN sub-second session failover? Visit our YouTube Channel for a video tutorial!

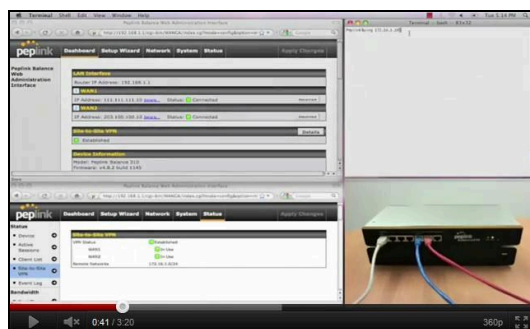

<http://youtu.be/TLQgdpPSY88>


## 9.2 The Peplink Router Behind a NAT Router

Peplink routers support establishing SpeedFusion™ over WAN connections which are behind a NAT (network address translation) router.

To enable a WAN connection behind a NAT router to accept VPN connections, you can configure the NAT router in front of the WAN connection to inbound port-forward TCP port 32015 to the Peplink router.

If one or more WAN connections on Unit A can accept VPN connections (by means of port forwarding or not), while none of the WAN connections on the peer Unit B can do so, you should enter all of Unit A's public IP addresses or hostnames into Unit B's **Remote IP Addresses / Host Names** field. Leave the field in Unit A blank. With this setting, a SpeedFusion™ connection can be set up and all WAN connections on both sides will be utilized.

See the following diagram for an example of this setup in use:

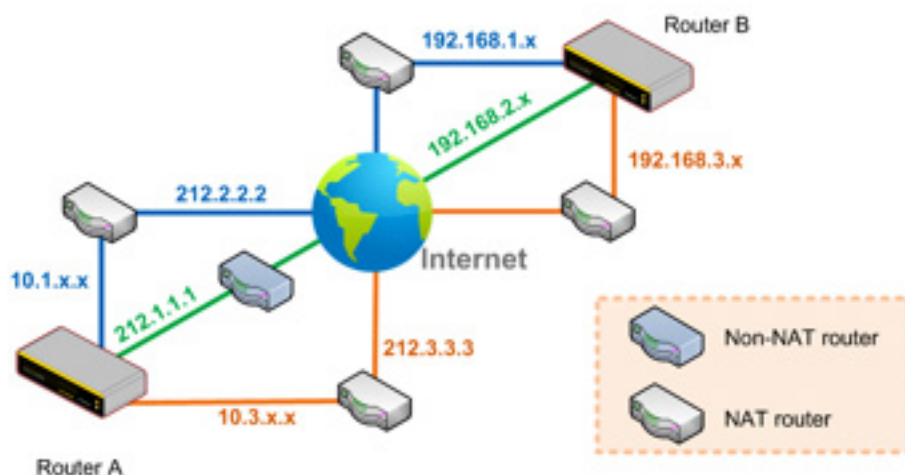

One of the WANs connected to Router A is non-NAT'd (212.1.1.1). The rest of the WANs connected to Router A and all WANs connected to Router B are NAT'd. In this case, the **Peer IP Addresses / Host Names** field for Router B should be filled with all of Router A's hostnames or public IP addresses (i.e., 212.1.1.1, 212.2.2.2, and 212.3.3.3), and the field in Router A can be left blank. The two NAT routers on WAN1 and WAN3 connected to Router A should inbound port-forward TCP port 32015 to Router A so that all WANs will be utilized in establishing the VPN.

## 9.3 SpeedFusion VPN Status

SpeedFusion VPN status is shown in the Dashboard. The connection status of each connection profile is shown as below.

| SpeedFusion VPN |                                                                                   | Status      |
|-----------------|-----------------------------------------------------------------------------------|-------------|
| To MK2          |  | Established |

After clicking the **Status** button at the top right corner of the SpeedFusion™ table, you will be forwarded to **Status > SpeedFusion VPN**, where you can view subnet and WAN connection information for each VPN peer.

### IP Subnets Must Be Unique Among VPN Peers

The entire interconnected SpeedFusion™ network is a single non-NAT IP network. Avoid duplicating subnets in your sites to prevent connectivity problems when accessing those subnets.

## 10 IPsec VPN

IPsec VPN functionality securely connects one or more branch offices to your company's main headquarters or to other branches. Data, voice, and video communications between these locations are kept safe and confidential across the public Internet.

IPsec VPN on Peplink routers is specially designed for multi-WAN environments. For instance, if a user sets up multiple IPsec profiles for a multi-WAN environment and WAN1 is connected and healthy, IPsec traffic will go through this link. However, should unforeseen problems (e.g., unplugged cables or ISP problems) cause WAN1 to go down, our IPsec implementation will make use of WAN2 and WAN3 for failover.

### 10.1 IPsec VPN Settings

Many Peplink products can make multiple IPsec VPN connections with Peplink, Peplink, Cisco, and Juniper routers. Note that all LAN subnets and the subnets behind them must be unique. Otherwise, VPN members will not be able to access each other. All data can be routed over the VPN with a selection of encryption standards, such as 3DES, AES-128, and AES-256. To configure IPsec VPN on Peplink devices that support it, navigate to **Advanced>IPsec VPN**.

| IPsec VPN Profiles            |  | Remote Networks |
|-------------------------------|--|-----------------|
| No IPsec VPN Profile Defined. |  |                 |
| <a href="#">New Profile</a>   |  |                 |

| IPsec Settings       |                                         |
|----------------------|-----------------------------------------|
| DPD Interval         | <input type="text" value="10"/> seconds |
| DPD Attempts         | <input type="text" value="3"/>          |
| <a href="#">Save</a> |                                         |

Peplink IPsec only supports network-to-network connection with Cisco, Juniper or Peplink devices.

Click the **New Profile** button to create new IPsec VPN profiles that make VPN connections to remote Peplink, Cisco, or Juniper routers via available WAN connections. To edit any of the profiles, click on its associated connection name in the leftmost column.

**IPsec VPN Profile**
✕

| Name                                                                           | <input style="width: 95%;" type="text"/>                                                                                                                                                                                                                                                                                                                                                      |         |             |  |                                          |                       |   |  |  |
|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-------------|--|------------------------------------------|-----------------------|---|--|--|
| Active <span style="font-size: 0.8em;">?</span>                                | <input checked="" type="checkbox"/>                                                                                                                                                                                                                                                                                                                                                           |         |             |  |                                          |                       |   |  |  |
| IKE Version                                                                    | <input checked="" type="radio"/> IKEv1 <input type="radio"/> IKEv2                                                                                                                                                                                                                                                                                                                            |         |             |  |                                          |                       |   |  |  |
| Connect Upon Disconnection of                                                  | <input checked="" type="checkbox"/> <input style="width: 80%;" type="text" value="WAN 1"/> <span style="float: right;">▼</span>                                                                                                                                                                                                                                                               |         |             |  |                                          |                       |   |  |  |
| Remote Gateway IP Address / Host Name <span style="font-size: 0.8em;">?</span> | <input style="width: 95%;" type="text"/>                                                                                                                                                                                                                                                                                                                                                      |         |             |  |                                          |                       |   |  |  |
| IPsec Type <span style="font-size: 0.8em;">?</span>                            | <input checked="" type="radio"/> Policy-based <input type="radio"/> Route-based                                                                                                                                                                                                                                                                                                               |         |             |  |                                          |                       |   |  |  |
| Local Networks <span style="font-size: 0.8em;">?</span>                        | <input checked="" type="checkbox"/> 192.168.50.0/24<br><input type="checkbox"/> <input style="width: 80%;" type="text"/>                                                                                                                                                                                                                                                                      |         |             |  |                                          |                       |   |  |  |
| Remote Networks                                                                | <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="background-color: #e0f0ff;">Network</th> <th style="background-color: #e0f0ff;">Subnet Mask</th> <th></th> </tr> </thead> <tbody> <tr> <td><input style="width: 90%;" type="text"/></td> <td>255.255.255.0 (/24) ▼</td> <td style="text-align: center; width: 10%;">+</td> </tr> </tbody> </table> | Network | Subnet Mask |  | <input style="width: 90%;" type="text"/> | 255.255.255.0 (/24) ▼ | + |  |  |
| Network                                                                        | Subnet Mask                                                                                                                                                                                                                                                                                                                                                                                   |         |             |  |                                          |                       |   |  |  |
| <input style="width: 90%;" type="text"/>                                       | 255.255.255.0 (/24) ▼                                                                                                                                                                                                                                                                                                                                                                         | +       |             |  |                                          |                       |   |  |  |
| Authentication                                                                 | <input checked="" type="radio"/> Preshared Key <input type="radio"/> X.509 Certificate                                                                                                                                                                                                                                                                                                        |         |             |  |                                          |                       |   |  |  |
| Mode                                                                           | <input checked="" type="radio"/> Main Mode (All WANs need to have Static IP)<br><input type="radio"/> Aggressive Mode                                                                                                                                                                                                                                                                         |         |             |  |                                          |                       |   |  |  |
| Force UDP Encapsulation <span style="font-size: 0.8em;">?</span>               | <input type="checkbox"/>                                                                                                                                                                                                                                                                                                                                                                      |         |             |  |                                          |                       |   |  |  |
| Preshared Key                                                                  | <input style="width: 95%;" type="text"/><br><input checked="" type="checkbox"/> Hide Characters                                                                                                                                                                                                                                                                                               |         |             |  |                                          |                       |   |  |  |
| Local ID <span style="font-size: 0.8em;">?</span>                              | <input style="width: 95%;" type="text"/>                                                                                                                                                                                                                                                                                                                                                      |         |             |  |                                          |                       |   |  |  |
| Remote ID <span style="font-size: 0.8em;">?</span>                             | <input style="width: 95%;" type="text"/>                                                                                                                                                                                                                                                                                                                                                      |         |             |  |                                          |                       |   |  |  |
| Phase 1 (IKEv1) Proposal <span style="font-size: 0.8em;">?</span>              | 1 <input style="width: 80%;" type="text" value="AES-CBC-256 &amp; SHA1"/> ▼<br>2 <input style="width: 80%;" type="text" value="-----"/> ▼                                                                                                                                                                                                                                                     |         |             |  |                                          |                       |   |  |  |
| Phase 1 DH Group <span style="font-size: 0.8em;">?</span>                      | 1 <input style="width: 80%;" type="text" value="Group 2"/> ▼<br>2 <input style="width: 80%;" type="text" value="-----"/> ▼                                                                                                                                                                                                                                                                    |         |             |  |                                          |                       |   |  |  |
| Phase 1 SA Lifetime                                                            | <input style="width: 80%;" type="text" value="3600"/> seconds                                                                                                                                                                                                                                                                                                                                 |         |             |  |                                          |                       |   |  |  |
| Phase 2 (ESP) Proposal <span style="font-size: 0.8em;">?</span>                | 1 <input style="width: 80%;" type="text" value="AES-CBC-256 &amp; SHA1"/> ▼<br>2 <input style="width: 80%;" type="text" value="-----"/> ▼                                                                                                                                                                                                                                                     |         |             |  |                                          |                       |   |  |  |
| Phase 2 PFS Group                                                              | <input style="width: 80%;" type="text" value="None"/> ▼                                                                                                                                                                                                                                                                                                                                       |         |             |  |                                          |                       |   |  |  |
| Phase 2 SA Lifetime                                                            | <input style="width: 80%;" type="text" value="28800"/> seconds                                                                                                                                                                                                                                                                                                                                |         |             |  |                                          |                       |   |  |  |

| IPsec VPN Profile Settings |                                                                                                                             |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                | This field is for specifying a local name to represent this connection profile.                                             |
| <b>Active</b>              | When this box is checked, this IPsec VPN connection profile will be enabled. Otherwise, it will be disabled.                |
| <b>IKE Version</b>         | Two versions of the IKE standards are available: <ul style="list-style-type: none"> <li>• IKEv1</li> <li>• IKEv2</li> </ul> |

|                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Connect Upon Disconnection of</b>         | Check this box and select a WAN to connect to this VPN automatically when the specified WAN is disconnected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Remote Gateway IP Address / Host Name</b> | Enter the remote peer's public IP address. For <b>Aggressive Mode</b> , this is optional.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>IPsec Type</b>                            | <p>Policy-based - (default) All the matched traffic as defined in Local Networks and Remote Networks will be routed to this IPsec connection, this cannot be overridden by other routing methods.</p> <p>Route-based - Outbound Policy rule is required to route traffic to this tunnel and comes with more flexibility to control how to route traffic compared to Policy-based. If you want to modify the traffic selector instead of using the default (0.0.0.0/0).</p> <p><b>Note:</b> This option is available for certain following models only:</p> <ul style="list-style-type: none"> <li>MAX: BR1 ENT, Transit, 700 HW3 or above, HD2 HW5 or above, HD4</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Local Networks</b>                        | <p>Enter the local LAN subnets here. If you have defined static routes, they will be shown here.</p> <p>Using NAT, you can map a specific local network / IP address to another, and the packets received by remote gateway will appear to be coming from the mapped network / IP address. This allow you to establish IPsec connection to a remote site that has one or more subnets overlapped with local site.</p> <p>Two types of NAT policies can be defined:</p> <p>One-to-One NAT policy: if the defined subnet in Local Network and NAT Network has the same size, for example, policy "192.168.50.0/24 &gt; 172.16.1.0/24" will translate the local IP address 192.168.50.10 to 172.16.1.10 and 192.168.50.20 to 172.16.1.20. This is a bidirectional mapping which means clients in remote site can initiate connection to the local clients using the mapped address too.</p> <p>Many-to-One NAT policy: if the defined NAT Network on the right hand side is an IP address (or having a network prefix /32), for example, policy "192.168.1.0/24 &gt; 172.168.50.1/32" will translate all clients in 192.168.1.0/24 network to 172.168.50.1. This is a unidirectional mapping which means clients in remote site will not be able to initiate connection to the local clients.</p> |
| <b>Remote Networks</b>                       | Enter the LAN and subnets that are located at the remote site here.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Authentication</b>                        | To access your VPN, clients will need to authenticate by your choice of methods. Choose between the <b>Preshared Key</b> and <b>X.509 Certificate</b> methods of                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

|                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                         | authentication.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Mode</b>                             | Choose <b>Main Mode</b> if both IPsec peers use static IP addresses. Choose <b>Aggressive Mode</b> if one of the IPsec peers uses dynamic IP addresses.                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Force UDP Encapsulation</b>          | For forced UDP encapsulation regardless of NAT-traversal, tick this checkbox.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Pre-shared Key</b>                   | This defines the peer authentication pre-shared key used to authenticate this VPN connection. The connection will be up only if the pre-shared keys on each side match.                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Remote Certificate (pem encoded)</b> | Available only when <b>X.509 Certificate</b> is chosen as the <b>Authentication</b> method, this field allows you to paste a valid X.509 certificate.                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Local ID</b>                         | In <b>Main Mode</b> , this field can be left blank. In <b>Aggressive Mode</b> , if <b>Remote Gateway IP Address</b> is filled on this end and the peer end, this field can be left blank. Otherwise, this field is typically a U-FQDN.                                                                                                                                                                                                                                                                                                        |
| <b>Remote ID</b>                        | In <b>Main Mode</b> , this field can be left blank. In <b>Aggressive Mode</b> , if <b>Remote Gateway IP Address</b> is filled on this end and the peer end, this field can be left blank. Otherwise, this field is typically a U-FQDN.                                                                                                                                                                                                                                                                                                        |
| <b>Phase 1 (IKE) Proposal</b>           | In <b>Main Mode</b> , this allows setting up to six encryption standards, in descending order of priority, to be used in initial connection key negotiations. In <b>Aggressive Mode</b> , only one selection is permitted.                                                                                                                                                                                                                                                                                                                    |
| <b>Phase 1 DH Group</b>                 | This is the Diffie-Hellman group used within IKE. This allows two parties to establish a shared secret over an insecure communications channel. The larger the group number, the higher the security.<br><b>Group 2: 1024-bit</b> is the default value.<br><b>Group 5: 1536-bit</b> is the alternative option.                                                                                                                                                                                                                                |
| <b>Phase 1 SA Lifetime</b>              | This setting specifies the lifetime limit of this Phase 1 Security Association. By default, it is set at <b>3600</b> seconds.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Phase 2 (ESP) Proposal</b>           | In <b>Main Mode</b> , this allows setting up to six encryption standards, in descending order of priority, to be used for the IP data that is being transferred. In <b>Aggressive Mode</b> , only one selection is permitted.                                                                                                                                                                                                                                                                                                                 |
| <b>Phase 2 PFS Group</b>                | Perfect forward secrecy (PFS) ensures that if a key was compromised, the attacker will be able to access only the data protected by that key.<br><b>None</b> - Do not request for PFS when initiating connection. However, since there is no valid reason to refuse PFS, the system will allow the connection to use PFS if requested by the remote peer. This is the default value.<br><b>Group 2: 1024-bit</b> Diffie-Hellman group. The larger the group number, the higher the security.<br><b>Group 5: 1536-bit</b> is the third option. |

### Phase 2 SA Lifetime

This setting specifies the lifetime limit of this Phase 2 Security Association. By default, it is set at **28800** seconds.

| WAN Connection Priority |               |
|-------------------------|---------------|
| Priority                | WAN Selection |
| 1                       | WAN 1         |
| 2                       | -----         |

### WAN Connection Priority

**WAN Connection** Select the appropriate WAN connection from the drop-down menu.

### IPsec Settings

#### DPD Interval

Time interval between Dead Peer Detection (DPD) messages (R\_U\_THERE in IKEv1 or INFORMATIONAL in IKEv2) that check if the peer is still active when no other traffic is present.

Default: 10 seconds (2–30 seconds)

#### DPD Attempts

Total number of DPD messages sent before the peer is considered unreachable.

Default: 3 times (2-10 times)

## 11 GRE Tunnel

Generic Routing Encapsulation (GRE) is a tunneling protocol that can encapsulate a wide variety of network layer protocols inside virtual point-to-point links over an Internet Protocol network. A GRE tunnel is similar to IPsec or SpeedFusion VPN.

To configure a GRE Tunnel, navigate to **Advanced > GRE Tunnel**.

| GRE Tunnel Profiles         | Remote Networks |
|-----------------------------|-----------------|
| No GRE profile defined      |                 |
| <a href="#">New Profile</a> |                 |

Click the **New Profile** button to create new GRE tunnel profiles that establish tunnel connections to remote tunnel endpoints via available WAN connections. To edit the profiles, click on its associated connection name in the leftmost column.



**GRE Tunnel Profile**
✕

| <b>Name</b>                              | <input style="width: 90%;" type="text"/>                                                                                                                                                                                                                                                                                                                           |         |             |                                          |                                                                                     |                                                                                                                                                      |  |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-------------|------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <b>Active</b>                            | <input checked="" type="checkbox"/>                                                                                                                                                                                                                                                                                                                                |         |             |                                          |                                                                                     |                                                                                                                                                      |  |
| <b>Remote GRE IP Address</b>             | <input style="width: 90%;" type="text"/>                                                                                                                                                                                                                                                                                                                           |         |             |                                          |                                                                                     |                                                                                                                                                      |  |
| <b>Tunnel Local IP Address</b>           | <input style="width: 90%;" type="text"/>                                                                                                                                                                                                                                                                                                                           |         |             |                                          |                                                                                     |                                                                                                                                                      |  |
| <b>Tunnel Remote IP Address</b>          | <input style="width: 90%;" type="text"/>                                                                                                                                                                                                                                                                                                                           |         |             |                                          |                                                                                     |                                                                                                                                                      |  |
| <b>Tunnel Subnet Mask</b>                | <input checked="" type="radio"/> Auto<br><input type="radio"/> <input style="width: 100px;" type="text" value="255.255.255.0 (/24)"/>                                                                                                                                                                                                                              |         |             |                                          |                                                                                     |                                                                                                                                                      |  |
| <b>Connection</b>                        | WAN <span>▼</span>                                                                                                                                                                                                                                                                                                                                                 |         |             |                                          |                                                                                     |                                                                                                                                                      |  |
| <b>Remote Networks</b>                   | <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Network</th> <th style="width: 50%;">Subnet Mask</th> </tr> </thead> <tbody> <tr> <td><input style="width: 90%;" type="text"/></td> <td> <input style="width: 90%;" type="text" value="255.255.255.0 (/24)"/> <span>▼</span> </td> </tr> </tbody> </table> | Network | Subnet Mask | <input style="width: 90%;" type="text"/> | <input style="width: 90%;" type="text" value="255.255.255.0 (/24)"/> <span>▼</span> | <div style="text-align: right; padding-right: 5px;"> <span style="border: 1px solid #ccc; padding: 2px 5px; background-color: #eee;">+</span> </div> |  |
| Network                                  | Subnet Mask                                                                                                                                                                                                                                                                                                                                                        |         |             |                                          |                                                                                     |                                                                                                                                                      |  |
| <input style="width: 90%;" type="text"/> | <input style="width: 90%;" type="text" value="255.255.255.0 (/24)"/> <span>▼</span>                                                                                                                                                                                                                                                                                |         |             |                                          |                                                                                     |                                                                                                                                                      |  |

Save
Cancel

| GRE Tunnel Profile Settings     |                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                     | This field is for specifying a name to represent this GRE Tunnel connection profile.                          |
| <b>Active</b>                   | When this box is checked, this GRE Tunnel connection profile will be enabled. Otherwise, it will be disabled. |
| <b>Remote GRE IP Address</b>    | This field is for entering the remote GRE's IP address                                                        |
| <b>Tunnel Local IP Address</b>  | This field is for specifying the tunnel source IP address.                                                    |
| <b>Tunnel Remote IP Address</b> | This field is for specifying the tunnel destination IP address                                                |
| <b>Tunnel Subnet Mask</b>       | This field is to select the subnet mask that is to be used for the GRE tunnel.                                |
| <b>Connection</b>               | Select the appropriate WAN connection from the drop-down menu.                                                |
| <b>Remote Networks</b>          | Input the LAN and subnets that are located at the remote site here.                                           |

## 12 OpenVPN

OpenVPN is a site to site VPN mode that can encapsulate a wide variety of network layer protocols inside virtual point-to-point links over an Internet Protocol network.

To configure a OpenVPN, navigate to **Advanced > OpenVPN** and click the **New Profile**.

| OpenVPN Profile Settings           |                                                                                                                                         |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                        | This field is for specifying a name to represent this OpenVPN profile.                                                                  |
| <b>Active</b>                      | When this box is checked, this OpenVPN connection profile will be enabled. Otherwise, it will be disabled.                              |
| <b>OpenVPN Profile</b>             | Upload the OpenVPN configuration (.ovpn) file from your service provider.                                                               |
| <b>Login Credential (Optional)</b> | This option is an optional for you to enter the username and password to login for the OpenVPN connection if the profile need to login. |
| <b>Connection</b>                  | Select the appropriate WAN connection from the drop-down menu.                                                                          |

## 13 Outbound Policy

Peplink routers can flexibly manage and load balance outbound traffic among WAN connections.

### Important Note

Outbound policy is applied only when more than one WAN connection is active.

The settings for managing and load balancing outbound traffic are located at **Advanced > Outbound Policy**.

**Outbound Policy** ( Drag and drop rows by the left to change rule order)

| Service                                     | Algorithm                | Source | Destination | Protocol / Port |   |
|---------------------------------------------|--------------------------|--------|-------------|-----------------|---|
| SpeedFusion VPN / OSPF / BGP / RIPv2 Routes |                          |        |             |                 |   |
| ≡ HTTPS Persistence                         | Persistence (Src) (Auto) | Any    | Any         | TCP 443         | X |
| Default                                     | (Auto)                   |        |             |                 |   |
| Add Rule                                    |                          |        |             |                 |   |

**Expert Mode**

Enabled
 

### 13.1 Adding Rules for Outbound Policy

The menu underneath enables you to define Outbound policy rules:

**Outbound Policy** ( Drag and drop rows by the left to change rule order)

| Service                                     | Algorithm                | Source | Destination | Protocol / Port |   |
|---------------------------------------------|--------------------------|--------|-------------|-----------------|---|
| SpeedFusion VPN / OSPF / BGP / RIPv2 Routes |                          |        |             |                 |   |
| ≡ HTTPS Persistence                         | Persistence (Src) (Auto) | Any    | Any         | TCP 443         | X |
| Default                                     | (Auto)                   |        |             |                 |   |
| Add Rule                                    |                          |        |             |                 |   |

The bottom-most rule is **Default**. Edit this rule to change the device's default manner of controlling outbound traffic for all connections that do not match any of the rules above it. Under the **Service** heading, click **Default** to change these settings.

To rearrange the priority of outbound rules, drag and drop them into the desired sequence.

Edit Default Custom Rule

|                                   |                                                                                                                                                                          |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Default Rule                      | <div> <div>?</div> <div> <input checked="" type="radio"/> Custom           <input type="radio"/> Auto         </div> </div>                                              |
| Algorithm                         | <div> <div>?</div> <div>Weighted Balance</div> </div>                                                                                                                    |
| Load Distribution Weight          | <div> <div>?</div> <div> <div>WAN 1 10</div> <div>WAN 2 10</div> <div>WAN 3 10</div> <div>WAN 4 10</div> <div>WAN 5 10</div> <div>Mobile Internet 10</div> </div> </div> |
| When No Connections are Available | <div> <div>?</div> <div> <div>Drop the Traffic</div> <div>Drop the Traffic</div> <div>Use Any Available Connections</div> </div> </div>                                  |

Save

Cancel

By default, **Auto** is selected as the **Default Rule**. You can select **Custom** to change the algorithm to be used. Please refer to the upcoming sections for the details on the available algorithms.

To create a custom rule, click **Add Rule** at the bottom of the table.

Add a New Custom Rule

|                                   |                                                                                                                                                |                            |                           |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|---------------------------|
| Service Name                      |                                                                                                                                                |                            |                           |
| Enable                            | <input checked="" type="checkbox"/> Always on                                                                                                  |                            |                           |
| Source                            | Any                                                                                                                                            |                            |                           |
| Destination                       | IP Network                                                                                                                                     |                            | Mask: 255.255.255.0 (/24) |
| Protocol                          | Any                                                                                                                                            | ← :: Protocol Selection :: |                           |
| Algorithm                         | Weighted Balance                                                                                                                               |                            |                           |
| Load Distribution Weight          | <div> <div>WAN 1 10</div> <div>WAN 2 10</div> <div>WAN 3 10</div> <div>WAN 4 10</div> <div>WAN 5 10</div> <div>Mobile Internet 10</div> </div> |                            |                           |
| When No Connections are Available | Drop the Traffic                                                                                                                               |                            |                           |

Save

Cancel

| New Custom Rule Settings |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|-----|-------------|-----|----------|------------|-----------|------------|-----------------|-------------|--------------------------|-------------|--|--------------------------|
| <b>Service Name</b>      | This setting specifies the name of the outbound traffic rule.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
| <b>Enable</b>            | <p>This setting specifies whether the outbound traffic rule takes effect. When <b>Enable</b> is checked, the rule takes effect: traffic is matched and actions are taken by the Peplink router based on the other parameters of the rule. When <b>Enable</b> is unchecked, the rule does not take effect: the Peplink router disregards the other parameters of the rule.</p> <p>Click the drop-down menu next to the checkbox to apply a time schedule to this custom rule.</p>                                                                                                                                                                                                                                                                                                                                    |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
| <b>Source</b>            | <p>This specifies the source IP address(es) and port number(s) to be matched for the firewall rule. Any, IP Address, IP Network, MAC Address, Client Type (for Outbound and Internal Firewall only), and Client's Associated SSID can be specified as the Source setting, as indicated in the following screenshots:</p> <div> <table> <tr> <td>Source</td><td>Any</td></tr> <tr> <td>Destination</td><td>Any</td></tr> <tr> <td>Protocol</td><td>IP Address</td></tr> <tr> <td>Algorithm</td><td>IP Network</td></tr> <tr> <td>Connection Type</td><td>MAC Address</td></tr> <tr> <td>Load Distribution Weight</td><td>Client Type</td></tr> <tr> <td></td><td>Client's Associated SSID</td></tr> </table> </div> <p>When you select Client Type as the Source, a drop-down list will appear for you to choose</p> | Source | Any | Destination | Any | Protocol | IP Address | Algorithm | IP Network | Connection Type | MAC Address | Load Distribution Weight | Client Type |  | Client's Associated SSID |
| Source                   | Any                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
| Destination              | Any                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
| Protocol                 | IP Address                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
| Algorithm                | IP Network                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
| Connection Type          | MAC Address                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
| Load Distribution Weight | Client Type                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |
|                          | Client's Associated SSID                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |        |     |             |     |          |            |           |            |                 |             |                          |             |  |                          |

the different types of client devices.

**Add a New Custom Rule**

|                                   |                                                                                                                                              |                           |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| Service Name                      |                                                                                                                                              |                           |
| Enable                            | <input checked="" type="checkbox"/>                                                                                                          |                           |
| Source                            | Client Type                                                                                                                                  | Unknown                   |
| Destination                       | IP Network                                                                                                                                   | Unknown                   |
| Protocol                          | Any                                                                                                                                          | Mask: 255.255.255.0 (/24) |
| Algorithm                         | Weighted Balance                                                                                                                             |                           |
| Connection Type                   | <input checked="" type="radio"/> WAN <input type="radio"/> SpeedFusion                                                                       |                           |
| Load Distribution Weight          | WAN: WAN 10<br>WAN: Cellular 10<br>WAN: Wi-Fi WAN on 2.4 GHz 10<br>WAN: Wi-Fi WAN on 5 GHz 10<br>WAN: VLAN WAN 1 10<br>WAN: OpenVPN WAN 1 10 |                           |
| When No Connections are Available | Drop the Traffic                                                                                                                             |                           |

Save Cancel

In addition, a single port, or a range of ports, can be specified for the **Source** settings.

This specifies the destination IP address(es) and port number(s) to be matched for the firewall rule. Any, IP Address, IP Network, Domain Name, SpeedFusion Connect, and SpeedFusion VPN Profile can be specified as the **Destination** setting, as indicated in the following screenshots:

## Destination

|                          |                         |                           |
|--------------------------|-------------------------|---------------------------|
| Destination              | IP Network              | Mask: 255.255.255.0 (/24) |
| Protocol                 | Any                     |                           |
| Algorithm                | IP Address              |                           |
| Connection Type          | IP Network              |                           |
| Load Distribution Weight | Domain Name             |                           |
|                          | SpeedFusion Connect     |                           |
|                          | SpeedFusion VPN Profile |                           |

In addition, a single port or a range of ports can be specified for the settings.

## Protocol and Port

This setting specifies the IP protocol and port of traffic that matches this rule. Via a drop-down menu, the following protocols can be specified:

- Any
- TCP
- UDP
- IP
- DSCP

Alternatively, the **Protocol Selection Tool** drop-down menu can be used to automatically fill in the protocol and port number of common Internet services (e.g., HTTP, HTTPS, etc.) After selecting an item from the **Protocol Selection Tool** drop-down menu, the protocol

|                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                  | and port number remains manually modifiable.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Algorithm</b>                                 | <p>This setting specifies the behavior of the Peplink router for the custom rule. One of the following values can be selected (Note that some Peplink routers provide only some of these options):</p> <ul style="list-style-type: none"> <li>• Weighted Balance</li> <li>• Persistence</li> <li>• Enforced</li> <li>• Priority</li> <li>• Overflow</li> <li>• Least Used</li> <li>• Lowest Latency</li> <li>• Fastest Response Time</li> </ul> <p>For a full explanation of each Algorithm, please see the following article:<br/> <a href="https://forum.peplink.com/t/exactly-how-do-peplinks-load-balancing-algorithms-work/8059">https://forum.peplink.com/t/exactly-how-do-peplinks-load-balancing-algorithms-work/8059</a></p> |
| <b>Load Distribution Weight</b>                  | This is to define the outbound traffic weight ratio for each WAN connection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>When No connections are available</b>         | <p>This field allows you to configure the default action when all the selected Connections are not available.</p> <p><b>Drop the Traffic</b> - Traffic will be discarded.</p> <p><b>Use Any Available Connections</b> - Traffic will be routed to any available Connection, even it is not selected in the list.</p> <p><b>Fall-through to Next Rule</b> - Traffic will continue to match the next Outbound Policy rule just like this rule is inactive.</p>                                                                                                                                                                                                                                                                          |
| <b>Terminate Sessions on Connection Recovery</b> | <p>This setting specifies whether to terminate existing IP sessions on a less preferred WAN connection in the event that a more preferred WAN connection is recovered. This setting is applicable to the <b>Priority</b> algorithms. By default, this setting is disabled. In this case, existing IP sessions will not be terminated or affected when any other WAN connection is recovered. When this setting is enabled, existing IP sessions may be terminated when another WAN connection is recovered, such that only the preferred healthy WAN connection(s) is used at any point in time.</p>                                                                                                                                  |

### 13.1.1 Algorithm: Weighted Balance

This setting specifies the ratio of WAN connection usage to be applied on the specified IP protocol and port. This setting is applicable only when **Algorithm** is set to **Weighted Balance**.

|                            |                                                                                                                                     |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Algorithm ?                | Weighted Balance ▼                                                                                                                  |
| Load Distribution Weight ? | <div>WAN 1 10</div> <div>WAN 2 10</div> <div>Wi-Fi WAN 10</div> <div>Cellular 1 10</div> <div>Cellular 2 10</div> <div>USB 10</div> |

The amount of matching traffic that is distributed to a WAN connection is proportional to the weight of the WAN connection relative to the total weight. Use the sliders to change each WAN's weight.

For example, with the following weight settings:

- Ethernet WAN1: 10
- Ethernet WAN2: 10
- Wi-Fi WAN: 10
- Orbit WAN 1: 10
- Orbit WAN 2: 10
- USB: 10

Total weight is 60 = (10 + 10 + 10 + 10 + 10 + 10).

Matching traffic distributed to Ethernet WAN1 is 16.7% = (10 / 60 x 100%.

Matching traffic distributed to Ethernet WAN2 is 16.7% = (10 / 60) x 100%.

Matching traffic distributed to Wi-Fi WAN is 16.7% = (10 / 60) x 100%.

Matching traffic distributed to Orbit WAN 1 is 16.7% = (10 / 60) x 100%.

Matching traffic distributed to Orbit WAN 2 is 16.7% = (10 / 60) x 100%.

Matching traffic distributed to USB is 16.7% = (10 / 60) x 100%.

### 13.1.2 Algorithm: Persistence

The configuration of persistent services is the solution to the few situations where link load distribution for Internet services is undesirable. For example, for security reasons, many e-banking and other secure websites terminate the session when the client computer's Internet IP address changes mid-session.

In general, different Internet IP addresses represent different computers. The security concern is that an IP address change during a session may be the result of an unauthorized intrusion attempt. Therefore, to prevent damages from the potential intrusion, the session is terminated



upon the detection of an IP address change.

Peplink routers can be configured to distribute data traffic across multiple WAN connections. Also, the Internet IP depends on the WAN connections over which communication actually takes place. As a result, a LAN client computer behind the Peplink router may communicate using multiple Internet IP addresses. For example, a LAN client computer behind a Peplink router with three WAN connections may communicate on the Internet using three different IP addresses.

With the persistence feature, rules can be configured to enable client computers to persistently utilize the same WAN connections for e-banking and other secure websites. As a result, a client computer will communicate using one IP address, eliminating the issues mentioned above.

|                          |                                                                                                                                                                                                                                    |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Algorithm                |  Persistence                                                                                                                                      |
| Persistence Mode         |  <input checked="" type="radio"/> By Source <input type="radio"/> By Destination                                                                  |
| Load Distribution        |  <input type="radio"/> Auto <input checked="" type="radio"/> Custom                                                                               |
| Load Distribution Weight |  <div> <div>WAN 1 10</div> <div>WAN 2 10</div> <div>Wi-Fi WAN 10</div> <div>Cellular 1 10</div> <div>Cellular 2 10</div> <div>USB 10</div> </div> |

There are two persistent modes: **By Source** and **By Destination**.

|                        |                                                                                                                                                                                                                                                 |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>By Source:</b>      | The same WAN connection will be used for traffic matching the rule and originating from the same machine, regardless of its destination. This option will provide the highest level of application compatibility.                               |
| <b>By Destination:</b> | The same WAN connection will be used for traffic matching the rule, originating from the same machine, and going to the same destination. This option can better distribute loads to WAN connections when there are only a few client machines. |

The default mode is **By Source**. When there are multiple client requests, they can be distributed (persistently) to WAN connections with a weight. If you choose **Auto** in **Load Distribution**, the weights will be automatically adjusted according to each WAN's **Downstream Bandwidth** which is specified in the WAN settings page). If you choose **Custom**, you can customize the weight of each WAN manually by using the sliders.

### 13.1.3 Algorithm: Enforced

This setting specifies the WAN connection usage to be applied on the specified IP protocol and port. This setting is applicable only when **Algorithm** is set to **Enforced**.

|                     |   |                                                                                                                                                                                                                              |
|---------------------|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Algorithm           | ? | Enforced                                                                                                                                                                                                                     |
| Enforced Connection | ? | <div> <div>WAN: WAN 1</div> <div> <div>WAN: WAN 1</div> <div>WAN: WAN 2</div> <div>WAN: Wi-Fi WAN</div> <div>WAN: Cellular 1</div> <div>WAN: Cellular 2</div> <div>WAN: USB</div> <div>VPN: Connection 1</div> </div> </div> |
|                     |   | <div>Save</div> <div>Cancel</div>                                                                                                                                                                                            |

Matching traffic will be routed through the specified WAN connection, regardless of the health check status of the WAN connection. Starting from Firmware 5.2, outbound traffic can be enforced to go through a specified SpeedFusion™ connection.

### 13.1.4 Algorithm: Priority

This setting specifies the priority of the WAN connections used to route the specified network service. The highest priority WAN connection available will always be used for routing the specified type of traffic. A lower priority WAN connection will be used only when all higher priority connections have become unavailable.

| Algorithm                                 | ?          | Priority                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
|-------------------------------------------|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|------------|----------|--|-----------------|--|-----------------|--|----------|--|-------------------|--|----------------|--|----------------|--|--------------------|--|-----------------|--|
| Priority Order                            | ?          | <table border="1"> <thead> <tr> <th>Highest Priority</th> <th>Not In Use</th> </tr> </thead> <tbody> <tr><td>WAN: WAN</td><td></td></tr> <tr><td>WAN: Cellular 1</td><td></td></tr> <tr><td>WAN: Cellular 2</td><td></td></tr> <tr><td>WAN: USB</td><td></td></tr> <tr><td>WAN: LAN 1 as WAN</td><td></td></tr> <tr><td>WAN: GRE WAN 1</td><td></td></tr> <tr><td>WAN: GRE WAN 2</td><td></td></tr> <tr><td>WAN: OpenVPN WAN 1</td><td></td></tr> <tr><td>Lowest Priority</td><td></td></tr> </tbody> </table> | Highest Priority | Not In Use | WAN: WAN |  | WAN: Cellular 1 |  | WAN: Cellular 2 |  | WAN: USB |  | WAN: LAN 1 as WAN |  | WAN: GRE WAN 1 |  | WAN: GRE WAN 2 |  | WAN: OpenVPN WAN 1 |  | Lowest Priority |  |
| Highest Priority                          | Not In Use |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| WAN: WAN                                  |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| WAN: Cellular 1                           |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| WAN: Cellular 2                           |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| WAN: USB                                  |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| WAN: LAN 1 as WAN                         |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| WAN: GRE WAN 1                            |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| WAN: GRE WAN 2                            |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| WAN: OpenVPN WAN 1                        |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| Lowest Priority                           |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| When No Connections are Available         | ?          | Drop the Traffic                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |
| Terminate Sessions on Connection Recovery | ?          | <input type="checkbox"/> Enable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |            |          |  |                 |  |                 |  |          |  |                   |  |                |  |                |  |                    |  |                 |  |

Starting from Firmware 5.2, outbound traffic can be prioritized to go through SpeedFusion™ connection(s). By default, VPN connections are not included in the priority list.

#### Tip

Configure multiple distribution rules to accommodate different kinds of services.

### 13.1.5 Algorithm: Overflow

The traffic matching this rule will be routed through the healthy WAN connection that has the highest priority and is not in full load. When this connection gets saturated, new sessions will be routed to the next healthy WAN connection that is not in full load.

|                |   |                                                                                                                                                                                                                       |
|----------------|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Algorithm      | ? | Overflow                                                                                                                                                                                                              |
| Overflow Order | ? | <div> Highest Priority <div> <div>WAN: WAN 1</div> <div>WAN: WAN 2</div> <div>WAN: Wi-Fi WAN</div> <div>WAN: Cellular 1</div> <div>WAN: Cellular 2</div> <div>WAN: USB</div> </div> <div>Lowest Priority</div> </div> |

Drag and drop to specify the order of WAN connections to be used for routing traffic. Only the highest priority healthy connection that is not in full load will be used.

### 13.1.6 Algorithm: Least Used

Add a New Custom Rule

|                                   |                                                                              |                  |                            |
|-----------------------------------|------------------------------------------------------------------------------|------------------|----------------------------|
| Service Name                      |                                                                              |                  |                            |
| Enable                            | <input checked="" type="checkbox"/>                                          |                  |                            |
| Source                            | ?                                                                            | Any              |                            |
| Destination                       | ?                                                                            | IP Network       | Mask: 255.255.255.0 (/24)  |
| Protocol                          | ?                                                                            | Any              | ← :: Protocol Selection :: |
| Algorithm                         | ?                                                                            | Least Used       |                            |
| Least Used Mode                   | <input checked="" type="radio"/> By Downlink <input type="radio"/> By Uplink |                  |                            |
| Connection                        | <input type="checkbox"/> WAN<br><input type="checkbox"/> VLAN WAN 1          |                  |                            |
| When No Connections are Available | ?                                                                            | Drop the Traffic |                            |

Save
Cancel

By default, traffic matching this rule will be routed through the healthy WAN connection that is selected in the '**Connection**' and has the most available download bandwidth. You can change it to 'By Uplink' to choose the connection that has the most available upload bandwidth.

The available download/upload bandwidth of a WAN connection is calculated from the total download/upload bandwidth specified on the WAN settings page and the current download/upload usage. The available bandwidth and WAN selection are determined every time an IP session is established.

### 13.1.7 Algorithm: Lowest Latency

|            |                                                                                                                                                                                                                                                                                                               |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Algorithm  | <div> <div>?</div> <div>Lowest Latency ▼</div> </div> <div>Note: Use of Lowest Latency will incur additional network usage.</div>                                                                                                                                                                             |
| Connection | <div> <input checked="" type="checkbox"/> WAN 1           <input checked="" type="checkbox"/> WAN 2           <input checked="" type="checkbox"/> Wi-Fi WAN           <input type="checkbox"/> Cellular 1           <input type="checkbox"/> Cellular 2           <input type="checkbox"/> USB         </div> |

The traffic matching this rule will be routed through the healthy WAN connection that is selected in **Connection** and has the lowest latency. Latency checking packets are issued periodically to a nearby router of each WAN connection to determine its latency value. The latency of a WAN is the packet round trip time of the WAN connection. Additional network usage may be incurred as a result.

#### Tip

The roundtrip time of a 6M down/640k uplink can be higher than that of a 2M down/2M up link because the overall round trip time is lengthened by its slower upload bandwidth, despite its higher downlink speed. Therefore, this algorithm is good for two scenarios:

- All WAN connections are symmetric; or
- A latency sensitive application must be routed through the lowest latency WAN, regardless of the WAN's available bandwidth.

### 13.1.8 Expert Mode

**Expert Mode** is available on some Peplink routers for use by advanced users. To enable the feature, click on the help icon and click **turn on Expert Mode**.

In Expert Mode, a new special rule, **SpeedFusion™ Routes**, is displayed in the **Custom Rules** table. This rule represents all SpeedFusion™ routes learned from remote VPN peers. By default, this bar is on the top of all custom rules. This position means that traffic for remote VPN subnets will be routed to the corresponding VPN peer. You can create custom **Priority** or **Enforced** rules and move them

above the bar to override the SpeedFusion™ routes.

Upon disabling Expert Mode, all rules above the bar will be removed.

Help

Close

This table allows you to fine tune how the outbound traffic should be distributed to the WAN connections.

Click the **Add Rule** button to add a new rule. Click the **X** button to remove a rule. Drag a rule to promote or demote its precedence. A higher position of a rule signifies a higher precedence. You may change the default outbound policy behavior by clicking the **Default** link.

If you require advanced control of PepVPN traffic, [turn on Expert Mode](#).

## 14 Port Forwarding

Peplink routers can act as a firewall that blocks, by default, all inbound access from the Internet. By using port forwarding, Internet users can access servers behind the Peplink router. Inbound port forwarding rules can be defined at **Advanced > Port Forwarding**.

| Service             | IP Address(es) | Server | Protocol |
|---------------------|----------------|--------|----------|
| No Services Defined |                |        |          |
| Add Service         |                |        |          |

To define a new service, click **Add Service**.

**Port Forwarding**

|                                                             |                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enable                                                      | <input checked="" type="checkbox"/>                                                                                                                                                                                                                                                                                                                                      |
| Service Name                                                | <input type="text"/>                                                                                                                                                                                                                                                                                                                                                     |
| Protocol                                                    | TCP < < :: Protocol Selection :: >                                                                                                                                                                                                                                                                                                                                       |
| Port                                                        | Any Port >                                                                                                                                                                                                                                                                                                                                                               |
| Inbound IP Address(es)<br>(Require at least one IP address) | <div> <div>?</div> <div> <b>Connection / IP Address(es)</b> <div>All</div> <div>Clear</div> </div> <div> <input type="checkbox"/> WAN           <input type="checkbox"/> Cellular           <input type="checkbox"/> Wi-Fi WAN on 2.4 GHz           <input type="checkbox"/> Wi-Fi WAN on 5 GHz           <input type="checkbox"/> SpeedFusion VPN         </div> </div> |
| Server IP Address                                           | <div>?</div> <input type="text"/>                                                                                                                                                                                                                                                                                                                                        |

Save

Cancel

| Port Forwarding Settings |                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>            | This setting specifies whether the inbound service takes effect. When <b>Enable</b> is checked, the inbound service takes effect: traffic is matched and actions are taken by the Peplink router based on the other parameters of the rule. When this setting is disabled, the inbound service does not take effect: the Peplink router disregards the other parameters of the rule. |
| <b>Service Name</b>      | This setting identifies the service to the system administrator. Valid values for this setting consist of only alphanumeric and underscore “_” characters.                                                                                                                                                                                                                           |

## Protocol

The **IP Protocol** setting, along with the **Port** setting, specifies the protocol of the service as TCP, UDP, ICMP, or IP. Traffic that is received by the Peplink router via the specified protocol at the specified port(s) is forwarded to the LAN hosts specified by the **Servers** setting. Please see below for details on the **Port** and **Servers** settings. Alternatively, the **Protocol Selection Tool** drop-down menu can be used to automatically fill in the protocol and a single port number of common Internet services (e.g. HTTP, HTTPS, etc.). After selecting an item from the **Protocol Selection Tool** drop-down menu, the protocol and port number remain manually modifiable.

The **Port** setting specifies the port(s) that correspond to the service, and can be configured to behave in one of the following manners:

### Any Port, Single Port, Port Range, Port Map, and Range Mapping

|      |   |          |
|------|---|----------|
| Port | ? | Any Port |
|------|---|----------|

**Any Port:** all traffic that is received by the Peplink router via the specified protocol is forwarded to the servers specified by the **Servers** setting. For example, with **IP Protocol** set to **TCP**, and **Port** set to **Any Port**, all TCP traffic is forwarded to the configured servers.

|      |   |             |                  |
|------|---|-------------|------------------|
| Port | ? | Single Port | Service Port: 80 |
|------|---|-------------|------------------|

**Single Port:** traffic that is received by the Peplink router via the specified protocol at the specified port is forwarded via the same port to the servers specified by the **Servers** setting. For example, with **IP Protocol** set to **TCP**, and **Port** set to **Single Port** and **Service Port** 80, TCP traffic received on port 80 is forwarded to the configured servers via port 80.

## Port

|      |   |            |                        |
|------|---|------------|------------------------|
| Port | ? | Port Range | Service Ports: 80 - 88 |
|------|---|------------|------------------------|

**Port Range:** traffic that is received by the Peplink router via the specified protocol at the specified port range is forwarded via the same respective ports to the LAN hosts specified by the **Servers** setting. For example, with **IP Protocol** set to **TCP**, and **Port** set to **Port Range** and **Service Ports** 80-88, TCP traffic received on ports 80 through 88 is forwarded to the configured servers via the respective ports.

|      |   |              |                  |                 |
|------|---|--------------|------------------|-----------------|
| Port | ? | Port Mapping | Service Port: 80 | Map to Port: 88 |
|------|---|--------------|------------------|-----------------|

**Port Mapping:** traffic that is received by Peplink router via the specified protocol at the specified port is forwarded via a different port to the servers specified by the **Servers** setting.

For example, with **IP Protocol** set to **TCP**, and **Port** set to **Port Mapping**, **Service Port** 80, and **Map to Port** 88, TCP traffic on port 80 is forwarded to the configured servers via port 88.

(Please see below for details on the **Servers** setting.)

|                                                                                                                                                                                                                              |                                                                                                                |                        |  |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|------------------------|--|
| Port                                                                                                                                                                                                                         | <span>?</span> Range Mapping ▾                                                                                 | Service Ports: 80 ~ 88 |  |
|                                                                                                                                                                                                                              |                                                                                                                | Map to Ports: 88 ~ 96  |  |
| <p><b>Range Mapping:</b> traffic that is received by the Peplink router via the specified protocol at the specified port range is forwarded via a different port to the servers specified by the <b>Servers</b> setting.</p> |                                                                                                                |                        |  |
| <b>Inbound IP Address(es)</b>                                                                                                                                                                                                | This setting specifies the WAN connections and Internet IP address(es) from which the service can be accessed. |                        |  |
| <b>Server IP Address</b>                                                                                                                                                                                                     | This setting specifies the LAN IP address of the server that handles the requests for the service.             |                        |  |

## 14.1 UPnP / NAT-PMP Settings

UPnP and NAT-PMP are network protocols which allow a computer connected to the LAN port to automatically configure the router to allow parties on the WAN port to connect to itself. That way, the process of inbound port forwarding becomes automated.

When a computer creates a rule using these protocols, the specified TCP/UDP port of all WAN connections' default IP address will be forwarded.

Check the corresponding box(es) to enable UPnP and/or NAT-PMP. Enable these features only if you trust the computers connected to the LAN ports.

| UPnP / NAT-PMP Settings <span>?</span> |                                 |
|----------------------------------------|---------------------------------|
| UPnP                                   | <input type="checkbox"/> Enable |
| NAT-PMP                                | <input type="checkbox"/> Enable |
| <input type="button" value="Save"/>    |                                 |

When the options are enabled, a table listing all the forwarded ports under these two protocols can be found at **Status > UPnP / NAT-PMP**.

## 15 NAT Mappings

NAT mappings allow IP address mapping of all inbound and outbound NAT'd traffic to and from an internal client IP address. Settings to configure NAT mappings are located at **Advanced > NAT Mappings**.

| LAN Clients  | Inbound Mappings                   | Outbound Mappings     |  |
|--------------|------------------------------------|-----------------------|--|
| 192.168.1.23 | (WAN 1):10.88.3.158 (Interface IP) | Use Interface IP only |  |
| Add NAT Rule |                                    |                       |  |

To add a rule for NAT mappings, click **Add NAT Rule**.

**NAT Mappings**

|                      |                                                                                                                                                                                                                                                                                                                                    |     |                               |          |              |                      |              |                    |              |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|-------------------------------|----------|--------------|----------------------|--------------|--------------------|--------------|
| LAN Client           | IP Address                                                                                                                                                                                                                                                                                                                         |     |                               |          |              |                      |              |                    |              |
| IP Address           | <input type="text"/>                                                                                                                                                                                                                                                                                                               |     |                               |          |              |                      |              |                    |              |
| Inbound Mappings     | <b>Connection / Inbound IP Address(es)</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> WAN</li> <li><input type="checkbox"/> Cellular</li> <li><input type="checkbox"/> Wi-Fi WAN on 2.4 GHz</li> <li><input type="checkbox"/> Wi-Fi WAN on 5 GHz</li> <li><input type="checkbox"/> SpeedFusion VPN</li> </ul> |     |                               |          |              |                      |              |                    |              |
| Outbound Mappings    | <b>Connection / Outbound IP Address</b> <table> <tr> <td>WAN</td> <td>192.168.52.152 (Interface IP) </td> </tr> <tr> <td>Cellular</td> <td>Interface IP </td> </tr> <tr> <td>Wi-Fi WAN on 2.4 GHz</td> <td>Interface IP </td> </tr> <tr> <td>Wi-Fi WAN on 5 GHz</td> <td>Interface IP </td> </tr> </table>                         | WAN | 192.168.52.152 (Interface IP) | Cellular | Interface IP | Wi-Fi WAN on 2.4 GHz | Interface IP | Wi-Fi WAN on 5 GHz | Interface IP |
| WAN                  | 192.168.52.152 (Interface IP)                                                                                                                                                                                                                                                                                                      |     |                               |          |              |                      |              |                    |              |
| Cellular             | Interface IP                                                                                                                                                                                                                                                                                                                       |     |                               |          |              |                      |              |                    |              |
| Wi-Fi WAN on 2.4 GHz | Interface IP                                                                                                                                                                                                                                                                                                                       |     |                               |          |              |                      |              |                    |              |
| Wi-Fi WAN on 5 GHz   | Interface IP                                                                                                                                                                                                                                                                                                                       |     |                               |          |              |                      |              |                    |              |

Save
Cancel

| NAT Mapping Settings |                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>LAN Client</b>    | NAT mapping rules can be defined for a single LAN <b>IP Address</b> , an <b>IP Range</b> , or an <b>IP Network</b> .                                                                                                                                                  |
| <b>IP Address</b>    | This refers to the LAN host's private IP address. The system maps this address to a number of public IP addresses (specified below) in order to facilitate inbound and outbound traffic. This option is only available when <b>IP Address</b> is selected.            |
| <b>IP Range</b>      | The IP range is a contiguous group of private IP addresses used by the LAN host. The system maps these addresses to a number of public IP addresses (specified below) to facilitate outbound traffic. This option is only available when <b>IP Range</b> is selected. |



|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>IP Network</b>        | The IP network refers to all private IP addresses and ranges managed by the LAN host. The system maps these addresses to a number of public IP addresses (specified below) to facilitate outbound traffic. This option is only available when <b>IP Network</b> is selected.                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Inbound Mappings</b>  | <p>This setting specifies the WAN connections and corresponding WAN-specific Internet IP addresses on which the system should bind. Any access to the specified WAN connection(s) and IP address(es) will be forwarded to the LAN host. This option is only available when <b>IP Address</b> is selected in the <b>LAN Client(s)</b> field.</p> <p><b>Note that:</b> inbound mapping is not needed for WAN connections in drop-in mode or IP forwarding mode. Also note that each WAN IP address can be associated to one NAT mapping only.</p>                                                                                                             |
| <b>Outbound Mappings</b> | <p>This setting specifies the WAN IP addresses that should be used when an IP connection is made from a LAN host to the Internet. Each LAN host in an IP range or IP network will be evenly mapped to one of each selected WAN's IP addresses (for better IP address utilization) in a persistent manner (for better application compatibility).</p> <p><b>Note that:</b> if you do not want to use a specific WAN for outgoing accesses, you should still choose default here, then customize the outbound access rule in the <b>Outbound Policy</b> section. Also note that WAN connections in drop-in mode or IP forwarding mode are not shown here.</p> |

Click **Save** to save the settings when configuration has been completed.

#### Important Note


Inbound firewall rules override the **Inbound Mappings** settings.

## 16 Media Fast

MediaFast settings can be configured from the **Advanced** menu.

### 16.1 Setting Up MediaFast Content Caching

To access MediaFast content caching settings, select **Advanced > Cache Control**

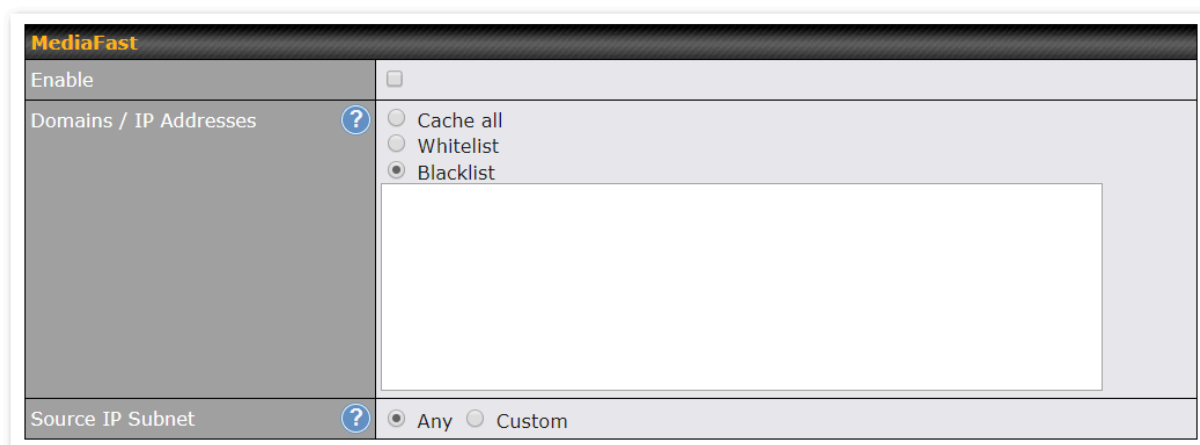

| MediaFast                |                                                                                                                                 |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Enable                   | <input type="checkbox"/>                                                                                                        |
| Domains / IP Addresses ? | <input type="radio"/> Cache all<br><input type="radio"/> Whitelist<br><input checked="" type="radio"/> Blacklist<br><div></div> |
| Source IP Subnet ?       | <input checked="" type="radio"/> Any <input type="radio"/> Custom                                                               |

| MediaFast                     |                                                                                                                                                                                                    |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>                 | Click the checkbox to enable MediaFast content caching.                                                                                                                                            |
| <b>Domains / IP Addresses</b> | Choose to <b>Cache on all domains</b> , or enter domain names and then choose either <b>Whitelist</b> (cache the specified domains only) or <b>Blacklist</b> (do not cache the specified domains). |
| <b>Source IP Subnet</b>       | This setting allows caching to be enabled on custom subnets only.<br>If "Any" is selected, then caching will apply to all subnets.                                                                 |

| Secure Content Caching |                                                                                                                                                                                                     |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enable                 | <input type="checkbox"/><br>Note: Please enable MediaFast for Secure Content Caching                                                                                                                |
| Domains / IP Addresses | <input type="radio"/> Cache all<br><input checked="" type="radio"/> Whitelist<br><input type="radio"/> Blacklist<br><div>             googlevideo.com<br/>             youtube.com           </div> |
| Source IP Subnet       | <input checked="" type="radio"/> Any <input type="radio"/> Custom                                                                                                                                   |

The **Secure Content Caching** menu operates identically to the **MediaFast** menu, except it is for secure content caching accessible through https://. In order for Mediafast devices to cache and deliver HTTPS content, every client needs to have the necessary certificates installed\*.


\*See <https://forum.peplink.com/t/certificate-installation-for-mediafast-https-caching/>

| Cache Control           |                                                                                                                                                                                                      |                |                 |  |  |  |   |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|-----------------|--|--|--|---|
| Content Type            | <input checked="" type="checkbox"/> Video<br><input checked="" type="checkbox"/> Audio<br><input checked="" type="checkbox"/> Images<br><input checked="" type="checkbox"/> OS / Application Updates |                |                 |  |  |  |   |
| Cache Lifetime Settings | <table border="1"> <thead> <tr> <th>File Extension</th> <th>Lifetime (days)</th> <th></th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>+</td> </tr> </tbody> </table>                        | File Extension | Lifetime (days) |  |  |  | + |
| File Extension          | Lifetime (days)                                                                                                                                                                                      |                |                 |  |  |  |   |
|                         |                                                                                                                                                                                                      | +              |                 |  |  |  |   |

| Cache Control                  |                                                                                                                                                                                                |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Content Type</b>            | Check these boxes to cache the listed content types or leave boxes unchecked to disable caching for the listed types.                                                                          |
| <b>Cache Lifetime Settings</b> | Enter a file extension, such as JPG or DOC. Then enter a lifetime in days to specify how long files with that extension will be cached. Add or delete entries using the controls on the right. |

## 16.2 Viewing MediaFast Statistics

To get details on storage and bandwidth usage, select **Status > MediaFast**.

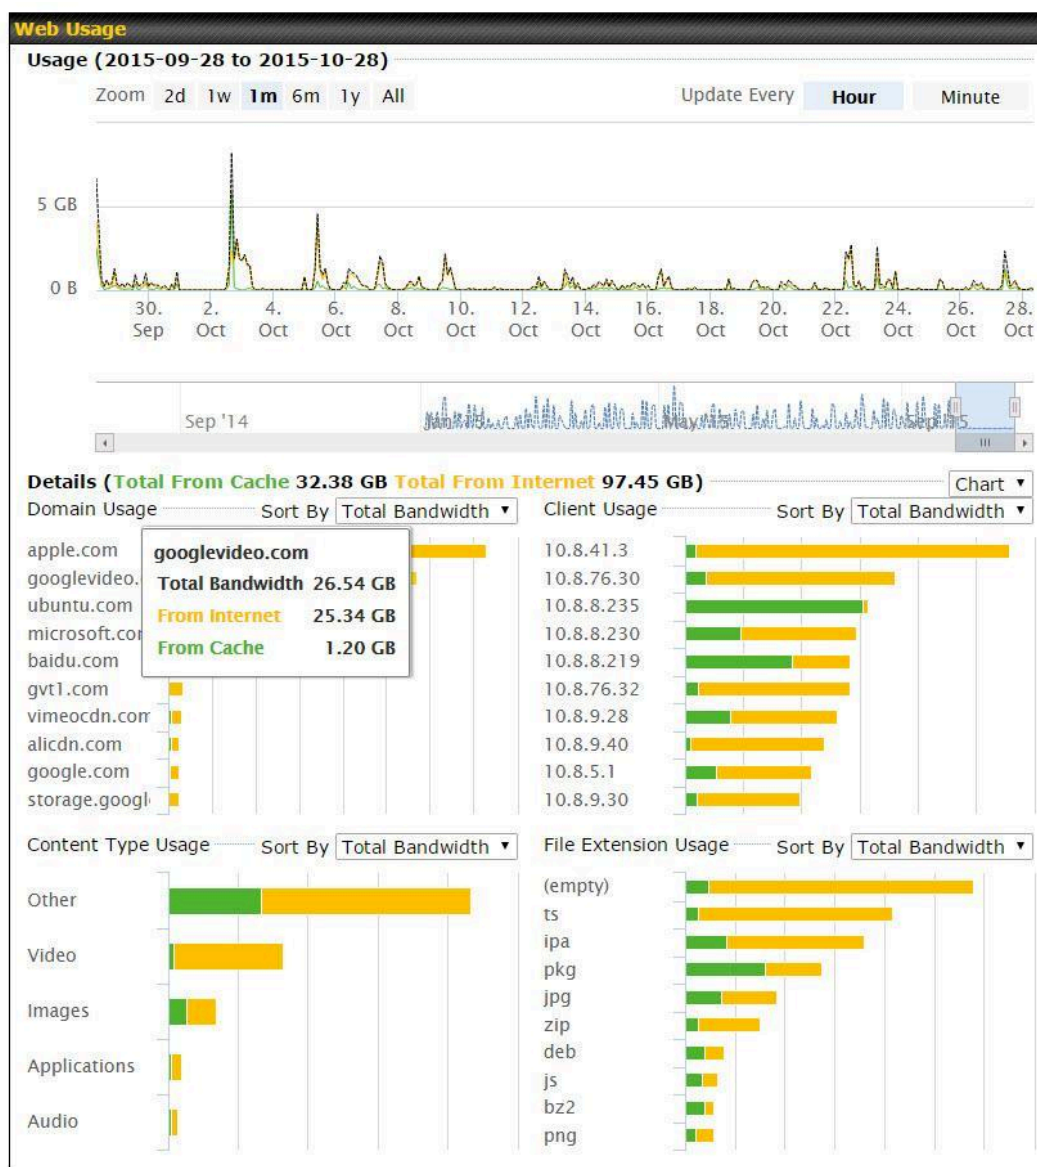

## 16.3 Prefetch Schedule

Content prefetching allows you to download content on a schedule that you define, which can help to preserve network bandwidth during busy times and keep costs down. To access MediaFast content prefetching settings, select **Advanced > Prefetch Schedule**.

| Prefetch Schedule                                                |             |               |               |               |        |               |         |
|------------------------------------------------------------------|-------------|---------------|---------------|---------------|--------|---------------|---------|
| Name                                                             | Status      | Next Run Time | Last Run Time | Last Duration | Result | Last Download | Actions |
| ▶ Course Progress                                                | Downloading | 04-11 06:00   | 04-09 02:03   | -             |        | 0 B           |         |
| ▶ National Geog                                                  | Ready       | 04-11 00:00   | 04-09 00:00   | 00:01         |        | 4.98 kB       |         |
| ▶ Syllabus                                                       | Downloading | 04-11 06:00   | 04-09 06:00   | -             |        | 0 B           |         |
| ▶ Vimeo                                                          | Ready       | 04-11 00:00   | 04-09 02:03   | 00:01         |        | 115.91 kB     |         |
| ▶ ted                                                            | Ready       | 04-11 00:00   | 04-09 00:00   | 00:01         |        | 62.26 kB      |         |
| <a href="#">New Schedule</a>                                     |             |               |               |               |        |               |         |
| Tools                                                            |             |               |               |               |        |               |         |
| <a href="#">Clear Web Cache</a> <a href="#">Clear Statistics</a> |             |               |               |               |        |               |         |

| Prefetch Schedule Settings         |                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                        | This field displays the name given to the scheduled download.                                                                                                                                                                                                                                                                                                                                                       |
| <b>Status</b>                      | Check the status of your scheduled download here.                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Next Run Time/Last Run Time</b> | These fields display the date and time of the next and most recent occurrences of the scheduled download.                                                                                                                                                                                                                                                                                                           |
| <b>Last Duration</b>               | Check this field to ensure that the most recent download took as long as expected to complete. A value that is too low might indicate an incomplete download or incorrectly specified download target, while a value that is too long could mean a download with an incorrectly specified target or stop time.                                                                                                      |
| <b>Result</b>                      | This field indicates whether downloads are in progress () or complete () .                                                                                                                                                                                                                                                                                                                                          |
| <b>Last Download</b>               | Check this field to ensure that the most recent download file size is within the expected range. A value that is too low might indicate an incomplete download or incorrectly specified download target, while a value that is too long could mean a download with an incorrectly specified target or stop time. This field is also useful for quickly seeing which downloads are consuming the most storage space. |
| <b>Actions</b>                     | <p>To begin a scheduled download immediately, click  .</p> <p>To cancel a scheduled download, click  .</p> <p>To edit a scheduled download, click  .</p> <p>To delete a scheduled download, click  .</p>                                                                                                                                                                                                            |

Click to begin creating a new scheduled download. Clicking the button will cause the following screen to appear:

### New Schedule

MediaFast Schedule

Name (optional)

Active

☒

URL

URL

+

Depth

2

▼

levels

Default

Time Period

From

00

▼

:

00

▼

to

01

▼

:

00

▼

Repeat

Everyday

▼

Bandwidth Limit

0

Gbps

▼

(0: Unlimited)

Save & Apply Now

Cancel

Simply provide the requested information to create your schedule.

### Clear Web Cache

To clear all cached content, click this button. Note that this action cannot be undone.

### Clear Statistics

To clear all prefetch and status page statistics, click this button.

## 17 Edge Computing

ContentHub allows you to deliver webpages and applications to users connected to the SSID using the local storage on your router, like the Max HD2/HD4 with Mediafast, which can store up to 8GB of media. Users will be able to access news, articles, videos, and access your web app without the need for internet access.


The ContentHub can be used to provide infotainment to connected users on transport.

### 17.1 Configuring the ContentHub

ContentHub storage needs to be configured before content can be uploaded to the ContentHub. Click on the link on the information panel to configure storage.

ContentHub storage has not been configured. Click [here](#) to review storage configuration

To access ContentHub, navigate to **Advanced > ContentHub** and check the **Enable** box.

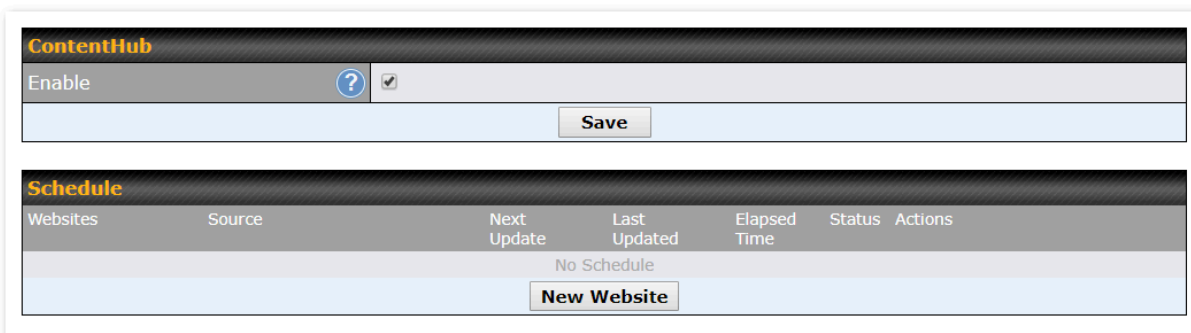

| ContentHub                   |        |                                     |              |              |        |         |
|------------------------------|--------|-------------------------------------|--------------|--------------|--------|---------|
| Enable                       |        | <input checked="" type="checkbox"/> |              |              |        |         |
| <button>Save</button>        |        |                                     |              |              |        |         |
| Schedule                     |        |                                     |              |              |        |         |
| Websites                     | Source | Next Update                         | Last Updated | Elapsed Time | Status | Actions |
| No Schedule                  |        |                                     |              |              |        |         |
| <button>New Website</button> |        |                                     |              |              |        |         |

On an external server, configure content (a website or application) that will be synced to the ContentHub. For example, an html5 website.

To configure a website or application as content, follow the steps below.

### 17.2 Configure a website for ContentHub

This option allows you to sync a website to the Peplink router. This website will then be published with the specified domain from the router itself and makes the content available to the client via the HTTP/HTTPS protocol.

Only FTP sync is supported for this type of ContentHub content.

The content should be uploaded to an FTP server before you sync it with ContentHub.

Click **New Website** and a window with the following configuration options will appear:

Schedule

|                 |                                                                            |
|-----------------|----------------------------------------------------------------------------|
| Active          | <input checked="" type="checkbox"/>                                        |
| Type            | <input checked="" type="radio"/> Website <input type="radio"/> Application |
| Protocol        | HTTP                                                                       |
| Domain/Path     | http://                                                                    |
| Source          | ftp ://<br>Username:<br>Password:                                          |
| Period          | Everyday<br>From 00 : 00 to 01 : 00                                        |
| Bandwidth Limit | 0 Gbps (0: Unlimited)                                                      |

Save & Apply Now

Cancel

| Schedule               |                                                                                                                                         |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Active</b>          | Checking the box toggles the activation of the content.                                                                                 |
| <b>Type</b>            | Select the type of content: Website or Application.                                                                                     |
| <b>Protocol</b>        | Configure the protocol to be used: HTTP, HTTPS or both.                                                                                 |
| <b>Domain/Path</b>     | Enter the URL for the ContentHub to use as the domain name for client access (such as http://mytest.com).                               |
| <b>Method</b>          | Only applicable for <b>Application</b> type content. Choose between sync or file upload.                                                |
| <b>Source</b>          | Enter the details of the server that the content will be downloaded from. Enter credentials under <b>Username</b> and <b>Password</b> . |
| <b>Period</b>          | This field determines how often the router will search for updates to the source content.                                               |
| <b>Bandwidth Limit</b> | Set a bandwidth limit for clients.                                                                                                      |



Click “**Save & Apply Now**” to activate the changes. A screenshot of the display after configuration is shown below:

| Schedule               |                          |             |              |              |        |                                                         |  |
|------------------------|--------------------------|-------------|--------------|--------------|--------|---------------------------------------------------------|--|
| Websites               | Source                   | Next Update | Last Updated | Elapsed Time | Status | Actions                                                 |  |
| ▼ http://mytest.com    |                          |             |              |              |        | <div><div></div><div></div><div></div></div>            |  |
| /(root)                | ftp://10.8.76.254/web... | -           | -            | -            |        | <div><div></div><div></div><div></div><div></div></div> |  |
| <div>New Website</div> |                          |             |              |              |        |                                                         |  |

The content will be synced regularly according to the time set in the **Period** that was configured earlier.

If you want to activate the sync manually, you can click the “” icon. The “Status” column will display the sync progress. When the sync is completed, a summary will be displayed, as shown in the screenshot below:

| Schedule            |                          |             |              |              |                                      |                                                         |  |
|---------------------|--------------------------|-------------|--------------|--------------|--------------------------------------|---------------------------------------------------------|--|
| Websites            | Source                   | Next Update | Last Updated | Elapsed Time | Status                               | Actions                                                 |  |
| ▼ http://mytest.com |                          |             |              |              |                                      | <div><div>+</div><div></div><div></div></div>           |  |
| /(root)             | ftp://10.8.76.254/web... | -           | 05-23 03:41  | 00:00:11     | <div><div></div></div>               | <div><div></div><div></div><div></div><div></div></div> |  |
| New Website         |                          |             |              |              | Status details <a href="#">Close</a> |                                                         |  |
|                     |                          |             |              |              | Completed<br>+1 / 0 / -0 files       |                                                         |  |

To access the content, open a browser in the MFA’s client and enter the domain details that were configured earlier (such as <http://mytest.com>).

## 17.3 Configure an application for ContentHub

MediaFast routers allow you to configure and publish any application from the router itself by using one of the supported frameworks below:

- Python (version 2.7.12)
- Ruby (version 2.3.3)
- Node.js (version 6.9.2)

Install the desired framework under “Package Manager” as shown below:

**PEPWAVE**
Dashboard
SpeedFusion Cloud
Network
Advanced
AP
**System**
Status
Apply Changes

**System**

- Admin Security
- Firmware
- Time
- Schedule
- Email Notification
- Event Log
- SNMP
- InControl
- Configuration
- Feature Add-ons
- Reboot

**Tools**

- Ping
- Traceroute
- Wake-on-LAN
- WAN Analysis
- Storage Manager
- Package Manager**

(Last Update: Tue May 23 04:02:36 UTC 2017)

| Package List                                                                                     |  | Update All |
|--------------------------------------------------------------------------------------------------|--|------------|
| <b>Node.js</b><br>Version: 6.9.2 (17178)<br>Size: 8.99 MB<br>Date: Fri Feb 24 07:45:28 UTC 2017  |  |            |
| <b>Python</b><br>Version: 2.7.12 (17178)<br>Size: 20.29 MB<br>Date: Fri Feb 24 07:45:28 UTC 2017 |  |            |
| <b>Ruby</b><br>Version: 2.3.3 (17178)<br>Size: 31.44 MB<br>Date: Fri Feb 24 07:45:30 UTC 2017    |  |            |

After installing the framework, change the "Type" to "Application" and configure the website.

Schedule

Active

☒

Type

☐ Website
☒ Application

Protocol

HTTP

Domain

Method

☒ Sync
☐ File Upload

Source

ftp

://

Username:

Password:

Period

Everyday

From 00:00 to 01:00

Bandwidth Limit

0

Gbps

(0: Unlimited)

Save & Apply Now

Cancel

The setting is the same as the Website type (refer to the description in the section above).

Application type content need to be packed as explained below:

1. Implement two bash script files, start.sh and stop.sh in the root folder, to start and stop your application. The MediaFast router will only execute start.sh and stop.sh when the corresponding website is enabled and disabled respectively.
2. Compress the application files and the bash script to .tar.gz format.
3. Upload this tar file to the router.

## 18 Docker

MediaFast enabled routers can host Docker containers when running Firmware 7.1 or later.

Docker is an open platform for developing, shipping, and running applications.

From Firmware version 7.1.0 and upwards, it is possible to install and run Docker Containers on your Peplink routers with MediaFast, such as the MAX HD2 and the MAX HD4.

Due to the nature of Docker and its unlimited variables, this feature is supported by Peplink up to the point of creating a running Docker Container.

Information about Docker can be found on the Docker Documentation site:

<https://docs.docker.com/> 2

This will allow you to run a file sharing platform (ownCloud), a web server (WordPress, Joomla!) , a learning platform (Moodle), or a visualisation tool for viewing large scale data (Kibana).

When creating a new Docker Container, the Peplink router will search through the Docker Hub repository. <https://hub.docker.com/explore/> 7

For detailed configuration instructions, refer to our knowledge base:

<https://forum.peplink.com/t/how-to-run-a-docker-application-on-a-peplink-mediafast-router/16021>

## 19 QoS

### 19.1 User Groups

Other than the three default user groups, you can add more user groups by entering the group name into the column and clicking the '+' button. The user group limit is up to 10.

User Group

| Name     |   |
|----------|---|
| Manager  | X |
| Staff    | X |
| Guest    | X |
| Group#4  | X |
| Group#5  | X |
| Group#6  | X |
| Group#7  | X |
| Group#8  | X |
| Group#9  | X |
| Group#10 | X |
|          | + |

Save

### 19.2 Bandwidth Control

This section is to define how much minimum bandwidth will be reserved to each user group when a WAN connection is **in full load**. When this feature is enabled, a slider with two indicators will be shown. You can move the indicators to adjust each group's weighting. The lower part of the table shows the corresponding reserved download and uploads bandwidth value of each connection.

By default, **50%** of bandwidth has been reserved for Manager, **30%** for Staff, and **20%** for Guest.

Group Bandwidth Reservation

Enable

☒

|             | Manager       | Staff         | Guest         |
|-------------|---------------|---------------|---------------|
| Bandwidth % | 50%           | 30%           | 20%           |
| WAN 1       | 500.0M/500.0M | 300.0M/300.0M | 200.0M/200.0M |
| WAN 2       | 500.0M/500.0M | 300.0M/300.0M | 200.0M/200.0M |

You can define a maximum download speed (over all WAN connections) and upload speed (for

each WAN connection) that each individual Staff and Guest member can consume. No limit can be imposed on individual Managers. By default, download and upload bandwidth limits are set to unlimited (set as **0**).

| Individual Bandwidth Limit |                                     |           |      |           |                     |
|----------------------------|-------------------------------------|-----------|------|-----------|---------------------|
| Enable                     | <input checked="" type="checkbox"/> |           |      |           |                     |
| User Bandwidth Limit       |                                     | Download  |      | Upload    |                     |
|                            | Manager                             | Unlimited |      | Unlimited |                     |
|                            | Staff                               | 0         | Mbps | 0         | Mbps (0: Unlimited) |
|                            | Guest                               | 0         | Mbps | 0         | Mbps (0: Unlimited) |

## 19.3 Application Queue

This section is to define the QoS Application Queue. You can set guaranteed bandwidth for a queue and assign it to applications.

| QoS Application Queue              |  |
|------------------------------------|--|
| No Application Queue Defined       |  |
| <input type="button" value="Add"/> |  |

Click the Add button to create the QoS Application Queue.

 
| Add Queue                                                                 |                                                                                                                          |
|---------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Name                                                                      | <input type="text"/>                                                                                                     |
| Bandwidth                                                                 | <input type="checkbox"/> Upload <input type="text"/> Mbps<br><input type="checkbox"/> Download <input type="text"/> Mbps |
| Borrow Spare Bandwidth                                                    | <input type="checkbox"/>                                                                                                 |
| <input type="button" value="Save"/> <input type="button" value="Cancel"/> |                                                                                                                          |

| Add Queue                     |                                                                                                                                                                         |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                   | This setting specifies a name for the QoS Application Queue.                                                                                                            |
| <b>Bandwidth</b>              | Bandwidth to be reserved (for each WAN connection) for this queue. When WAN is congested, this bandwidth will remain available for applications assigned to this queue. |
| <b>Borrow Spare Bandwidth</b> | Enable this option if you want this queue to utilize WAN's unused bandwidth.                                                                                            |

## 19.4 Application

### 19.4.1 Application Prioritization

On many Peplink routers, you can choose whether to apply the same prioritization settings to all user groups or customize the settings for each group.



**Application Prioritization** ⓘ

☒ Apply same settings to all users

☐ Customize


Three application priority levels can be set: ↑ High, — Normal, and ↓ Low. Peplink routers can detect various application traffic types by inspecting the packet content. Select an application by choosing a supported application, or by defining a custom application manually. The priority preference of supported applications is placed at the top of the table. Custom applications are at the bottom.

| Application                          | Manager  | Staff    | Guest    | ? |
|--------------------------------------|----------|----------|----------|---|
| All Supported Streaming Applications | ↑ High ✓ | ↑ High ✓ | ↑ High ✓ | ✗ |
| All Database Applications            | ↑ High ✓ | ↑ High ✓ | ↑ High ✓ | ✗ |
| Add                                  |          |          |          |   |

### 19.4.2 Prioritization for Custom Applications

Click the **Add** button to define a custom application. Click the button ✗ in the **Action** column to delete the custom application in the corresponding row.

When **Supported Applications** is selected, the Peplink router will inspect network traffic and prioritize the selected applications. Alternatively, you can select **Custom Applications** and define the application by providing the protocol, scope, port number, and DSCP value.

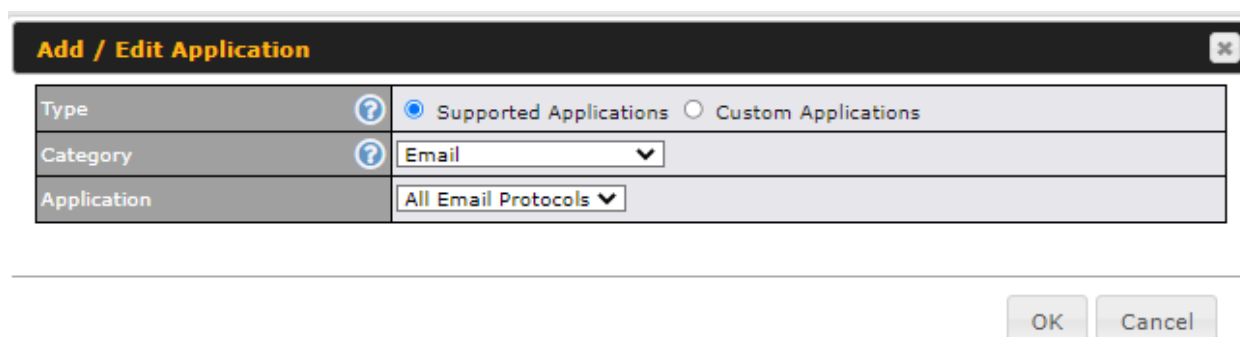

**Add / Edit Application** ⓘ

Type ⓘ ☒ Supported Applications ☐ Custom Applications

Category ⓘ Email ▼

Application All Email Protocols ▼

OK Cancel

### 19.4.3 DSL/Cable Optimization

DSL/cable-based WAN connections have lower upload bandwidth and higher

download bandwidth. When a DSL/cable circuit's uplink is congested, the download bandwidth will be affected. Users will not be able to download data at full speed until the uplink becomes less congested. **DSL/Cable Optimization** can relieve such an issue. When it is enabled, the download speed will become less affected by the upload traffic. By default, this feature is disabled.

| DSL/Cable Optimization  |                          |
|------------------------------------------------------------------------------------------------------------|--------------------------|
| Enable                                                                                                     | <input type="checkbox"/> |

#### 19.4.4 SpeedFusion VPN Traffic Optimization

To enable this option to allow SpeedFusion VPN traffic has highest priority when WAN is congested.

| SpeedFusion VPN Traffic Optimization  |                          |
|--------------------------------------------------------------------------------------------------------------------------|--------------------------|
| Enable                                                                                                                   | <input type="checkbox"/> |



## 20 Firewall

A firewall is a mechanism that selectively filters data traffic between the WAN side (the Internet) and the LAN side of the network. It can protect the local network from potential hacker attacks, access to offensive websites, and/or other inappropriate uses.

The firewall functionality of Peplink routers supports the selective filtering of data traffic in both directions:

- 
- 
- Outbound (LAN to WAN)
- Inbound (WAN to LAN)
- Internal Network (VLAN to VLAN)
- Local Service

The firewall also supports the following functionality:

- Intrusion detection and DoS prevention
- Web blocking

With SpeedFusion™ enabled, the firewall rules also apply to VPN tunneled traffic.

| Outbound Firewall Rules (🖱️ Drag and drop rows by the left to change rule order) ? |          |        |             |        |  |
|------------------------------------------------------------------------------------|----------|--------|-------------|--------|--|
| Rule                                                                               | Protocol | Source | Destination | Action |  |
| Default                                                                            | Any      | Any    | Any         | ✓      |  |
| Add Rule                                                                           |          |        |             |        |  |

| Inbound Firewall Rules (🖱️ Drag and drop rows by the left to change rule order) ? |          |     |        |             |        |
|-----------------------------------------------------------------------------------|----------|-----|--------|-------------|--------|
| Rule                                                                              | Protocol | WAN | Source | Destination | Action |
| Default                                                                           | Any      | Any | Any    | Any         | ✓      |
| Add Rule                                                                          |          |     |        |             |        |

| Internal Network Firewall Rules (🖱️ Drag and drop rows by the left to change rule order) ? |          |        |             |        |  |
|--------------------------------------------------------------------------------------------|----------|--------|-------------|--------|--|
| Rule                                                                                       | Protocol | Source | Destination | Action |  |
| Default                                                                                    | Any      | Any    | Any         | ✓      |  |
| Add Rule                                                                                   |          |        |             |        |  |

| Intrusion Detection and DoS Prevention ? |  |  |  |  |  |
|------------------------------------------|--|--|--|--|--|
| Disabled                                 |  |  |  |  |  |

| Local Service Firewall Rules (🖱️ Drag and drop rows by the left to change rule order) |         |     |        |        |  |
|---------------------------------------------------------------------------------------|---------|-----|--------|--------|--|
| Rule                                                                                  | Service | WAN | Source | Action |  |
| Default                                                                               | Any     | Any | Any    | ✓      |  |
| Add Rule                                                                              |         |     |        |        |  |

## 20.1 Access Rules

### Outbound Firewall Rules

The outbound firewall settings are located at **Advanced > Firewall > Access Rules**.

| Outbound Firewall Rules (🖱️ Drag and drop rows by the left to change rule order) ? |          |        |             |        |  |
|------------------------------------------------------------------------------------|----------|--------|-------------|--------|--|
| Rule                                                                               | Protocol | Source | Destination | Action |  |
| test                                                                               | Any      | Any    | Any         |        |  |
| Default                                                                            | Any      | Any    | Any         | ✓      |  |
| Add Rule                                                                           |          |        |             |        |  |

To enable or disable the Outbound Firewall to manage device local network traffic, click on the help icon and click [here](#), the screen will show below.

| Outbound Firewall Rules ( Drag and drop rows by the left to change rule order) |          |        |             |        |   |
|--------------------------------------------------------------------------------|----------|--------|-------------|--------|---|
| Rule                                                                           | Protocol | Source | Destination | Action |   |
| ⚠ Device local network traffic is now managed by Outbound Firewall Rules       |          |        |             |        |   |
| test                                                                           | Any      |        |             | ⊘      | ✖ |
| test1                                                                          | Any      |        |             | ⊘      | ✖ |
| Default                                                                        | Any      | Any    | Any         | ✔      |   |
| Add Rule                                                                       |          |        |             |        |   |

## Note

To utilize the Outbound Firewall Rule to block the Peplink device from contacting InControl 2. may refer to the link below:

<https://forum.peplink.com/t/faq-prevent-device-reaching-incontrol-2./63f48dfd466df34ab475f55/>

Click **Add Rule** to display the following screen:

Add a New Outbound Firewall Rule

New Firewall Rule

|                       |                                                                   |
|-----------------------|-------------------------------------------------------------------|
| Rule Name             |                                                                   |
| Enable                | <input checked="" type="checkbox"/> Always on                     |
| Protocol              | Any :: Protocol Selection Tool ::                                 |
| Source IP & Port      | Any Address                                                       |
| Destination IP & Port | Any Address                                                       |
| Action                | <input checked="" type="radio"/> Allow <input type="radio"/> Deny |
| Event Logging         | <input type="checkbox"/> Enable                                   |

Save
Cancel

## Inbound Firewall Rules

Inbound firewall settings are located at **Advanced > Firewall > Access Rules**.

| Inbound Firewall Rules ( Drag and drop rows by the left to change rule order) |          |     |        |             |        |   |
|-------------------------------------------------------------------------------|----------|-----|--------|-------------|--------|---|
| Rule                                                                          | Protocol | WAN | Source | Destination | Action |   |
| test                                                                          | Any      | Any | Any    | Any         | ✔      | ✖ |
| Default                                                                       | Any      | Any | Any    | Any         | ✔      |   |
| Add Rule                                                                      |          |     |        |             |        |   |

Click **Add Rule** to display the following screen:

Add a New Inbound Firewall Rule

### New Firewall Rule

|                       |                                                                   |
|-----------------------|-------------------------------------------------------------------|
| Rule Name             |                                                                   |
| Enable                | <input checked="" type="checkbox"/>                               |
| WAN Connection        | Any                                                               |
| Protocol              | Any :: Protocol Selection Tool ::                                 |
| Source IP & Port      | Any Address                                                       |
| Destination IP & Port | Any Address                                                       |
| Action                | <input checked="" type="radio"/> Allow <input type="radio"/> Deny |
| Event Logging         | <input type="checkbox"/> Enable                                   |

Save
Cancel

## Internal Network Firewall Rules

Internal Network firewall settings are located at **Advanced > Firewall > Access Rules**.

| Internal Network Firewall Rules ( Drag and drop rows by the left to change rule order) |          |        |             |                                     |                          |
|----------------------------------------------------------------------------------------|----------|--------|-------------|-------------------------------------|--------------------------|
| Rule                                                                                   | Protocol | Source | Destination | Action                              |                          |
| test                                                                                   | Any      | Any    | Any         | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| Default                                                                                | Any      | Any    | Any         | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| Add Rule                                                                               |          |        |             |                                     |                          |

 
 
Click **Add Rule** to display the following window:

Add a New Internal Network Firewall Rule

### New Firewall Rule

|               |                                                                   |
|---------------|-------------------------------------------------------------------|
| Rule Name     |                                                                   |
| Enable        | <input checked="" type="checkbox"/> Always on                     |
| Protocol      | Any :: Protocol Selection ::                                      |
| Source        | Any Address                                                       |
| Destination   | Any Address                                                       |
| Action        | <input checked="" type="radio"/> Allow <input type="radio"/> Deny |
| Event Logging | <input type="checkbox"/> Enable                                   |

Save
Cancel

| Inbound / Outbound / Internal Network Firewall Settings |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Rule Name</b>                                        | This setting specifies a name for the firewall rule.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Enable</b>                                           | <p>This setting specifies whether the firewall rule should take effect. If the box is checked, the firewall rule takes effect. If the traffic matches the specified protocol/IP/port, actions will be taken by the Peplink router based on the other parameters of the rule. If the box is not checked, the firewall rule does not take effect. The Peplink router will disregard the other parameters of the rule.</p> <p>Click the dropdown menu next to the checkbox to place this firewall rule on a time schedule.</p>                                                                                    |
| <b>WAN Connection (Inbound)</b>                         | Select the WAN connection that this firewall rule should apply to.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Protocol</b>                                         | <p>This setting specifies the protocol to be matched. Via a drop-down menu, the following protocols can be specified:</p> <ul style="list-style-type: none"> <li>• Any</li> <li>• TCP</li> <li>• UDP</li> <li>• ICMP</li> <li>• DSCP</li> <li>• IP</li> </ul> <p>Alternatively, the <b>Protocol Selection Tool</b> drop-down menu can be used to automatically fill in the protocol and port number of common Internet services (e.g., HTTP, HTTPS, etc.)</p> <p>After selecting an item from the <b>Protocol Selection Tool</b> drop-down menu, the protocol and port number remains manually modifiable.</p> |
| <b>Source IP &amp; Port</b>                             | <p>This specifies the source IP address(es) and port number(s) to be matched for the firewall rule. A single address, or a network, can be specified as the <b>Source IP &amp; Port</b> setting, as indicated by the following screenshot:</p>  <p>In addition, a single port, or a range of ports, can be specified for the <b>Source IP &amp; Port</b> settings.</p>                                                                                                                                                     |
| <b>Destination IP &amp; Port</b>                        | <p>This specifies the destination IP address(es) and port number(s) to be matched for the firewall rule. A single address, or a network, can be specified as the <b>Destination IP &amp; Port</b> setting, as indicated by the following screenshot:</p>  <p>In addition, a single port, or a range of ports, can be specified for the <b>Destination IP &amp; Port</b> settings.</p>                                                                                                                                      |

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Action</b>        | <p>This setting specifies the action to be taken by the router upon encountering traffic that matches the both of the following:</p> <ul style="list-style-type: none"> <li>• Source IP &amp; port</li> <li>• Destination IP &amp; port</li> </ul> <p>With the value of <b>Allow</b> for the <b>Action</b> setting, the matching traffic passes through the router (to be routed to the destination). If the value of the <b>Action</b> setting is set to <b>Deny</b>, the matching traffic does not pass through the router (and is discarded).</p>                                                                                                         |
| <b>Event Logging</b> | <p>This setting specifies whether or not to log matched firewall events. The logged messages are shown on the page <b>Status&gt;Event Log</b>. A sample message is as follows:</p> <p>Aug 13 23:47:44 Denied CONN=Ethernet WAN SRC=20.3.2.1<br/>DST=192.168.1.20 LEN=48 PROTO=TCP SPT=2260 DPT=80</p> <ul style="list-style-type: none"> <li>• <b>CONN</b>: The connection where the log entry refers to</li> <li>• <b>SRC</b>: Source IP address</li> <li>• <b>DST</b>: Destination IP address</li> <li>• <b>LEN</b>: Packet length</li> <li>• <b>PROTO</b>: Protocol</li> <li>• <b>SPT</b>: Source port</li> <li>• <b>DPT</b>: Destination port</li> </ul> |

Click **Save** to store your changes. To create an additional firewall rule, click **Add Rule** and repeat the above steps.

To change a rule's priority, simply drag and drop the rule:

- Hold the left mouse button on the rule.
- Move it to the desired position.
- Drop it by releasing the mouse button.

| Outbound Firewall Rules (Drag and drop rows to change rule order) |          |                |                     |        |  |
|-------------------------------------------------------------------|----------|----------------|---------------------|--------|--|
| Rule                                                              | Protocol | Source IP Port | Destination IP Port | Policy |  |
| No web access                                                     | TCP      | Any Any        | Any 80              | Deny   |  |
| No FTP access                                                     | TCP      | Any Any        | Any 21              | Deny   |  |
| Default                                                           | Any      | Any            | Any                 | Allow  |  |
| Add Rule                                                          |          |                |                     |        |  |

To remove a rule, click the button.


Rules are matched from top to bottom. If a connection matches any one of the upper rules, the matching process will stop. If none of the rules match, the **Default** rule will be applied. By default,

the **Default** rule is set as **Allow** for Outbound, Inbound and Internal Network access.

### Tip

 If the default inbound rule is set to **Allow** for NAT-enabled WANs, no inbound Allow firewall rules will be required for inbound port forwarding and inbound NAT mapping rules. However, if the default inbound rule is set as **Deny**, a corresponding Allow firewall rule will be required.

## Intrusion Detection and DoS Prevention



Peplink routers can detect and prevent intrusions and denial-of-service (DoS) attacks from the Internet. To turn on this feature, click , check the **Enable** check box, and press the **Save** button.

When this feature is enabled, the Peplink router will detect and prevent the following kinds of intrusions and denial-of-service attacks.

- Port scan
  - o NMAP FIN/URG/PSH
  - o Xmas tree
  - o Another Xmas tree
  - o Null scan
  - o SYN/RST
  - o SYN/FIN
- SYN flood prevention
- Ping flood attack prevention

## Local Service Firewall Rules

For every WAN inbound traffic to local service, rules will be matched to take the defined action. The Local Service firewall settings are located at **Advanced > Firewall > Access Rules**.

| Local Service Firewall Rules <small>( Drag and drop rows by the left to change rule order)</small> |         |     |        |                                                                                       |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-----|--------|---------------------------------------------------------------------------------------|--|
| Rule                                                                                                                                                                                  | Service | WAN | Source | Action                                                                                |  |
| Default                                                                                                                                                                               | Any     | Any | Any    |  |  |
| <input type="button" value="Add Rule"/>                                                                                                                                               |         |     |        |                                                                                       |  |

Click **Add Rule** to display the following window:

Local Service Firewall Rule

|                |                                                                   |
|----------------|-------------------------------------------------------------------|
| Rule Name      | <input type="text"/>                                              |
| Enable         | <input checked="" type="checkbox"/>                               |
| Service        | <span>?</span> <input type="text" value="Any"/> ▼                 |
| WAN Connection | <input type="text" value="Any"/> ▼                                |
| Source         | <input type="text" value="Any"/> ▼                                |
| Action         | <input checked="" type="radio"/> Allow <input type="radio"/> Deny |
| Event Logging  | <input type="checkbox"/>                                          |

Save

Cancel

| Local Service Firewall Settings |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Rule Name</b>                | This setting specifies a name for the firewall rule.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Enable</b>                   | <p>This setting specifies whether the firewall rule should take effect.</p> <p>If the box is checked, the firewall rule takes effect. If the traffic matches the specified protocol/IP/port, actions will be taken by Peplink Balance based on the other parameters of the rule.</p> <p>If the box is not checked, the firewall rule does not take effect. The Peplink Balance will disregard the other parameters of the rule.</p> <p>Click the dropdown menu next to the checkbox to place this firewall rule on a time schedule.</p>                               |
| <b>Service</b>                  | <p>This option allows you to define the supported local service to be matched.</p> <p>If Any is chosen, the firewall rule will match to all supported local services from the list.</p> <p>Via a drop-down menu, the following services can be specified:</p> <ul style="list-style-type: none"> <li>Any</li> <li>SpeedFusion / PepVPN Handshake</li> <li>SpeedFusion / PepVPN Data Port</li> <li>Web Admin Access</li> <li>DNS Server</li> <li>SNMP Server</li> <li>KVM Management Port</li> <li>KVM VNC Port</li> <li>FusionSIM Agent / Remote SIM Proxy</li> </ul> |
| <b>WAN Connection</b>           | Select the WAN connection that this firewall rule should apply to.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Source</b>                   | This specifies the source IP address and IP Network to be matched for the firewall rule.                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Action</b>                   | With the value of <b>Allow</b> for the <b>Action</b> setting, the matching traffic passes through the router (to be routed to the destination). If the value of the <b>Action</b> setting is set to <b>Deny</b> , the matching traffic does not pass through the router (and is discarded).                                                                                                                                                                                                                                                                           |



## Event Logging

This setting specifies whether or not to log matched firewall events. The logged messages are shown on the page **Status>Event Log**. A sample message is as follows:

Aug 13 23:47:44 Denied CONN=Ethernet WAN SRC=20.3.2.1

DST=192.168.1.20 LEN=48 PROTO=TCP SPT=2260 DPT=80

- **CONN:** The connection where the log entry refers to
- **SRC:** Source IP address
- **DST:** Destination IP address
- **LEN:** Packet length
- **PROTO:** Protocol
- **SPT:** Source port
- **DPT:** Destination port

## 20.2 Content Blocking

|                                                                                                                                      |                                                                                                                                                                                                                                                |
|--------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Application Blocking</b> <span>?</span>                                                                                           |                                                                                                                                                                                                                                                |
| Please Select Application...                                                                                                         | <span>+</span>                                                                                                                                                                                                                                 |
| <b>Web Blocking</b> <span>?</span>                                                                                                   |                                                                                                                                                                                                                                                |
| Preset Category                                                                                                                      |                                                                                                                                                                                                                                                |
| <input type="radio"/> High<br><input type="radio"/> Moderate<br><input type="radio"/> Low<br><input checked="" type="radio"/> Custom | <input type="checkbox"/> Adware<br><input type="checkbox"/> P2P/File sharing<br><input type="checkbox"/> Audio-Video<br><input type="checkbox"/> Pornography<br><input type="checkbox"/> File Hosting<br><input type="checkbox"/> Update Sites |
| Content Filtering Database Auto Update <span>?</span>                                                                                | <input type="checkbox"/>                                                                                                                                                                                                                       |
| Customized Domains <span>?</span>                                                                                                    |                                                                                                                                                                                                                                                |
| <input type="text"/>                                                                                                                 | <span>+</span>                                                                                                                                                                                                                                 |
| Exempted Domains from Web Blocking <span>?</span>                                                                                    |                                                                                                                                                                                                                                                |
| <input type="text"/>                                                                                                                 | <span>+</span>                                                                                                                                                                                                                                 |
| <b>Exempted User Groups</b> <span>?</span>                                                                                           |                                                                                                                                                                                                                                                |
| Manager                                                                                                                              | <input type="checkbox"/> Exempt                                                                                                                                                                                                                |
| Staff                                                                                                                                | <input type="checkbox"/> Exempt                                                                                                                                                                                                                |
| Guest                                                                                                                                | <input type="checkbox"/> Exempt                                                                                                                                                                                                                |
| <b>Exempted Subnets</b> <span>?</span>                                                                                               |                                                                                                                                                                                                                                                |
| Network                                                                                                                              | Subnet Mask                                                                                                                                                                                                                                    |
| <input type="text"/>                                                                                                                 | 255.255.255.0 (/24) <span>+</span>                                                                                                                                                                                                             |
| <span>Save</span>                                                                                                                    |                                                                                                                                                                                                                                                |

### 20.2.1 Application Blocking

Choose applications to be blocked from LAN/PPTP/SpeedFusion VPN peer clients' access, except for those on the Exempted User Groups or Exempted Subnets defined below.

### 20.2.2 Web Blocking

Defines website domain names to be blocked from LAN/PPTP/SpeedFusion VPN peer clients' access except for those on the Exempted User Groups or Exempted Subnets defined below.

If "foobar.com" is entered, any web site with a host name ending in foobar.com will be blocked, e.g. www.foobar.com, foobar.com, etc. However, "myfoobar.com" will not be blocked.

You may enter the wild card "." at the end of a domain name to block any web site with a host name having the domain name in the middle. If you enter "foobar.\*", then "www.foobar.com", "www.foobar.co.jp", or "foobar.co.uk" will be blocked. Placing the wild card in any other position is

not supported.

The device will inspect and look for blocked domain names on all HTTP and HTTPS traffic.

### 20.2.3 Customized Domains

Enter an appropriate website address, and the Peplink MAX will block and disallow LAN/PPTP/SpeedFusion™ peer clients to access these websites. Exceptions can be added using the instructions in Sections 20.1.3.2 and 20.1.3.3.

You may enter the wild card "." at the end of a domain name to block any web site with a host name having the domain name in the middle. For example, If you enter "foobar.," then "www.foobar.com," "www.foobar.co.jp," or "foobar.co.uk" will be blocked. Placing the wild card in any other position is not supported.

The Peplink MAX will inspect and look for blocked domain names on all HTTP traffic. Secure web (HTTPS) traffic is not supported.

### 20.2.4 Exempted User Groups

Check and select pre-defined user group(s) who can be exempted from the access blocking rules. User groups can be defined at **QoS>User Groups** section. Please refer to **Section 17.1** for details.

### 20.2.5 Exempted Subnets

With the subnet defined in the field, clients on the particular subnet(s) can be exempted from the access blocking rules.

## 21 Routing Protocols

### 21.1 OSPF & RIPv2

The Peplink supports OSPF and RIPv2 dynamic routing protocols.

Click the **Advanced** tab from the top bar, and then click the **Routing Protocols > OSPF & RIPv2** item on the sidebar to reach the following menu:

| OSPF                  |                |  |
|-----------------------|----------------|--|
| Router ID             | LAN IP Address |  |
| Area                  | Interfaces     |  |
| No OSPF Area Defined. |                |  |
| <b>Add</b>            |                |  |

| RIPv2             |  |
|-------------------|--|
| No RIPv2 Defined. |  |

| OSPF & RIPv2 Route Advertisement                                                |  |                                            |                     |
|---------------------------------------------------------------------------------|--|--------------------------------------------|---------------------|
| SpeedFusion VPN Route Isolation                                                 |  | <input type="checkbox"/> Enable            |                     |
| Network Advertising                                                             |  | ---                                        |                     |
| All LAN/VLAN networks will be advertised when no network advertising is chosen. |  |                                            |                     |
| Static Route Advertising                                                        |  | <input checked="" type="checkbox"/> Enable |                     |
|                                                                                 |  | Excluded Networks                          | Subnet Mask         |
|                                                                                 |  |                                            | 255.255.255.0 (/24) |
| <b>Save</b>                                                                     |  |                                            |                     |

| OSPF             |                                                                                                                                                                                                                          |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Router ID</b> | This field determines the ID of the router. By default, this is specified as the WAN IP address. If you want to specify your own ID, enter it into the <b>Custom</b> field.                                              |
| <b>Area</b>      | This is an overview of the OSPF areas that you have defined. Clicking on the name under Area allows you to configure the connection. To define a new area, click <b>Add</b> . To delete an existing area, click on the . |

**OSPF settings**

|                |                                                                                                                                                                                                                                                                                                                   |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Area ID        | 0.0.0.0                                                                                                                                                                                                                                                                                                           |
| Link Type      | <input checked="" type="radio"/> Broadcast <input type="radio"/> Point-to-Point                                                                                                                                                                                                                                   |
| Authentication | None ▾                                                                                                                                                                                                                                                                                                            |
| Interfaces     | <input type="checkbox"/> Untagged LAN<br><input type="checkbox"/> V167 (192.168.167.1/24)<br><input type="checkbox"/> WAN 1<br><input type="checkbox"/> WAN 2<br><input type="checkbox"/> WAN 3<br><input type="checkbox"/> WAN 4<br><input type="checkbox"/> WAN 5<br><input checked="" type="checkbox"/> PepVPN |

Save
Cancel

| OSPF Settings         |                                                                                                                                                                                                                                      |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Area ID</b>        | Assign a name to be applied to this group. Machines linked to this group will send and receive related OSPF packets, while unlinked machines will ignore them.                                                                       |
| <b>Link Type</b>      | Choose the type of network that this area will use.                                                                                                                                                                                  |
| <b>Authentication</b> | If an authentication method is used, select one from this drop-down menu. Available options are <b>MD5</b> and <b>Text</b> . Authentication key(s) may be input next to the drop-down menu after selecting an authentication method. |
| <b>Interfaces</b>     | Select the interface(s) that this area will use to listen to and deliver OSPF packets.                                                                                                                                               |

To access RIPv2 settings, click on

**RIPv2 settings**

|                |                                                                                                                                                                                                                                                                     |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Authentication | None ▾                                                                                                                                                                                                                                                              |
| Interfaces     | <input type="checkbox"/> Untagged LAN<br><input type="checkbox"/> V167 (192.168.167.1/24)<br><input type="checkbox"/> WAN 1<br><input type="checkbox"/> WAN 2<br><input type="checkbox"/> WAN 3<br><input type="checkbox"/> WAN 4<br><input type="checkbox"/> WAN 5 |

Save
Cancel

| RIPv2 Settings        |                                                                                                                                                                                                                                      |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Authentication</b> | If an authentication method is used, select one from this drop-down menu. Available options are <b>MD5</b> and <b>Text</b> . Authentication key(s) may be input next to the drop-down menu after selecting an authentication method. |
| <b>Interfaces</b>     | Select the interface(s) that this area will use to listen to and deliver RIPv2 packets.                                                                                                                                              |

| OSPF & RIPv2 Route Advertisement |                     |                                                                                                                                                                                                                                                         |                   |             |  |  |                     |   |
|----------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------|--|--|---------------------|---|
| SpeedFusion VPN Route Isolation  |                     | <input type="checkbox"/> Enable                                                                                                                                                                                                                         |                   |             |  |  |                     |   |
| Network Advertising              |                     | <div> <div>---</div> <div>▼</div> <div>+</div> </div> <small>All LAN/VLAN networks will be advertised when no network advertising is chosen.</small>                                                                                                    |                   |             |  |  |                     |   |
| Static Route Advertising         |                     | <div> <input checked="" type="checkbox"/> Enable </div> <table border="1"> <thead> <tr> <th>Excluded Networks</th> <th>Subnet Mask</th> <th></th> </tr> </thead> <tbody> <tr> <td></td> <td>255.255.255.0 (/24)</td> <td>+</td> </tr> </tbody> </table> | Excluded Networks | Subnet Mask |  |  | 255.255.255.0 (/24) | + |
| Excluded Networks                | Subnet Mask         |                                                                                                                                                                                                                                                         |                   |             |  |  |                     |   |
|                                  | 255.255.255.0 (/24) | +                                                                                                                                                                                                                                                       |                   |             |  |  |                     |   |
| <div>Save</div>                  |                     |                                                                                                                                                                                                                                                         |                   |             |  |  |                     |   |

| OSPF & RIPv2 Route Advertisement       |                                                                                                                                                                          |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SpeedFusion VPN Route Isolation</b> | Isolate SpeedFusion VPN peers from each other. Received SpeedFusion VPN routes will not be forwarded to other SpeedFusion VPN peers to reduce bandwidth consumption..    |
| <b>Network Advertising</b>             | Networks to be advertised over OSPF & RIPv2. If no network is selected, all LAN / VLAN networks will be advertised by default.                                           |
| <b>Static Route Advertising</b>        | Enabling OSPF & RIPv2 Route Advertising allows it to advertise LAN static routes over OSPF & RIPv2. Static routes on the Excluded Networks table will not be advertised. |

## 21.2 BGP

Click the **Advanced** tab along the top bar, and then click the **BGP** item on the sidebar to configure BGP.

| BGP            | AS    | Neighbors   |  |
|----------------|-------|-------------|--|
| Uplink         | 64520 | 172.16.51.1 |  |
| <div>Add</div> |       |             |  |

Click the "" to delete a BGP profile.  
Click "**Add**" to create a new BGP profile.

| BGP Profile           |                                                                                                       |                                  |                      |                |                      |                      |
|-----------------------|-------------------------------------------------------------------------------------------------------|----------------------------------|----------------------|----------------|----------------------|----------------------|
| Profile Name          | <input type="text"/>                                                                                  |                                  |                      |                |                      |                      |
| Enable                | <input checked="" type="checkbox"/>                                                                   |                                  |                      |                |                      |                      |
| Interface             | Untagged LAN (192.: ▼)                                                                                |                                  |                      |                |                      |                      |
| Router ID             | <input checked="" type="radio"/> LAN IP Address<br><input type="radio"/> Custom: <input type="text"/> |                                  |                      |                |                      |                      |
| Autonomous System     | <input type="text"/>                                                                                  |                                  |                      |                |                      |                      |
| Neighbor              |                                                                                                       | IP Address                       | Autonomous System    | Multihop / TTL | Password             | AS-Path Prepending   |
|                       |                                                                                                       | <input type="text"/>             | <input type="text"/> | disable        | <input type="text"/> | <input type="text"/> |
|                       |                                                                                                       |                                  |                      |                |                      |                      |
| Hold Time             |                                                                                                       | <input type="text" value="240"/> |                      |                |                      |                      |
| Next Hop Self         |                                                                                                       | <input type="checkbox"/>         |                      |                |                      |                      |
| iBGP Local Preference |                                                                                                       | <input type="text" value="100"/> |                      |                |                      |                      |
| BFD                   |                                                                                                       | <input type="checkbox"/> Enable  |                      |                |                      |                      |

| BGP Profile                |                                                                                                                                                                                                                                                                                                                                            |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                | This field specifies the name that represents this profile.                                                                                                                                                                                                                                                                                |
| <b>Enable</b>              | When this box is checked, this BGP profile will be enabled. If it is left unchecked, it will be disabled.                                                                                                                                                                                                                                  |
| <b>Interface</b>           | The interface in which the BGP neighbor is located.                                                                                                                                                                                                                                                                                        |
| <b>Router ID</b>           | This field specifies the unique IP as the identifier of the local device running BGP.                                                                                                                                                                                                                                                      |
| <b>Autonomous System</b>   | The Autonomous System Number (ASN) assigned to this profile.                                                                                                                                                                                                                                                                               |
| <b>Neighbor</b>            | BGP Neighbors and their details.                                                                                                                                                                                                                                                                                                           |
| <b>IP address</b>          | The IP address of the Neighbor.                                                                                                                                                                                                                                                                                                            |
| <b>Autonomous System</b>   | The Neighbor's ASN.                                                                                                                                                                                                                                                                                                                        |
| <b>Multihop/TTL</b>        | This field determines the Time-to-live (TTL) of BGP packets. Leave this field blank if the BGP neighbor is directly connected, otherwise you must specify a TTL value. This option should be used if the configured Neighbor's IP address does not match the selected Interface's network subnets. The TTL value must be between 2 to 255. |
| <b>Password</b>            | (Optional) Assign a password for MD5 authentication of BGP sessions.                                                                                                                                                                                                                                                                       |
| <b>AS-Path Prepending:</b> | AS path to be prepended to the routes received from this Neighbor. Values must be ASN and separated by commas. For example: inputting "64530,64531" will prepend "64530, 64531" to received                                                                                                                                                |

|                              |                                                                                                                                                                                                                                                                                                                                             |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                              | routes.                                                                                                                                                                                                                                                                                                                                     |
| <b>Hold Time</b>             | Wait time in seconds for a keepalive message from a Neighbor before considering the BGP connection as stalled.<br>The value must be either 0 (infinite hold time) or between 3 and 65535 inclusively.<br>Default: 240                                                                                                                       |
| <b>Next Hop Self</b>         | Enable this option to advertise your own source address as the next hop when propagating routes.                                                                                                                                                                                                                                            |
| <b>iBGP Local Preference</b> | This is the metric advertised to iBGP Neighbors to indicate the preference for external routes. The value must be between 0 to 4294967295 inclusively.<br>Default: 100                                                                                                                                                                      |
| <b>BFD</b>                   | Enable this option to add Bidirectional Forwarding Detection for path failure. All directly connected Neighbors that use the same physical interface share the same BFD settings. All multihop Neighbors share the same multihop BFD settings. You can configure BFD settings in the BGP profile listing page after this option is enabled. |

| Route Advertisement      |   |                                            |                                             |
|--------------------------|---|--------------------------------------------|---------------------------------------------|
| Network Advertising      | ? | <div>---</div> <div>+</div>                |                                             |
| Static Route Advertising | ? | <input checked="" type="checkbox"/> Enable |                                             |
|                          |   | Excluded Networks                          | Subnet Mask                                 |
|                          |   | <div></div>                                | <div>255.255.255.0 (/24)</div> <div>+</div> |
| Custom Route Advertising | ? | Networks                                   | Subnet Mask                                 |
|                          |   | <div></div>                                | <div>255.255.255.0 (/24)</div> <div>+</div> |
| Advertise OSPF Route     | ? | <input type="checkbox"/>                   |                                             |
| Set Community            | ? | Community                                  | Route Prefix                                |
|                          |   | <div></div>                                | <div></div> <div>+</div>                    |

|                                 |                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>Network Advertising</b>      | Select the Networks that will be advertised to the BGP Neighbor.                                                                |
| <b>Static Route Advertising</b> | Enable this option to advertise static LAN routes. Static routes that match the Excluded Networks table will not be advertised. |
| <b>Custom Route Advertising</b> | Additional routes to be advertised to the BGP Neighbor.                                                                         |
| <b>Advertise OSPF Route</b>     | When this box is checked, every learnt OSPF route will be advertised.                                                           |
| <b>Set Community</b>            | Assign a prefix to a Community.                                                                                                 |



Community:  
Two numbers in new-format.  
e.g. 65000:21344  
Well-known communities:  
no-export 65535:65281  
no-advertise 65535:65282  
no-export-subconfed 65535:65283  
no-peer 65535:65284

Route Prefix:  
Comma separated networks.  
e.g. 172.168.1.0/24,192.168.1.0/28

| Route Import        |          |                       |                          |   |
|---------------------|----------|-----------------------|--------------------------|---|
| Filter Mode         | Accept ▼ |                       |                          |   |
| Restricted Networks | Network  | Subnet Mask           | Exact Match              |   |
|                     |          | 255.255.255.0 (/24) ▼ | <input type="checkbox"/> | + |

### Filter Mode

This field allows for the selection of the filter mode for route import.

**None:** All BGP routes will be accepted.

**Accept:** Routes in "Restricted Networks" will be accepted, routes not in the list will be rejected.

**Reject:** Routes in "Blocked Networks" will be rejected, routes not in the list will be accepted.

### Restricted Networks / Blocked Networks

This field specifies the network(s) in the "route import" entry.

**Exact Match:** When this box is checked, only routes with the same Network and Subnet Mask will be filtered.

Otherwise, routes within the Networks and Subnets will be filtered.

| Route Export                |                          |                       |                          |   |
|-----------------------------|--------------------------|-----------------------|--------------------------|---|
| Filter Mode                 | Accept ▼                 |                       |                          |   |
| Restricted Networks         | Network                  | Subnet Mask           | Exact Match              |   |
|                             |                          | 255.255.255.0 (/24) ▼ | <input type="checkbox"/> | + |
| Export to other BGP Profile | <input type="checkbox"/> |                       |                          |   |
| Export to OSPF              | <input type="checkbox"/> |                       |                          |   |

### Filter Mode

This field allows for the selection of the filter mode for route export.

|                                               |                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                               | <p><b>None:</b> All BGP routes will be accepted.</p> <p><b>Accept:</b> Routes in "Restricted Networks" will be accepted, routes not in the list will be rejected.</p> <p><b>Reject:</b> Routes in "Blocked Networks" will be rejected, routes not in the list will be accepted.</p> |
| <b>Restricted Networks / Blocked Networks</b> | <p>This field specifies the network(s) in the "route export" entry.</p> <p><b>Exact Match:</b> When this box is checked, only routes with the same Network and Subnet Mask will be filtered.</p> <p>Otherwise, routes within the Networks and Subnets will be filtered.</p>         |
| <b>Export to other BGP Profile</b>            | <p>When this box is checked, routes learnt from this BGP profile will be exported to other BGP profiles.</p>                                                                                                                                                                        |
| <b>Export to OSPF</b>                         | <p>When this box is checked, routes learnt from this BGP profile will be exported to the OSPF routing protocol.</p>                                                                                                                                                                 |

## 22 Remote User Access

A remote-access VPN connection allows an individual user to connect to a private business network from a remote location using a laptop or desktop computer connected to the Internet. Networks routed by a Peplink router can be remotely accessed via OpenVPN, L2TP with IPsec or PPTP. To configure this feature, navigate to **Advanced > Remote User Access** and choose the required VPN type.

| Remote User Access Settings         |                                                                                                                                                                                                                                                                                                                                                          |                                  |          |          |  |                      |                      |                                  |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|----------|----------|--|----------------------|----------------------|----------------------------------|
| Enable                              | <input checked="" type="checkbox"/>                                                                                                                                                                                                                                                                                                                      |                                  |          |          |  |                      |                      |                                  |
| VPN Type                            | <input checked="" type="radio"/> L2TP with IPsec <input type="radio"/> PPTP <input type="radio"/> OpenVPN                                                                                                                                                                                                                                                |                                  |          |          |  |                      |                      |                                  |
| Preshared Key                       | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters                                                                                                                                                                                                                                                                                 |                                  |          |          |  |                      |                      |                                  |
| Listen On                           | <div> <div>Connection / IP Address(es)</div> <div> <input type="checkbox"/> WAN 1               <input type="checkbox"/> WAN 2               <input type="checkbox"/> Wi-Fi WAN               <input type="checkbox"/> Cellular 1               <input type="checkbox"/> Cellular 2               <input type="checkbox"/> USB             </div> </div> |                                  |          |          |  |                      |                      |                                  |
| Authentication                      | Local User Accounts ▼                                                                                                                                                                                                                                                                                                                                    |                                  |          |          |  |                      |                      |                                  |
| User Accounts                       | <table border="1"> <thead> <tr> <th>Username</th> <th>Password</th> <th></th> </tr> </thead> <tbody> <tr> <td><input type="text"/></td> <td><input type="text"/></td> <td><input type="button" value="+"/></td> </tr> </tbody> </table>                                                                                                                  |                                  | Username | Password |  | <input type="text"/> | <input type="text"/> | <input type="button" value="+"/> |
| Username                            | Password                                                                                                                                                                                                                                                                                                                                                 |                                  |          |          |  |                      |                      |                                  |
| <input type="text"/>                | <input type="text"/>                                                                                                                                                                                                                                                                                                                                     | <input type="button" value="+"/> |          |          |  |                      |                      |                                  |
| <input type="button" value="Save"/> |                                                                                                                                                                                                                                                                                                                                                          |                                  |          |          |  |                      |                      |                                  |

| Remote User Access Settings |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |          |                                                                                                           |  |               |                                                                          |  |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|-----------------------------------------------------------------------------------------------------------|--|---------------|--------------------------------------------------------------------------|--|
| <b>Enable</b>               | <p>When this box is checked, this Remote User Access profile will be enabled. If it is left unchecked, it will be disabled.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |          |                                                                                                           |  |               |                                                                          |  |
| <b>VPN Type</b>             | <p>This field allows you to select the VPN type for the remote user access connection. The available options are:</p> <ul style="list-style-type: none"> <li>L2TP with IPsec</li> </ul> <table border="1"> <tbody> <tr> <td>VPN Type</td> <td colspan="2"> <input checked="" type="radio"/> L2TP with IPsec               <input type="radio"/> PPTP               <input type="radio"/> OpenVPN             </td> </tr> <tr> <td>Preshared Key</td> <td colspan="2"> <input type="text"/> <input checked="" type="checkbox"/> Hide Characters             </td> </tr> </tbody> </table> <p>If L2TP with IPsec is selected, it may need to enter the pre-shared key for the remote user access.</p> <ul style="list-style-type: none"> <li>PPTP</li> </ul> | VPN Type | <input checked="" type="radio"/> L2TP with IPsec <input type="radio"/> PPTP <input type="radio"/> OpenVPN |  | Preshared Key | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters |  |
| VPN Type                    | <input checked="" type="radio"/> L2TP with IPsec <input type="radio"/> PPTP <input type="radio"/> OpenVPN                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |          |                                                                                                           |  |               |                                                                          |  |
| Preshared Key               | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |          |                                                                                                           |  |               |                                                                          |  |

|          |                                                                                                           |
|----------|-----------------------------------------------------------------------------------------------------------|
| VPN Type | <input type="radio"/> L2TP with IPsec <input checked="" type="radio"/> PPTP <input type="radio"/> OpenVPN |
|----------|-----------------------------------------------------------------------------------------------------------|

If PPTP selected, there is no additional configuration required. The Point-to-Point Tunneling Protocol (PPTP) is an obsolete method for implementing virtual private networks. PPTP has many well known security issues

- OpenVPN

|                             |                                                                                                                                                                                                             |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| VPN Type                    | <input type="radio"/> L2TP with IPsec <input type="radio"/> PPTP <input checked="" type="radio"/> OpenVPN<br><small>You can obtain the OpenVPN client profile from the <a href="#">status page</a>.</small> |
| Connection Security Refresh | <input type="text" value="60"/> minute(s)                                                                                                                                                                   |

If the OpenVPN is selected, the OpenVPN Client profile can be downloaded from the **Status > Device** page after the configuration has been saved.

|                        |                                                                                                |
|------------------------|------------------------------------------------------------------------------------------------|
| OpenVPN Client Profile | <input type="button" value="Route all traffic"/>   <input type="button" value="Split tunnel"/> |
|------------------------|------------------------------------------------------------------------------------------------|

You have a choice between 2 different OpenVPN Client profiles:

- **"Route all traffic" profile**  
Using this profile, VPN clients will send all the traffic through the OpenVPN tunnel
- **"Split tunnel" profile**  
Using this profile, VPN clients will ONLY send those traffic designated to the untagged LAN and VLAN segment through the OpenVPN tunnel.

### Pre-shared Key

If **L2TP with IPsec** is selected in the VPN Type, enter the pre shared key in the text field. Please note that remote devices will need this preshared key to access the Balance.

### Disabled Weak Ciphers

You may click the button to show in the Pre-shared key and enable this option. When checked, weak ciphers such as 3DES will be disabled. Please note: Legacy and Android devices may not able to connect.

### Connection Security Refresh

If **OpenVPN** is selected in the VPN Type, this settings is for specifying the interval for refreshing the connection.

### Listen On

This setting is for specifying the WAN IP addresses that allow remote user access.

### Port

If **OpenVPN** is selected in the VPN Type, the **Port** setting specifies the port(s) that correspond to the service.

### Authentication

Determine the method of authenticating remote users:

- **Local User Accounts**

| Authentication | Local User Accounts ▼              |                                                                                                                                                                                                                               |          |          |  |       |       |   |      |       |   |
|----------------|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------|--|-------|-------|---|------|-------|---|
| User Accounts  | <input type="button" value="Add"/> | <table border="1"> <thead> <tr> <th>Username</th> <th>Password</th> <th></th> </tr> </thead> <tbody> <tr> <td>admin</td> <td>*****</td> <td>✗</td> </tr> <tr> <td>user</td> <td>*****</td> <td>✗</td> </tr> </tbody> </table> | Username | Password |  | admin | ***** | ✗ | user | ***** | ✗ |
| Username       | Password                           |                                                                                                                                                                                                                               |          |          |  |       |       |   |      |       |   |
| admin          | *****                              | ✗                                                                                                                                                                                                                             |          |          |  |       |       |   |      |       |   |
| user           | *****                              | ✗                                                                                                                                                                                                                             |          |          |  |       |       |   |      |       |   |

This setting allows you to define the Remote User Accounts. Click **Add**

to input username and password to create an account. After adding the user accounts, you can click on a username to edit the account password.

**Note:**

The username must contain lowercase letters, numerics, underscore(\_), dash(-), at sign(@), and period(.) only.

The password must be between 8 and 12 characters long

• **LDAP Server**

|                         |                                                                 |
|-------------------------|-----------------------------------------------------------------|
| Authentication          | LDAP Server ▼                                                   |
| Authentication Protocol | MS-CHAP v2 ▼                                                    |
| LDAP Server             | <input type="text"/> Port <input type="text" value="389"/>      |
|                         | <input type="checkbox"/> Use DN/Password to bind to LDAP Server |
| Base DN                 | <input type="text"/>                                            |
| Base Filter             | <input type="text"/>                                            |

Enter the matching LDAP server details to allow for LDAP server authentication.

• **Radius Server**

|                         |                                                                                                                                                                    |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Authentication Protocol | MS-CHAP v2 ▼                                                                                                                                                       |
|                         | You may click <a href="#">here</a> to define RADIUS Server Authentication profile, or you may go to <a href="#">RADIUS Server</a> page to define multiple profiles |
| Authentication Host     | <input type="text"/>                                                                                                                                               |
| Authentication Port     | <input type="text" value="1812"/>                                                                                                                                  |
| Authentication Secret   | <input type="text"/>                                                                                                                                               |
|                         | <input checked="" type="checkbox"/> Hide Characters                                                                                                                |
|                         | You may click <a href="#">here</a> to define RADIUS Server Accounting profile, or you may go to <a href="#">RADIUS Server</a> page to define multiple profiles     |
| Accounting Host         | <input type="text"/>                                                                                                                                               |
| Accounting Port         | <input type="text" value="1813"/>                                                                                                                                  |
| Accounting Secret       | <input type="text"/>                                                                                                                                               |
|                         | <input checked="" type="checkbox"/> Hide Characters                                                                                                                |
| Source Network Address  | Untagged LAN ▼                                                                                                                                                     |

Enter the matching Radius server details to allow for Radius server authentication.

• **Active Directory**

|                   |                                                     |
|-------------------|-----------------------------------------------------|
| Authentication    | Active Directory ▼                                  |
| Server IP Address | <input type="text"/>                                |
| Server Hostname   | <input type="text"/>                                |
| Domain            | <input type="text"/>                                |
| Custom Workgroup  | (Optional) <input type="text"/>                     |
| Admin Username    | <input type="text"/>                                |
| Admin Password    | <input type="text"/>                                |
|                   | <input checked="" type="checkbox"/> Hide Characters |


Enter the matching Active Directory details to allow for Active Directory server authentication.

## 23 Miscellaneous Settings

The miscellaneous settings include configuration for High Availability, Certificate Manager, service forwarding, service passthrough, GPS forwarding, GPIO, Groupe Networks (depending the feature is supported on the model of Peplink router that is being used).

### 23.1 High Availability

Many Peplink routers support high availability (HA) configurations via an open standard virtual router redundancy protocol (VRRP, RFC 3768). In an HA configuration, two Peplink routers provide redundancy and failover in a master-slave arrangement. In the event that the master unit is down, the slave unit becomes active. High availability will be disabled automatically where there is a drop-in connection configured on a LAN bypass port.

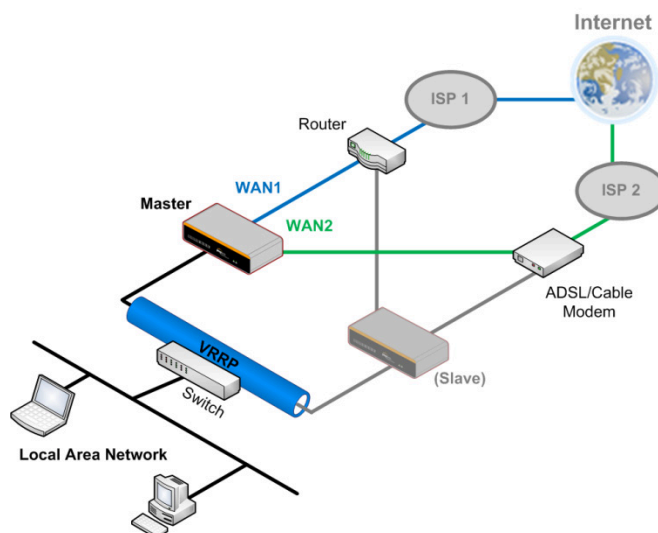

In the diagram, the WAN ports of each Peplink router connect to the router and to the modem. Both Peplink routers connect to the same LAN switch via a LAN port.

An elaboration on the technical details of the implementation of the virtual router redundancy protocol (VRRP, RFC 3768) by Peplink routers follows:

- In an HA configuration, the two Peplink routers communicate with each other using VRRP over the LAN.
- The two Peplink routers broadcast heartbeat signals to the LAN at a frequency of one heartbeat signal per second.
- In the event that no heartbeat signal from the master Peplink router is received in 3 seconds (or longer) since the last heartbeat signal, the slave Peplink router becomes active.
- The slave Peplink router initiates the WAN connections and binds to a previously

configured LAN IP address.

- At a subsequent point when the master Peplink router recovers, it will once again become active.

You can configure high availability at **Advanced > Misc. Settings > High Availability**.

Interface for Master Router

| High Availability                |                                                                     |
|----------------------------------|---------------------------------------------------------------------|
| Enable                           | <input checked="" type="checkbox"/>                                 |
| Group Number                     | <input type="text"/>                                                |
| Preferred Role                   | <input checked="" type="radio"/> Master <input type="radio"/> Slave |
| Resume Master Role Upon Recovery | <input checked="" type="checkbox"/>                                 |
| Virtual IP Address               | <input type="text"/>                                                |
| LAN Administration IP Address    | 192.168.86.1                                                        |
| Subnet Mask                      | 255.255.255.0                                                       |

Interface for Slave Router


| High Availability                   |                                                                     |
|-------------------------------------|---------------------------------------------------------------------|
| Enable                              | <input checked="" type="checkbox"/>                                 |
| Group Number                        | <input type="text"/>                                                |
| Preferred Role                      | <input type="radio"/> Master <input checked="" type="radio"/> Slave |
| Configuration Sync.                 | <input type="checkbox"/> Master Serial Number: <input type="text"/> |
| Establish Connections in Slave Role | <input type="checkbox"/>                                            |
| Virtual IP Address                  | <input type="text"/>                                                |
| LAN Administration IP Address       | 192.168.86.1                                                        |
| Subnet Mask                         | 255.255.255.0                                                       |

| High Availability                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>                           | Checking this box specifies that the Peplink router is part of a high availability configuration.                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Group Number</b>                     | This number identifies a pair of Peplink routers operating in a high availability configuration. The two Peplink routers in the pair must have the same <b>Group Number</b> value.                                                                                                                                                                                                                                                                                                           |
| <b>Preferred Role</b>                   | This setting specifies whether the Peplink router operates in master or slave mode. Click the corresponding radio button to set the role of the unit. One of the units in the pair must be configured as the master, and the other unit must be configured as the slave.                                                                                                                                                                                                                     |
| <b>Resume Master Role Upon Recovery</b> | This option is displayed when <b>Master</b> mode is selected in <b>Preferred Role</b> . If this option is enabled, once the device has recovered from an outage, it will take over and resume its <b>Master</b> role from the slave unit.                                                                                                                                                                                                                                                    |
| <b>Configuration Sync.</b>              | This option is displayed when <b>Slave</b> mode is selected in <b>Preferred Role</b> . If this option is enabled and the <b>Master Serial Number</b> entered matches with the actual master unit's, the master unit will automatically transfer the configuration to this unit. Please make sure the <b>LAN IP Address</b> and the <b>Subnet Mask</b> fields are set correctly in the LAN settings page. You can refer to the <b>Event Log</b> for the configuration synchronization status. |
| <b>Master Serial Number</b>             | If <b>Configuration Sync.</b> is checked, the serial number of the master unit is required here for the feature to work properly.                                                                                                                                                                                                                                                                                                                                                            |
| <b>Virtual IP</b>                       | The HA pair must share the same <b>Virtual IP</b> . The <b>Virtual IP</b> and the <b>LAN</b>                                                                                                                                                                                                                                                                                                                                                                                                 |

|                                                          |                                                                                                                                              |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Administration IP</b> must be under the same network. |                                                                                                                                              |
| <b>LAN Administration IP</b>                             | This setting specifies a LAN IP address to be used for accessing administration functionality. This address should be unique within the LAN. |
| <b>Subnet Mask</b>                                       | This setting specifies the subnet mask of the LAN.                                                                                           |


### Important Note

For Peplink routers in NAT mode, the virtual IP (VIP) should be set as the default gateway for all hosts on the LAN segment. For example, a firewall sitting behind the Peplink router should set its default gateway as the virtual IP instead of the IP of the master router.

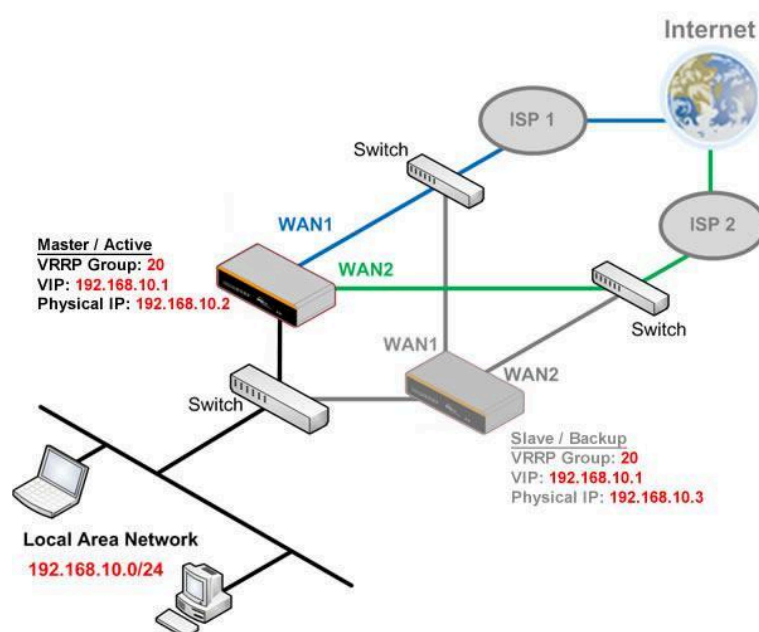

In drop-in mode, no other configuration needs to be set.



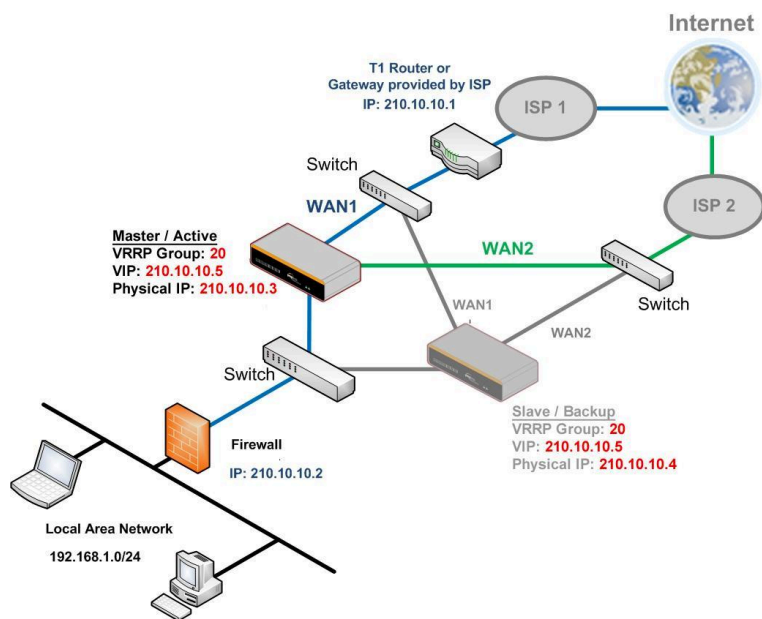

Please note that the drop-in WAN cannot be configured as a LAN bypass port while it is configured for high availability.

## 23.2 RADIUS Server

RADIUS Server settings are located at **Advanced > Misc. Settings > RADIUS Server**.

| Authentication Server       | Host | Port |
|-----------------------------|------|------|
| No server profiles defined  |      |      |
| <a href="#">New Profile</a> |      |      |

| Accounting Server           | Host | Port |
|-----------------------------|------|------|
| No server profiles defined  |      |      |
| <a href="#">New Profile</a> |      |      |

To configure the Authentication Server and Accounting Server, click **New Profile** to display the following screen:

Authentication Server

|        |                                                                          |
|--------|--------------------------------------------------------------------------|
| Name   | <input type="text"/>                                                     |
| Host   | <input type="text"/>                                                     |
| Port   | <input type="text" value="1812"/>                                        |
| Secret | <input type="text"/> <input checked="" type="checkbox"/> Hide Characters |

Save

Cancel

| Authentication Server |                                                                                                                   |
|-----------------------|-------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>           | This field is for specifying a name to represent this profile.                                                    |
| <b>Host</b>           | Specifies the IP address or hostname of the RADIUS server host.                                                   |
| <b>Port</b>           | This setting specifies the UDP destination port for authentication requests. By default, the port number is 1812. |
| <b>Secret</b>         | This field is for entering the secret key for communicating to the RADIUS server.                                 |

Accounting Server

|        |                                                                                       |
|--------|---------------------------------------------------------------------------------------|
| Name   | <input type="text"/>                                                                  |
| Host   | <input type="text"/>                                                                  |
| Port   | <input type="text" value="1813"/>                                                     |
| Secret | <input type="text"/> <div> <input checked="" type="checkbox"/> Hide Characters </div> |

Save

Cancel

| Accounting Server |                                                                                                               |
|-------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Name</b>       | This field is for specifying a name to represent this profile.                                                |
| <b>Host</b>       | Specifies the IP address or hostname of the RADIUS server host.                                               |
| <b>Port</b>       | This setting specifies the UDP destination port for accounting requests. By default, the port number is 1813. |
| <b>Secret</b>     | This field is for entering the secret key for communicating to the RADIUS server.                             |

## 23.3 Certificate Manager

| Certificate                                                                                  |                               |                                                                                     |
|----------------------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------|
| SpeedFusion/IPsec VPN                                                                        | No Certificate                |  |
| Web Admin SSL                                                                                | Default Certificate is in use |  |
| Captive Portal SSL                                                                           | Default Certificate is in use |  |
| OpenVPN CA  | Default Certificate is in use |  |
| Wi-Fi WAN Client Certificate                                                                 |                               |                                                                                     |
| No Certificates defined                                                                      |                               |                                                                                     |
| <a href="#">Add Certificate</a>                                                              |                               |                                                                                     |
| Wi-Fi WAN CA Certificate                                                                     |                               |                                                                                     |
| No Certificates defined                                                                      |                               |                                                                                     |
| <a href="#">Add Certificate</a>                                                              |                               |                                                                                     |

This section allows for certificates to be assigned to the local VPN, Web Admin SSL, Captive Portal SSL, OpenVPN CA, Wi-Fi WAN Client certificate and Wi-Fi WAN CA Certificate.

The following knowledge base article describes how to create self-signed certificates and import it to a Peplink Product.

<https://forum.peplink.com/t/how-to-create-a-self-signed-certificate-and-import-it-to-a-peplink-product/>

## 23.4 Service Forwarding

Service forwarding settings are located at **Advanced > Misc. Settings > Service Forwarding**.

|                                                  |                                 |
|--------------------------------------------------|---------------------------------|
| <b>SMTP Forwarding Setup</b> ?                   |                                 |
| SMTP Forwarding                                  | <input type="checkbox"/> Enable |
| <b>Web Proxy Forwarding Setup</b> ?              |                                 |
| Web Proxy Forwarding                             | <input type="checkbox"/> Enable |
| <b>DNS Forwarding Setup</b> ?                    |                                 |
| Forward Outgoing DNS Requests to Local DNS Proxy | <input type="checkbox"/> Enable |
| <b>Custom Service Forwarding Setup</b>           |                                 |
| Custom Service Forwarding                        | <input type="checkbox"/> Enable |

| Service Forwarding               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SMTP Forwarding</b>           | When this option is enabled, all outgoing SMTP connections destined for any host at TCP port 25 will be intercepted. These connections will be redirected to a specified SMTP server and port number. SMTP server settings for each WAN can be specified after selecting <b>Enable</b> .                                                                                                                                                                                                                                                  |
| <b>Web Proxy Forwarding</b>      | When this option is enabled, all outgoing connections destined for the proxy server specified in <b>Web Proxy Interception Settings</b> will be intercepted. These connections will be redirected to a specified web proxy server and port number. Web proxy interception settings and proxy server settings for each WAN can be specified after selecting <b>Enable</b> .                                                                                                                                                                |
| <b>DNS Forwarding</b>            | When this option is enabled, all outgoing DNS lookups will be intercepted and redirected to the built-in DNS name server. If any LAN device is using the DNS name servers of a WAN connection, you may want to enable this option to enhance the DNS availability without modifying the DNS server setting of the clients. The built-in DNS name server will distribute DNS lookups to corresponding DNS servers of all available WAN connections. In this case, DNS service will not be interrupted, even if any WAN connection is down. |
| <b>Custom Service Forwarding</b> | When custom service forwarding is enabled, outgoing traffic with the specified TCP port will be forwarded to a local or remote server by defining its IP address and port number.                                                                                                                                                                                                                                                                                                                                                         |

### 23.4.1 SMTP Forwarding

Some ISPs require their users to send e-mails via the ISP's SMTP server. All outgoing SMTP connections are blocked except those connecting to the ISP's. Peplink routers support intercepting and redirecting all outgoing SMTP connections (destined for TCP port 25) via a WAN connection to the WAN's corresponding SMTP server.

| SMTP Forwarding Setup |                          |                                            |           |
|-----------------------|--------------------------|--------------------------------------------|-----------|
| SMTP Forwarding       |                          | <input checked="" type="checkbox"/> Enable |           |
| Connection            | Enable Forwarding?       | SMTP Server                                | SMTP Port |
| WAN 1                 | <input type="checkbox"/> |                                            |           |
| WAN 2                 | <input type="checkbox"/> |                                            |           |
| Wi-Fi WAN             | <input type="checkbox"/> |                                            |           |
| Cellular 1            | <input type="checkbox"/> |                                            |           |
| Cellular 2            | <input type="checkbox"/> |                                            |           |
| USB                   | <input type="checkbox"/> |                                            |           |

To enable the feature, select **Enable** under **SMTP Forwarding Setup**. Check **Enable Forwarding** for the WAN connection(s) that needs forwarding. Under **SMTP Server**, enter the ISP's e-mail server host name or IP address. Under **SMTP Port**, enter the TCP port number for each WAN.

The Peplink router will intercept SMTP connections. Choose a WAN port according to the outbound policy, and then forward the connection to the SMTP server if the chosen WAN has enabled forwarding. If the forwarding is disabled for a WAN connection, SMTP connections for the WAN will be simply be forwarded to the connection's original destination.

#### Note

If you want to route all SMTP connections only to particular WAN connection(s), you should create a custom rule in outbound policy (see **Section 14.2**).

### 23.4.2 Web Proxy Forwarding

| Web Proxy Forwarding Setup      |                                                                                                   |                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------|---------------------------------------------|
| Web Proxy Forwarding            |                                                                                                   | <input checked="" type="checkbox"/> Enable  |
| Web Proxy Interception Settings |                                                                                                   |                                             |
| Proxy Server                    | IP Address <input type="text"/> Port <input type="text"/><br>(Current settings in users' browser) |                                             |
| Connection                      | Enable Forwarding?                                                                                | Proxy Server IP Address : Port              |
| WAN 1                           | <input type="checkbox"/>                                                                          | <input type="text"/> : <input type="text"/> |
| WAN 2                           | <input type="checkbox"/>                                                                          | <input type="text"/> : <input type="text"/> |
| Wi-Fi WAN                       | <input type="checkbox"/>                                                                          | <input type="text"/> : <input type="text"/> |
| Cellular 1                      | <input type="checkbox"/>                                                                          | <input type="text"/> : <input type="text"/> |
| Cellular 2                      | <input type="checkbox"/>                                                                          | <input type="text"/> : <input type="text"/> |
| USB                             | <input type="checkbox"/>                                                                          | <input type="text"/> : <input type="text"/> |

When this feature is enabled, the Peplink router will intercept all outgoing connections destined for the proxy server specified in **Web Proxy Interception Settings**, choose a WAN connection with reference to the outbound policy, and then forward them to the specified web proxy server and port number. Redirected server settings for each WAN can be set here. If forwarding is disabled for a WAN, web proxy connections for the WAN will be simply forwarded to the connection's original destination.

### 23.4.3 DNS Forwarding

| DNS Forwarding Setup                             |                                 |
|--------------------------------------------------|---------------------------------|
| Forward Outgoing DNS Requests to Local DNS Proxy | <input type="checkbox"/> Enable |

When DNS forwarding is enabled, all clients' outgoing DNS requests will also be intercepted and forwarded to the built-in DNS proxy server.

### 23.4.4 Custom Service Forwarding

| Custom Service Forwarding Setup |                                            |                      |                      |                                  |
|---------------------------------|--------------------------------------------|----------------------|----------------------|----------------------------------|
| Custom Service Forwarding       | <input checked="" type="checkbox"/> Enable |                      |                      |                                  |
| Settings                        | TCP Port                                   | Server IP Address    | Server Port          |                                  |
|                                 | <input type="text"/>                       | <input type="text"/> | <input type="text"/> | <input type="button" value="+"/> |

After clicking the **enable** checkbox, enter your TCP port for traffic heading to the router, and then specify the IP Address and Port of the server you wish to forward to the service to.

## 23.5 Service Passthrough

Service passthrough settings can be found at **Advanced > Misc. Settings > Service Passthrough**.

| Service Passthrough Support |                                                                                                                                                                                                                                                                                                |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SIP                         | <input checked="" type="radio"/> Standard Mode <input type="radio"/> Compatibility Mode<br><input checked="" type="checkbox"/> Define custom signal ports<br>1. <input type="text"/> 2. <input type="text"/> 3. <input type="text"/>                                                           |
| H.323                       | <input checked="" type="checkbox"/> Enable                                                                                                                                                                                                                                                     |
| FTP                         | <input checked="" type="checkbox"/> Enable<br><input type="checkbox"/> Define custom control ports                                                                                                                                                                                             |
| TFTP                        | <input checked="" type="checkbox"/> Enable                                                                                                                                                                                                                                                     |
| IPsec NAT-T                 | <input checked="" type="checkbox"/> Enable<br><input checked="" type="checkbox"/> Define custom ports<br>1. <input type="text"/> 2. <input type="text"/> 3. <input type="text"/><br><input checked="" type="checkbox"/> Route IPsec Site-to-Site VPN<br>via <input type="text" value="WAN 1"/> |

Some Internet services need to be specially handled in a multi-WAN environment. Peplink routers can handle these services such that Internet applications do not notice being behind a multi-WAN router. Settings for service passthrough support are available here.

| Service Passthrough Support |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SIP</b>                  | Session initiation protocol, aka SIP, is a voice-over-IP protocol. The Peplink router can act as a SIP application layer gateway (ALG) which binds connections for the same SIP session to the same WAN connection and translate IP address in the SIP packets correctly in NAT mode. Such passthrough support is always enabled, and there are two modes for selection: <b>Standard Mode</b> and <b>Compatibility Mode</b> . If your SIP server's signal port number is non-standard, you can check the box <b>Define custom signal ports</b> and input the port numbers to the text boxes. |
| <b>H.323</b>                | With this option enabled, protocols that provide audio-visual communication sessions will be defined on any packet network and pass through the Peplink router.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>FTP</b>                  | FTP sessions consist of two TCP connections; one for control and one for data. In a multi-WAN situation, they must be routed to the same WAN connection. Otherwise, problems will arise in transferring files. By default, the Peplink router monitors TCP control connections on port 21 for any FTP connections and binds TCP connections of the same FTP session to the same WAN. If you have an FTP server listening on a port number other than 21, you can check <b>Define custom control ports</b> and enter the port numbers in the text boxes.                                      |
| <b>TFTP</b>                 | The Peplink router monitors outgoing TFTP connections and routes any incoming TFTP data packets back to the client. Select <b>Enable</b> if you want to enable TFTP passthrough support.                                                                                                                                                                                                                                                                                                                                                                                                     |



## IPsec NAT-T

This field is for enabling the support of IPsec NAT-T passthrough. UDP ports 500, 4500, and 10000 are monitored by default. You may add more custom data ports that your IPsec system uses by checking **Define custom ports**. If the VPN contains IPsec site-to-site VPN traffic, check **Route IPsec Site-to-Site VPN** and choose the WAN connection to route the traffic to.

## 23.6 UART

Selected Peplink MAX routers feature a RS-232 serial interface on the built-in terminal block. The RS-232 serial interface can be used to connect to a serial device and make it accessible over an TCP/IP network.

The serial interface can be enabled and parameters can be set on the web admin page under **Advanced > UART**. Make sure they match the serial device you are connecting to.

| Serial to Network         |                                                                                                             |
|---------------------------|-------------------------------------------------------------------------------------------------------------|
| Enable                    | <input checked="" type="checkbox"/>                                                                         |
| Allowed Source IP Subnets | <input checked="" type="radio"/> Any <input type="radio"/> Allows access from the following IP subnets only |
| Web Console               | <input type="checkbox"/>                                                                                    |

| Serial Parameters |         |
|-------------------|---------|
| Baud Rate         | 9600 ▼  |
| Data Bits         | 8 ▼     |
| Stop Bits         | 1 ▼     |
| Parity            | None ▼  |
| Flow Control      | None ▼  |
| Interface         | RS232 ▼ |

| Operating Settings   |                   |
|----------------------|-------------------|
| Operation Mode       | TCP Server Mode ▼ |
| Local TCP Port       | 4001              |
| Max Connection       | 1                 |
| TCP Alive Check Time | 7 min(s)          |
| Inactivity Time      | 0 ms              |

| Data Packing      |                          |
|-------------------|--------------------------|
| Packing Length    | 0 byte(s)                |
| Delimiter         | <input type="checkbox"/> |
| Delimiter process | Do Nothing ▼             |
| Force Transmit    | 0 ms                     |

There are 4 pins i.e. TX, RX, RTS, CTS on the terminal block for serial connection and they correspond to the pins in a DB-9 connector as follows:

### DB-9 Peplink MAX Terminal Block


|       |                 |
|-------|-----------------|
| Pin 1 | –               |
| Pin 2 | Rx (rated +25V) |
| Pin 3 | Tx (rated +12V) |
| Pin 4 | –               |
| Pin 5 | –               |
| Pin 6 | –               |
| Pin 7 | RTS             |
| Pin 8 | CTS             |
| Pin 9 | –               |

The RS232 serial interface is not an isolated RS232. External galvanic isolation may be added if required.

Be sure to check whether your serial cable is a null modem cable, commonly known as crossover cable, or a straight through cable. If in doubt, swap Rx and Tx, and RTS and CTS, at the other end and give it another go.

Once connected, your serial device should be accessible on your Peplink MAX router LAN IP address at the specified TCP port.

## 23.7 GPS

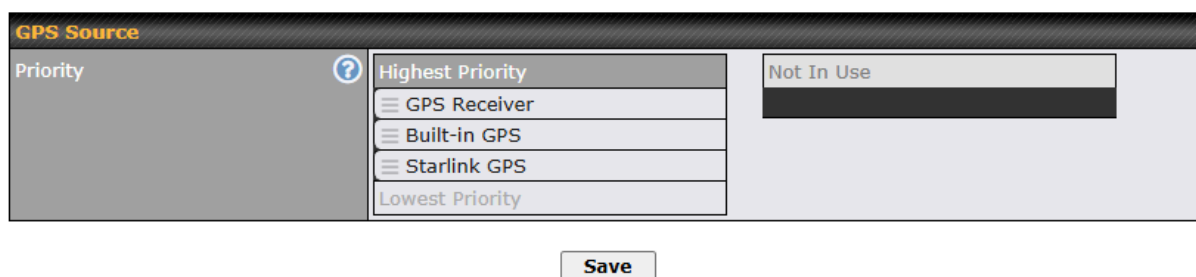

| Priority | ? | GPS Source       |
|----------|---|------------------|
|          |   | Highest Priority |
|          |   | GPS Receiver     |
|          |   | Built-in GPS     |
|          |   | Starlink GPS     |
|          |   | Lowest Priority  |

Not In Use

Save

This settings is to specific the priority of the GPS source to be used for receiving GPS data. The device will always use the highest priority GPS source to receive GPS data. A lower priority GPS source will only be used when all higher priority GPS source data is invalid or unavailable. GPS source type will be shows on the Dashboard map.



## 23.8 GPS Forwarding

Using the GPS forwarding feature, some Peplink routers can automatically send GPS reports to a specified server. To set up GPS forwarding, navigate to **Advanced > Misc. Settings > GPS Forwarding**.

| GPS Forwarding                 |                                                                                                                                                                                 |      |          |        |                                                 |                |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|----------|--------|-------------------------------------------------|----------------|
| Enable                         | <input checked="" type="checkbox"/>                                                                                                                                             |      |          |        |                                                 |                |
| Destination <span>?</span>     | IP Address / Host Name                                                                                                                                                          | Port | Protocol | Format | Report Interval                                 |                |
|                                |                                                                                                                                                                                 |      | UDP      | NMEA   | <input checked="" type="checkbox"/> Default 1 s | <span>✖</span> |
|                                |                                                                                                                                                                                 |      | UDP      | TAIP   | <input type="checkbox"/> Stationary             |                |
|                                |                                                                                                                                                                                 |      | UDP      | TAIP   | <input checked="" type="checkbox"/> Default 1 s | <span>+</span> |
| NMEA Sentence Type             | <input type="checkbox"/> GPRMC<br><input type="checkbox"/> GPGGA<br><input type="checkbox"/> GPVTG<br><input type="checkbox"/> GPGSA<br><input type="checkbox"/> GPGSV          |      |          |        |                                                 |                |
| NMEA Vehicle ID <span>?</span> | <input type="checkbox"/>                                                                                                                                                        |      |          |        |                                                 |                |
| TAIP Sentence Type             | <input type="checkbox"/> PV - Position / Velocity Solution<br><input type="checkbox"/> CP - Compact Position Solution<br><input type="checkbox"/> LN - Long Navigation Solution |      |          |        |                                                 |                |
| TAIP ID (optional)             | <input type="text"/>                                                                                                                                                            |      |          |        |                                                 |                |

Save

### GPS Forwarding

#### Enable

Check this box to turn on GPS forwarding.

**Server** Enter the name/IP address of the server that will receive GPS data. Also specify a port number, protocol (**UDP** or **TCP**), Format (**NMEA** or **TAIP**) and a report interval. Click  to save these settings.

**NMEA Sentence Type** If you've chosen to send GPS reports in NMEA format, select one or more sentence types for sending the data (**GPRMC**, **GPGGA**, **GPVTG**, **GPGSA**, and **GPGSV**).

**Vehicle ID** The vehicle ID will be appended in the last field of the NMEA sentence. Note that the NMEA sentence will become customized and non-standard.

**TAIP Sentence Type/TAIP ID (optional)** If you've chosen to send GPS reports in TAIP format, select one or more sentence types for sending the data (**PV—Position / Velocity Solution** and **CP—Compact Velocity Solution**). You can also optionally include an ID number in the **TAIP ID** field.

## 23.9 GPS Receiver

| GPS Receiver for Raw NMEA 0183 Network Stream  |                                                                |                                                                                                           |                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Enable                                                                                                                              | <input checked="" type="checkbox"/>                            |                                                                                                           |                                                                                       |
| Protocol                                                                                                                            | <input checked="" type="radio"/> TCP <input type="radio"/> UDP |                                                                                                           |                                                                                       |
| Port                                                                                                                                | <input type="text"/>                                           |                                                                                                           |                                                                                       |
| Access Control                                                                                                                      | Sender IP Address / Network                                    | Subnet Mask                                                                                               |                                                                                       |
|                                                                                                                                     | <input type="text"/>                                           | 255.255.255.0 (/24)  |  |

**Save**

---

## GPS Receiver for Raw NMEA 0183 Network Stream

---

**Enable**      Check this box to turn on GPS forwarding.

---

**Protocol**      Select protocol **TCP** or **UDP**

---

**Port**      Specific port number.

---

**Access Control**      Enter the IP address / Network of the sender. Click  to save these settings.

## 23.10 Ignition Sensing

Ignition Sensing detects the ignition signal status of a vehicle it is installed in.

This feature allows the router to start up or shut down when the engine of that vehicle is started or turned off.


The time delay setting between ignition off and power down of the router is a configurable setting, which allows the router to stay on for a period of time after the engine of a vehicle is turned off.

Note: Ignition Sensing is supported on MAX Orbit 2 and MAX Orbit 4 only. MAX Orbit 8 does not support Ignition Sensing.


### Ignition Sensing installation

| Function                                                                                                                                                                                               |                                                       | Colour Wire |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|-------------|
|                                                                                                                      | I/O optional *                                        | Brown       |
|                                                                                                                                                                                                        | IGN I/P connected to positive feed on the ignition ** | Orange      |
|                                                                                                                                                                                                        | DC IN - connected to permanent negative feed (ground) | Black       |
|                                                                                                                                                                                                        | DC IN + connected to permanent positive feed (power)  | Red         |
| <p>* Currently not functional; will be used for additional features in future firmware.</p> <p>** Connecting IGN I/P is optional and is needed only if the Ignition Sensing feature is configured.</p> |                                                       |             |

## Connectivity diagram for devices with 4-pin connector

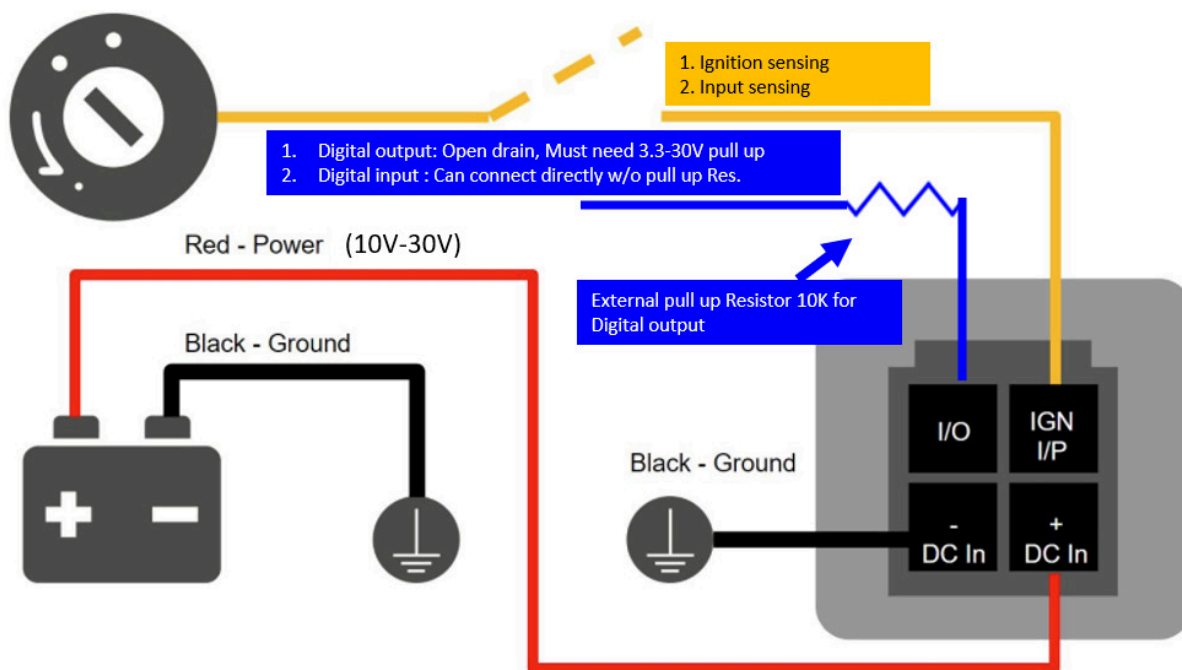

## Connectivity diagram for devices with terminal block connection

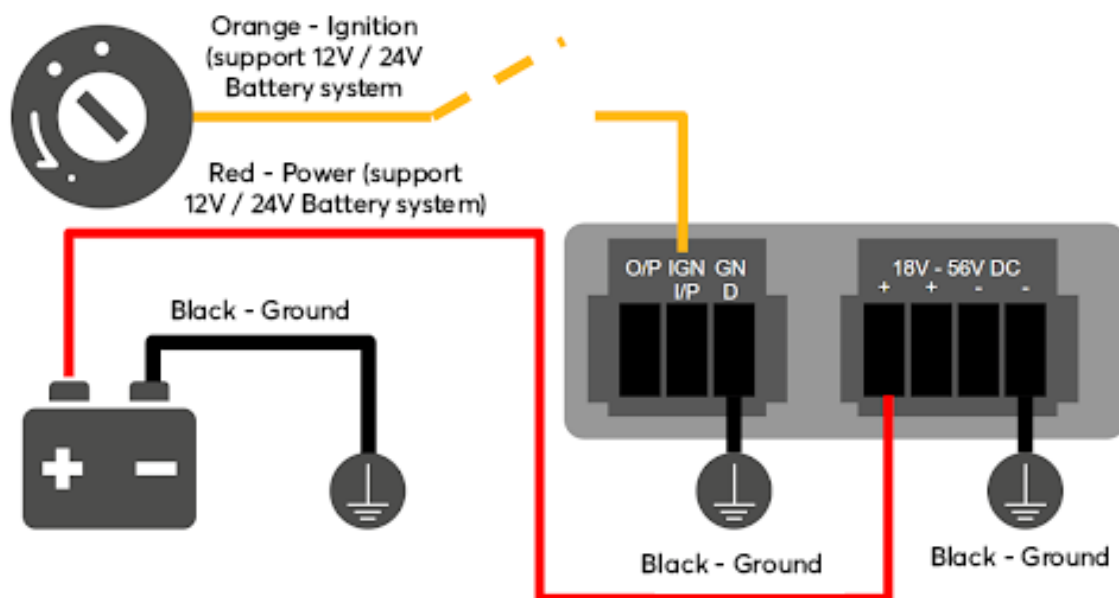

## GPIO Menu

**Note: This feature is applicable for certain models that come with a GPIO interface.**

Ignition Sensing options can be found in **Advanced > Misc. Settings > GPIO**.

The configurable option for Ignition Input is **Delay**; the time in seconds that the router stays powered on after the ignition is turned off.

a.) Ignition sensing: 9-30V active high for IGN purpose

b.) Input Sensing: I/O input

| IGN I/P    |                                     |
|------------|-------------------------------------|
| Name       | IGN I/P                             |
| Enable     | <input checked="" type="checkbox"/> |
| Type       | Digital Input ▾                     |
| Mode       | Input Sensing ▾                     |
| State Name | High: High<br>Low: Low              |
| Delay      | <input type="text"/> seconds        |

The O/P (connected to the I/O pin on a 4 pin connector) can be configured as a digital input, a digital output, or an analog input.

Digital Input – the connection supports input sensing; it reads the external input and determines if the settings should be 'High' (on) or 'Low' (off).

State Name - This field is to custom names shows on event log when digital input is high or low.

a.) Digital output:

Open drain for IO output. It is required to add an external pull up resistor of 10K for 3.3-30V pull up voltage.

(DO NOT exceed 250mA)

3.3-30V active high, 0.05-0.5V active low(mapping to 3.3-30V pull up voltage)

b.) Digital input: I/O input

| O/P    |                                     |
|--------|-------------------------------------|
| Enable | <input checked="" type="checkbox"/> |
| Type   | Digital Output ▾                    |
| Mode   | WAN Status ▾                        |

**Note: The Digital Output state (on/off) upon rebooting the device may vary depending on the model, eg. MAX BR1 MK2 = Persistent; MAX Transit Mini with ContentHub = Reset to default, etc.**



Analog Input - to be confirmed. In most cases, it should read the external input and determine the voltage level.

## 23.11 NTP Server

Peplink routers can now serve as a local NTP server. Upon start up, it is now able to provide connected devices with the accurate time, precise UTC from either an external NTP server or via GPS and ensuring that connected devices always receive the correct time.

Compatible with: MAX Orbit 2, MAX Orbit 4, MAX Orbit 8

NTP Server setting can be found via: **Advanced > Misc. Settings > NTP Server**


| NTP Server |                          |
|------------|--------------------------|
| Enable     | <input type="checkbox"/> |

Time Settings can be found at **System > Time > Time Settings**

| Time Settings |                                                                          |
|---------------|--------------------------------------------------------------------------|
| Time Zone     | <div>(GMT) Casablanca</div> <div><input type="checkbox"/> Show all</div> |
| Time Sync     | Time Server                                                              |
| Time Server   | 0.peplink.pool.ntp.org                                                   |


## 23.12 Grouped Networks

**Advanced > Misc. Settings > Grouped Networks** allows to configure destination networks in grouped format.

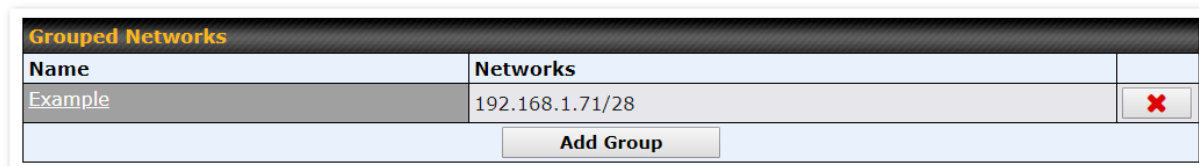

| Grouped Networks                         |                 |                                                                                     |
|------------------------------------------|-----------------|-------------------------------------------------------------------------------------|
| Name                                     | Networks        |                                                                                     |
| Example                                  | 192.168.1.71/28 |  |
| <input type="button" value="Add Group"/> |                 |                                                                                     |

Select Add group to create a new group with single IPAddresses or subnets from different VLANs.

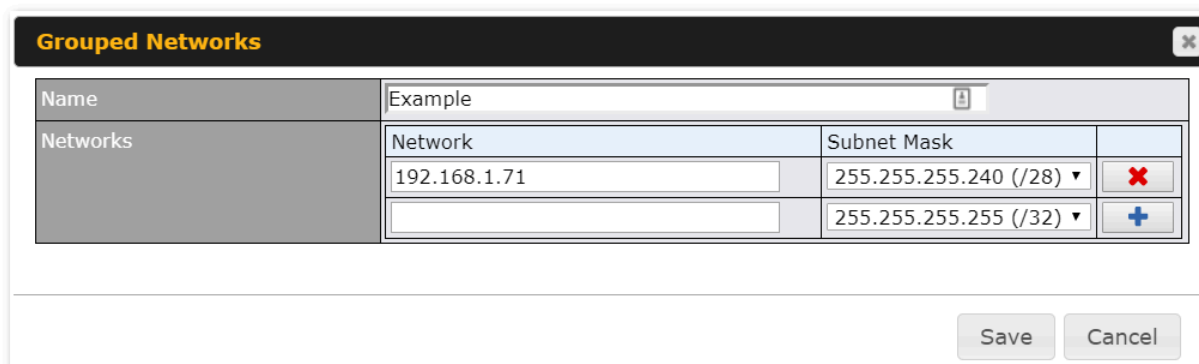

| Grouped Networks  |                                                                                             |                         |                                                                                     |
|------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|-------------------------|-------------------------------------------------------------------------------------|
| Name                                                                                                 | Example  |                         |                                                                                     |
| Networks                                                                                             | Network                                                                                     | Subnet Mask             |                                                                                     |
|                                                                                                      | 192.168.1.71                                                                                | 255.255.255.240 (/28) ▾ |  |
|                                                                                                      |                                                                                             | 255.255.255.255 (/32) ▾ |  |
| <input type="button" value="Save"/> <input type="button" value="Cancel"/>                            |                                                                                             |                         |                                                                                     |

The created network groups can be used in outbound policies, firewall rules.

## 23.13 UDP Relay

You may define the UDP relay by clicking the **Advanced > Misc Settings > UDP Relay**. You can click  to enable the UDP relay to relay UDP Broadcast or Multicast traffic for LAN/VLAN/SpeedFusion VPN.

UDP Relay

Disabled



Click “*New UDP Relay Rule*” to define the relay rule.

| Name                       | Port / Multicast Address | Source Network | Destination Network |
|----------------------------|--------------------------|----------------|---------------------|
| No UDP relay rules defined |                          |                |                     |
| New UDP Relay Rule         |                          |                |                     |

UDP Relay

Name

Port

Multicast

☒ Address:

Source Network

LAN: Untagged LAN

Destination Network

Any

Save

Cancel

| UDP Relay                  |                                                                                                                                                                |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                | This field is for specifying a name to represent this profile.                                                                                                 |
| <b>Port</b>                | This feid is to enter the specific port number for the UDP relay                                                                                               |
| <b>Multicast</b>           | If Multicast is not selected, it will broadcast relay rule. If Multicast is selected, you may need to enter a valid multicast address.                         |
| <b>Secure Network</b>      | Select the specific connection as a source network to where the device is to relay UDP Broadcast packets.                                                      |
| <b>Destination Network</b> | You may select the specific connection from the drop-down list or may custom combination network as a destination network that receives the UDP packet relays. |

## 24 AP

### 24.1 AP Controller

The AP controller acts as a centralized controller of Peplink Access Points.

With this feature, users can customize and manage up to 1500 Access Points from a single Peplink router interface.

To configure, navigate to the **AP** tab, and the following screen appears.

| AP Controller |                                                                                                   |
|---------------|---------------------------------------------------------------------------------------------------|
| AP Management | <input checked="" type="checkbox"/> Integrated AP <input checked="" type="checkbox"/> External AP |
| Sync. Method  | As soon as possible ▼                                                                             |
| Permitted AP  | <input checked="" type="radio"/> Any <input type="radio"/> Approved List                          |


| AP Controller        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AP Management</b> | The AP controller for managing Peplink APs can be enabled by checking this box. When this option is enabled, the AP controller will wait for management connections originating from APs over the LAN on TCP and UDP port 11753. It will also wait for captive portal connections on TCP port 443. An extended DHCP option, <b>CAPWAP Access Controller addresses</b> (field 138), will be added to the DHCP server. A local DNS record, <b>AP Controller</b> , will be added to the local DNS proxy. |
| <b>Sync Method</b>   | <ul style="list-style-type: none"> <li>As soon as possible</li> <li>Progressively</li> <li>One at a time</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Permitted AP</b>  | Access points to manage can be specified here. If <b>Any</b> is selected, the AP controller will manage any AP that reports to it. If <b>Approved List</b> is selected, only APs with serial numbers listed in the provided text box will be managed.                                                                                                                                                                                                                                                 |

### 24.2 Wireless SSID

| SSID                               | Security Policy |
|------------------------------------|-----------------|
| No SSID Defined                    |                 |
| <input type="button" value="Add"/> |                 |

Current SSID information appears in the **SSID** section. To edit an existing SSID, click its name in the list. To add a new SSID, click **Add**. Note that the following settings vary by model.

The below settings show a new SSID window with Advanced Settings enabled (these are available by selecting the question mark in the top right corner).

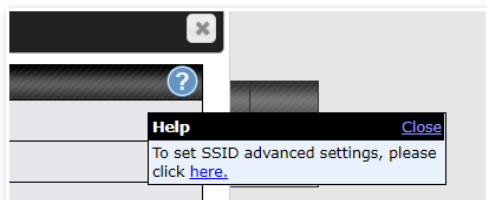

**SSID**

| SSID Settings             |                                                                                                 |
|---------------------------|-------------------------------------------------------------------------------------------------|
| SSID                      | <input type="text"/>                                                                            |
| Schedule                  | Always on ▼                                                                                     |
| VLAN                      | Untagged LAN ▼                                                                                  |
| Broadcast SSID            | <input checked="" type="checkbox"/>                                                             |
| Data Rate                 | <input checked="" type="radio"/> Auto <input type="radio"/> Fixed <input type="radio"/> Minimum |
| Multicast Filter          | <input type="checkbox"/>                                                                        |
| Multicast Rate            | MCS24/MCS16/MCS8/MCS0/6M ▼                                                                      |
| IGMP Snooping             | <input type="checkbox"/>                                                                        |
| Layer 2 Isolation         | <input type="checkbox"/>                                                                        |
| Maximum number of clients | 2.4 GHz: <input type="text" value="Unlimited"/> 5 GHz: <input type="text" value="Unlimited"/>   |
| Band Steering             | <input type="button" value="Help"/> <input type="button" value="Disable"/> ▼                    |

| SSID Settings                       |                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SSID</b>                         | This setting specifies the SSID of the virtual AP to be scanned by Wi-Fi clients.                                                                                                                                                                                                                                                                             |
| <b>Schedule</b>                     | Click the drop-down menu to apply a time schedule to this interface                                                                                                                                                                                                                                                                                           |
| <b>VLAN</b>                         | This setting specifies the VLAN ID to be tagged on all outgoing packets generated from this wireless network (i.e., packets that travel from the Wi-Fi segment through the Peplink AP One unit to the Ethernet segment via the LAN port). The default value of this setting is <b>0</b> , which means VLAN tagging is disabled (instead of tagged with zero). |
| <b>Broadcast SSID</b>               | This setting specifies whether or not Wi-Fi clients can scan the SSID of this wireless network. <b>Broadcast SSID</b> is enabled by default.                                                                                                                                                                                                                  |
| <b>Data Rate <sup>A</sup></b>       | Select <b>Auto</b> to allow the Peplink router to set the data rate automatically, or select <b>Fixed</b> and choose a rate from the displayed drop-down menu.                                                                                                                                                                                                |
| <b>Multicast Filter<sup>A</sup></b> | This setting enables the filtering of multicast network traffic to the wireless SSID.                                                                                                                                                                                                                                                                         |

|                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Multicast Rate<sup>A</sup></b>            | This setting specifies the transmit rate to be used for sending multicast network traffic. The selected <b>Protocol</b> and <b>Channel Bonding</b> settings will affect the rate options and values available here.                                                                                                                                                                                                                                                                          |
| <b>IGMP Snooping<sup>A</sup></b>             | To allow the Peplink router to listen to internet group management protocol (IGMP) network traffic, select this option.                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Layer 2 Isolation<sup>A</sup></b>         | <p><b>Layer 2</b> refers to the second layer in the ISO Open System Interconnect model.</p> <p>When this option is enabled, clients on the same VLAN, SSID, or subnet are isolated to that VLAN, SSID, or subnet, which can enhance security. Traffic is passed to the upper communication layer(s). By default, the setting is disabled.</p>                                                                                                                                                |
| <b>Maximum Number of Clients<sup>A</sup></b> | Indicate the maximum number of clients that should be able to connect to each frequency.                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Band Steering<sup>A</sup></b>             | <p>To reduce 2.4 GHz band overcrowding, AP with band steering steers clients capable of 5 GHz operation to 5 GHz frequency.</p> <p>Choose between:</p> <p><b>Force</b> - Clients capable of 5 GHz operation are only offered with 5 GHz frequency.</p> <p><b>Prefer</b> - Clients capable of 5 GHz operation are encouraged to associate with 5 GHz frequency. If the clients insist to attempt on 2.4 GHz frequency, 2.4 GHz frequency will be offered.</p> <p><b>Disable</b> - Default</p> |

<sup>A</sup> - Advanced feature. Click the  button on the top right-hand corner to activate.

| Security Settings |                        |
|-------------------|------------------------|
| Security Policy   | Open (No Encryption) ▼ |

## Security Settings

**Security Policy** This setting configures the wireless authentication and encryption methods. Available options are:

- **Open (No Encryption)**
- **Enhanced Open (OWE)**
- **WPA3 – Personal (AES:CCMP)**
- **WPA3 – Enterprise (AES:CCMP)**
- **WPA2/WPA3 – Personal (AES:CCMP)**
- **WPA2 – Personal (AES:CCMP)**
- **WPA2 – Enterprise (AES:CCMP)**
- **WPA/WPA2 – Personal (TKIP/AES: CCMP)**
- **WPA/WPA2 – Enterprise (TKIP/AES: CCMP)**

To allow any Wi-Fi client to access your AP without authentication, select **Open (No Encryption)**. Details of each available authentication method follow.

| Security Settings |                                     |
|-------------------|-------------------------------------|
| Security Policy   | Enhanced Open (OWE) ▼               |
| Transition Mode   | <input checked="" type="checkbox"/> |

## Enhanced Open (OWE)

**Transition Mode** With the option enabled, legacy clients will be able to connect in Open mode. With the option disabled, legacy clients will not be able to connect. OWE-supported clients will always connect in OWE mode.

| Security Settings |                                                                             |
|-------------------|-----------------------------------------------------------------------------|
| Security Policy   | WPA3 - Personal ▼                                                           |
| Encryption        | AES:CCMP                                                                    |
| Shared Key        | <input type="text"/><br><input checked="" type="checkbox"/> Hide Characters |
| Fast Transition   | <input type="checkbox"/>                                                    |

## WPA3 – Personal

**Shared Key** Enter a passphrase of between 8 and 63 alphanumeric characters to create a passphrase used for data encryption and authentication. Click **Hide / Show Characters** to toggle visibility.

**Fast Transition** Fast Transition

[802.11r] When this option is ticked, the transition process for a mobile client



is improved as it moves between access points.

| Security Settings |                                                              |
|-------------------|--------------------------------------------------------------|
| Security Policy   | WPA3 - Enterprise ▼                                          |
| Encryption        | AES:CCMP                                                     |
| 802.1X Version    | <input checked="" type="radio"/> v1 <input type="radio"/> v2 |
| Fast Transition   | <input type="checkbox"/>                                     |

## WPA3 – Enterprise

### 802.1X Version

Choose **v1** or **v2** of the 802.1x EAPOL. When **v1** is selected, both **v1** and **v2** clients can associate with the access point. When **v2** is selected, only **v2** clients can associate with the access point. Most modern wireless clients support **v2**. For stations that do not support **v2**, select **v1**. The default is **v2**.

### Fast Transition

Fast Transition

[802.11r] When this option is ticked, the transition process of a mobile client is improved as it moves between access points.

| Security Settings           |                                                                             |
|-----------------------------|-----------------------------------------------------------------------------|
| Security Policy             | WPA2/WPA3 - Personal ▼                                                      |
| Encryption                  | AES:CCMP                                                                    |
| Shared Key ?                | <input type="text"/><br><input checked="" type="checkbox"/> Hide Characters |
| Management Frame Protection | Default (Optional) ▼                                                        |
| Fast Transition ?           | <input type="checkbox"/>                                                    |

## WPA2/WPA3 – Personal

**Shared Key** Enter a passphrase of between 8 and 63 alphanumeric characters to create a passphrase used for data encryption and authentication. Click **Hide / Show Characters** to toggle visibility.

**Management Frame Protection** This feature protects stations against forged management frames spoofed from other devices. Frames that are protected include Disassociation, Deauthentication, and QoS Action.

**Fast Transition** Fast Transition [802.11r] When this option is ticked, the transition process of a mobile client is improved as it moves between access points.

| Security Settings           |                                                                             |
|-----------------------------|-----------------------------------------------------------------------------|
| Security Policy             | WPA2 - Personal ▼                                                           |
| Encryption                  | AES:CCMP                                                                    |
| Private Pre-Shared Key ?    | <input type="checkbox"/>                                                    |
| Shared Key ?                | <input type="text"/><br><input checked="" type="checkbox"/> Hide Characters |
| Management Frame Protection | Default (Disabled) ▼                                                        |
| Fast Transition ?           | <input type="checkbox"/>                                                    |

| Security Settings           |                                     |                                                              |                |         |   |
|-----------------------------|-------------------------------------|--------------------------------------------------------------|----------------|---------|---|
| Security Policy             | WPA2 - Personal ▼                   |                                                              |                |         |   |
| Encryption                  | AES:CCMP                            |                                                              |                |         |   |
| Private Pre-Shared Key ?    | <input checked="" type="checkbox"/> |                                                              |                |         |   |
|                             | Name                                | Shared Key                                                   | MAC            | VLAN ID |   |
|                             | UserA                               | .....<br><input checked="" type="checkbox"/> Hide Characters | : : : : :      | Untagge | ✗ |
|                             | UserB                               | .....<br><input checked="" type="checkbox"/> Hide Characters | AA:AA:AA:AA:AA | Untagge | ✗ |
|                             |                                     | .....<br><input checked="" type="checkbox"/> Hide Characters | : : : : :      | Untagge | + |
| Management Frame Protection | Default (Disabled) ▼                |                                                              |                |         |   |

## WPA2 – Personal

### Private Shared Key

Enable the Private Pre-Shared Key (PPSK) option to set unique pre-shared keys for individual users or groups on the same SSID. Please provide the following information for each user or group:

#### Name (Optional)

Name for the profile

#### Shared Key

The passphrase key is used for data encryption and authentication. You can click “Hide/Show Characters” to toggle the visibility of the shared key.

---

**MAC  
(Optional)**

By default, all MAC addresses are allowed. If a specific MAC address is entered, only that device can access this WiFi SSID using the provided shared key.

---

**VLAN ID  
(Optional)**

The VLAN is assigned to the user upon logging into the WiFi. If not specified, the user will be assigned to the default untagged LAN.

\*Each “Shared Key + MAC” combination must be unique in a different profile.

---

**Shared Key**

Enter a passphrase of between 8 and 63 alphanumeric characters to create a passphrase used for data encryption and authentication. Click **Hide / Show Characters** to toggle visibility.

---

**Management Frame  
Protection**

This feature protects stations against forged management frames spoofed from other devices. Frames that are protected include Disassociation, Deauthentication, and QoS Action.

---

**Fast  
Transition**

Fast Transition

[802.11r] When this option is ticked, the transition process of a mobile client

is improved as it moves between access points.

| Security Settings                                                                                 |                                                              |
|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| Security Policy                                                                                   | WPA2 - Enterprise ▼                                          |
| Encryption                                                                                        | AES:CCMP                                                     |
| 802.1X Version                                                                                    | <input checked="" type="radio"/> v1 <input type="radio"/> v2 |
| Management Frame Protection                                                                       | Default (Disabled) ▼                                         |
| Fast Transition  | <input type="checkbox"/>                                     |

## WPA2 – Enterprise

**802.1X Version** Choose **v1** or **v2** of the 802.1x EAPOL. When **v1** is selected, both **v1** and **v2** clients can associate with the access point. When **v2** is selected, only **v2** clients can associate with the access point. Most modern wireless clients support **v2**. For stations that do not support **v2**, select **v1**. The default is **v2**.

**Management Frame Protection** This feature protects stations against forged management frames spoofed from other devices. Frames that are protected include Disassociation, Deauthentication, and QoS Action.

**Fast Transition** Fast Transition

[802.11r] When this option is ticked, the transition process of a mobile client is improved as it moves between access points.

| Security Settings           |                                                                                           |
|-----------------------------|-------------------------------------------------------------------------------------------|
| Security Policy             | WPA/WPA2 - Personal ▼                                                                     |
| Encryption                  | TKIP/AES:CCMP                                                                             |
| Private Pre-Shared Key ?    | <input type="checkbox"/>                                                                  |
| Shared Key ?                | <input type="text" value="....."/><br><input checked="" type="checkbox"/> Hide Characters |
| Management Frame Protection | Default (Disabled) ▼                                                                      |

| Security Settings           |       |                                                                                           |                |         |   |
|-----------------------------|-------|-------------------------------------------------------------------------------------------|----------------|---------|---|
| Security Policy             |       | WPA/WPA2 - Personal ▼                                                                     |                |         |   |
| Encryption                  |       | TKIP/AES:CCMP                                                                             |                |         |   |
| Private Pre-Shared Key ?    |       | <input checked="" type="checkbox"/>                                                       |                |         |   |
|                             | Name  | Shared Key                                                                                | MAC            | VLAN ID |   |
|                             | UserA | <input type="text" value="....."/><br><input checked="" type="checkbox"/> Hide Characters | AA:AA:AA:AA:AA | Untagge | ✖ |
|                             | UserB | <input type="text" value="....."/><br><input checked="" type="checkbox"/> Hide Characters | BB:BB:BB:BB:BB | 20      | ✖ |
|                             | UserC | <input type="text" value="....."/><br><input checked="" type="checkbox"/> Hide Characters | CC:CC:CC:CC:CC | Untagge | + |
| Management Frame Protection |       | Default (Disabled) ▼                                                                      |                |         |   |

## WPA/WPA2 – Personal

## Private Shared Key

Enable the Private Pre-Shared Key (PPSK) option to set unique pre-shared keys for individual users or groups on the same SSID. Please provide the following information for each user or group:

### Name (Optional)

Name for the profile

### Shared Key

The pass-phrase key is used for data encryption and authentication. You can click “Hide/Show Characters” to toggle the visibility of the shared key.

### MAC (Optional)

By default, all MAC addresses are allowed. If a specific MAC address is entered, only that device can access this WiFi SSID using the provided shared key.

### VLAN ID (Optional)

The VLAN is assigned to the user upon logging into the WiFi. If not specified, the user will be assigned to the default untagged LAN.

\*Each “Shared Key + MAC” combination must be unique in a different

profile.

**Shared Key** Enter a passphrase of between 8 and 63 alphanumeric characters to create a passphrase used for data encryption and authentication. Click **Hide / Show Characters** to toggle visibility.

**Management Frame Protection** This feature protects stations against forged management frames spoofed from other devices. Frames that are protected include Disassociation, Deauthentication and QoS Action.

| Security Settings           |                                                              |
|-----------------------------|--------------------------------------------------------------|
| Security Policy             | WPA/WPA2 - Enterprise ▼                                      |
| Encryption                  | TKIP/AES:CCMP                                                |
| 802.1X Version              | <input checked="" type="radio"/> v1 <input type="radio"/> v2 |
| Management Frame Protection | Default (Disabled) ▼                                         |

## WPA/WPA2 – Enterprise

**802.1X Version** Choose **v1** or **v2** of the 802.1x EAPOL. When **v1** is selected, both v1 and v2 clients can associate with the access point. When **v2** is selected, only v2 clients can associate with the access point. Most modern wireless clients support v2. For stations that do not support v2, select **v1**. The default is **v2**.

**Management Frame** This feature protects stations against forged management frames spoofed from other devices. Frames that are protected include Disassociation,



## Protection Deauthentication and QoS Action.

| Access Control Settings |                          |
|-------------------------|--------------------------|
| Restricted Mode         | Deny all except listed ▼ |
| MAC Address List ?      | <input type="text"/>     |

| Access Control          |                                                                                                                                                                                                                                                  |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Restricted Mode</b>  | The settings allow the administrator to control access using MAC address filtering. Available options are <b>None</b> , <b>Deny all except listed</b> , <b>Accept all except listed</b> and <b>Radius MAC Authentication</b> .                   |
| <b>MAC Address List</b> | Connection coming from the MAC addresses in this list will be either denied or accepted based on the option selected in the previous field.<br>If more than one MAC address needs to be entered, you can use a carriage return to separate them. |

| RADIUS Settings       |                                                                                                                                                                    |                                                                             |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
|                       | Primary                                                                                                                                                            | Secondary                                                                   |
|                       | You may click <a href="#">here</a> to define RADIUS Server Authentication profile, or you may go to <a href="#">RADIUS Server</a> page to define multiple profiles |                                                                             |
| Authentication Host   | <input type="text"/>                                                                                                                                               | <input type="text"/>                                                        |
| Authentication Port   | <input type="text" value="1812"/>                                                                                                                                  | <input type="text" value="1812"/>                                           |
| Authentication Secret | <input type="text"/><br><input checked="" type="checkbox"/> Hide Characters                                                                                        | <input type="text"/><br><input checked="" type="checkbox"/> Hide Characters |
|                       | You may click <a href="#">here</a> to define RADIUS Server Accounting profile, or you may go to <a href="#">RADIUS Server</a> page to define multiple profiles     |                                                                             |
| Accounting Host       | <input type="text"/>                                                                                                                                               | <input type="text"/>                                                        |
| Accounting Port       | <input type="text" value="1813"/>                                                                                                                                  | <input type="text" value="1813"/>                                           |
| Accounting Secret     | <input type="text"/><br><input checked="" type="checkbox"/> Hide Characters                                                                                        | <input type="text"/><br><input checked="" type="checkbox"/> Hide Characters |
| NAS-Identifier        | <input type="text" value="Device Name"/> ▼                                                                                                                         |                                                                             |

| RADIUS Settings            |                                                                                                                                              |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Authentication Host</b> | This field is for specifying the IP address of the primary RADIUS server for Authentication and, if applicable, the secondary RADIUS server. |

|                              |                                                                                                                                          |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Authentication Port</b>   | In the field, the UDP authentication port(s) used by your RADIUS server(s) or click the <b>Default</b> is <b>1812</b> .                  |
| <b>Authentication Secret</b> | This settings is enter the RADIUS shared secret for the primary server and, if applicable, the secondary RADIUS server.                  |
| <b>Accounting Host</b>       | This field is for specifying the IP address of the primary RADIUS server for Accounting and, if applicable, the secondary RADIUS server. |
| <b>Accounting Port</b>       | In the field, enter the UDP accounting port(s) used by your RADIUS server(s) or click the <b>Default</b> is <b>1813</b> .                |
| <b>Accounting Secret</b>     | This settings is enter the RADIUS shared secret for the primary server and, if applicable, the secondary RADIUS server.                  |
| <b>NAS-Identifier</b>        | Choose between <b>Device Name</b> , <b>LAN MAC address</b> , <b>Device Serial Number</b> and <b>Custom Value</b>                         |

| Guest Protect        |                          |                       |                                                        |
|----------------------|--------------------------|-----------------------|--------------------------------------------------------|
| Block All Private IP | <input type="checkbox"/> |                       |                                                        |
| Custom Subnet        | Network                  | Subnet Mask           |                                                        |
|                      | <input type="text"/>     | 255.255.255.0 (/24) ▼ | <input style="float: right;" type="button" value="+"/> |
| Block Exception      | Network                  | Subnet Mask           |                                                        |
|                      | <input type="text"/>     | 255.255.255.0 (/24) ▼ | <input style="float: right;" type="button" value="+"/> |

| Guest Protect               |                                                                                                                    |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------|
| <b>Block All Private IP</b> | Check this box to deny all connection attempts by private IP addresses.                                            |
| <b>Custom Subnet</b>        | To create a custom subnet for guest access, enter the IP address and choose a subnet mask from the drop-down menu. |
| <b>Block Exception</b>      | To block access from a particular subnet, enter the IP address and choose a subnet mask from the drop-down menu.   |

| Firewall Settings |                                                                                                                                                       |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Firewall Mode     | <div> <div>Disable ▼</div> <div> <div>Disable</div> <div>Flexible - Allow all except...</div> <div>Lockdown - Block all except...</div> </div> </div> |

| Firewall Settings          |                                                                                                                                                                                                                   |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Firewall Mode</b>       | The settings allow administrators to control access to the SSID based on Firewall Rules.<br>Available options are <b>Disable</b> , <b>Lockdown - Block all except...</b> and <b>Flexible -Allow all except...</b> |
| <b>Firewall Exceptions</b> | Create Firewall Rules based on <b>Port</b> , <b>IP Network</b> , <b>MAC address</b> or <b>Domain Name</b>                                                                                                         |

## 24.3 Wireless Mesh

| Wireless Mesh            | Frequency Band |
|--------------------------|----------------|
| No Wireless Mesh Defined |                |
| <a href="#">Add</a>      |                |

Wireless Mesh Support is available on devices running 802.11ac (Wi-Fi 5) and above. Along with the AP Controller, mesh network extensions can be established, which can expand network coverage. Note that the Wireless Mesh settings need to match the Mesh ID and Shared Key of the other devices on the same selected frequency band.

To create a new Wireless Mesh profile, go to **AP > Wireless Mesh**, and click **Add**.

Wireless Mesh Settings

Mesh ID

Frequency

☒ 2.4 GHz
 ☐ 5 GHz

Shared Key

☒ Hide Characters

Save

Cancel

| Wireless Mesh Settings |                                                                                                                                                                                                                |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Mesh ID</b>         | Enter a name to represent the Mesh profile.                                                                                                                                                                    |
| <b>Frequency</b>       | Select the 2.4GHz or 5GHz frequency to be used.                                                                                                                                                                |
| <b>Shared Key</b>      | Enter the shared key in the text field. Please note that it needs to match the shared keys of the other APs in the Wireless Mesh settings.<br>Click <b>Hide</b> / <b>Show Characters</b> to toggle visibility. |

## 24.4 Settings

To configure the AP settings, navigating to **AP > Settings** :

| AP Settings                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SSID                             | <div>2.4 GHz 5 GHz</div> <div><input checked="" type="checkbox"/> <input checked="" type="checkbox"/> PEPWAVE_A712</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Operating Country                | United States                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                                  | 2.4 GHz 5 GHz                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Protocol                         | 802.11n 802.11n/ac                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                                  | Integrated AP supports 802.11n/ac only                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Channel Width                    | Auto                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Channel                          | <div>Auto Edit</div> <div>Channels: 1 6 11</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Auto Channel Update              | <div> <div>Daily at</div> <div> <input type="checkbox"/> 00:00 <input type="checkbox"/> 01:00 <input type="checkbox"/> 02:00 <input checked="" type="checkbox"/> 03:00<br/> <input type="checkbox"/> 04:00 <input type="checkbox"/> 05:00 <input type="checkbox"/> 06:00 <input type="checkbox"/> 07:00<br/> <input type="checkbox"/> 08:00 <input type="checkbox"/> 09:00 <input type="checkbox"/> 10:00 <input type="checkbox"/> 11:00<br/> <input type="checkbox"/> 12:00 <input type="checkbox"/> 13:00 <input type="checkbox"/> 14:00 <input type="checkbox"/> 15:00<br/> <input type="checkbox"/> 16:00 <input type="checkbox"/> 17:00 <input type="checkbox"/> 18:00 <input type="checkbox"/> 19:00<br/> <input type="checkbox"/> 20:00 <input type="checkbox"/> 21:00 <input type="checkbox"/> 22:00 <input type="checkbox"/> 23:00<br/> <input checked="" type="checkbox"/> Wait until no active client associated </div> </div> |
| Output Power                     | Max Boost                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Client Signal Strength Threshold | Disabled                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Maximum number of clients        | Unlimited                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Discover Nearby Networks         | <input checked="" type="checkbox"/> <div>Note: Feature will be automatically turned on with Auto Channel / Dynamic Output Power</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Beacon Rate                      | 1 Mbps                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Beacon Interval                  | 100 ms                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| DTIM                             | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| RTS Threshold                    | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Fragmentation Threshold          | 0 (0: Disable)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Distance / Time Converter        | <div>4050 m</div> <div>Note: Input distance for recommended values</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Slot Time                        | <input type="radio"/> Auto <input checked="" type="radio"/> Custom 9 $\mu$ s                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| ACK Timeout                      | 48 $\mu$ s                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

### AP Settings

#### SSID

These buttons specify which wireless networks will use this AP profile. You can also select the frequencies at which each network will transmit. Please note that the Peplink MAX does not detect whether the AP is capable of transmitting at

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                            | both frequencies. Instructions to transmit at unsupported frequencies will be ignored by the AP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Operating Country</b>   | <p>This drop-down menu specifies the national / regional regulations which the AP should follow.</p> <ul style="list-style-type: none"> <li>If a North American region is selected, RF channels 1 to 11 will be available and the maximum transmission power will be 26 dBm (400 mW).</li> <li>If European region is selected, RF channels 1 to 13 will be available. The maximum transmission power will be 20 dBm (100 mW).</li> </ul> <p>Note: Users are required to choose an option suitable to local laws and regulations.</p> <p>Per FCC regulation, the country selection is not available on all models marketed in the US. All US models are fixed to US channels only.</p>                                                                                                                                                                                                                                         |
| <b>Preferred Frequency</b> | These buttons determine the frequency at which access points will attempt to broadcast. This feature will only work for APs that can transmit at both 5.4GHz and 5GHz frequencies.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Protocol</b>            | This option allows you to specify whether 802.11b and/or 802.11g client association requests will be accepted. Available options are <b>802.11ng</b> and <b>802.11na</b> . By default, <b>802.11ng</b> is selected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Channel Width</b>       | There are three options: 20 MHz, 20/40 MHz, and 40 MHz. With this feature enabled, the Wi-Fi system can use two channels at once. Using two channels improves the performance of the Wi-Fi connection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Channel</b>             | This drop-down menu selects the 802.11 channel to be utilized. Available options are from 1 to 11 and from 1 to 13 for the North America region and Europe region, respectively. (Channel 14 is only available when the country is selected as Japan with protocol 802.11b.) If <b>Auto</b> is set, the system will perform channel scanning based on the scheduled time set and choose the most suitable channel automatically.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Auto Channel Update</b> | Indicate the time of day at which update automatic channel selection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Output Power</b>        | <p>This drop-down menu determines the power at which the AP under this profile will broadcast. When fixed settings are selected, the AP will broadcast at the specified power level, regardless of context. When <b>Dynamic</b> settings are selected, the AP will adjust its power level based on its surrounding APs in order to maximize performance.</p> <p>The <b>Dynamic: Auto</b> setting will set the AP to do this automatically. Otherwise, the <b>Dynamic: Manual</b> setting will set the AP to dynamically adjust only if instructed to do so. If you have set <b>Dynamic:Manual</b>, you can go to <b>AP&gt;Toolbox&gt;Auto Power Adj.</b> to give your AP further instructions.</p> <p>If you click the <b>Boost</b> checkbox, the AP under this profile will transmit using additional power. Please note that using this option with several APs in close proximity will lead to increased interference.</p> |

|                                             |                                                                                                                                                                                                                                                                                                                 |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Client Signal Strength Threshold</b>     | This field determines that maximum signal strength each individual client will receive. The measurement unit is megawatts.                                                                                                                                                                                      |
| <b>Max number of Clients</b>                | This field determines the maximum clients that can be connected to APs under this profile.                                                                                                                                                                                                                      |
| <b>Management VLAN ID</b>                   | This field specifies the VLAN ID to tag to management traffic, such as AP to AP controller communication traffic. The value is <b>0</b> by default, meaning that no VLAN tagging will be applied.<br>Note: change this value with caution as alterations may result in loss of connection to the AP controller. |
| <b>Discover Nearby Networks<sup>A</sup></b> | This option is to turn on and off to scan the nearby the AP.<br><b>Note:</b> Feature will be automatically turned on with Auto Channel / Dynamic Output Power                                                                                                                                                   |
| <b>Beacon Rate<sup>A</sup></b>              | This drop-down menu provides the option to send beacons in different transmit bit rates. The bit rates are <b>1Mbps, 2Mbps, 5.5Mbps, 6Mbps, and 11Mbps</b> .                                                                                                                                                    |
| <b>Beacon Interval<sup>A</sup></b>          | This drop-down menu provides the option to set the time between each beacon send. Available options are <b>100ms, 250ms, and 500ms</b> .                                                                                                                                                                        |
| <b>DTIM<sup>A</sup></b>                     | This field provides the option to set the frequency for beacon to include delivery traffic indication message (DTIM). The interval unit is measured in milliseconds.                                                                                                                                            |
| <b>RTS Threshold<sup>A</sup></b>            | This field provides the option to set the minimum packet size for the unit to send an RTS using the RTS/CTS handshake. Setting <b>0</b> disables this feature.                                                                                                                                                  |
| <b>Fragmentation Threshold<sup>A</sup></b>  | Determines the maximum size (in bytes) that each packet fragment will be broken down into. Set 0 to disable fragmentation.                                                                                                                                                                                      |
| <b>Distance/Time Converter<sup>A</sup></b>  | Select the distance you want your Wi-Fi to cover in order to adjust the below parameters. Default values are recommended.                                                                                                                                                                                       |
| <b>Slot Time<sup>A</sup></b>                | This field provides the option to modify the unit wait time before it transmits. The default value is <b>9μs</b> .                                                                                                                                                                                              |
| <b>ACK Timeout<sup>A</sup></b>              | This field provides the option to set the wait time to receive acknowledgement packet before doing retransmission. The default value is <b>48μs</b> .                                                                                                                                                           |

<sup>A</sup> - Advanced feature. Click the  button on the top right-hand corner to activate.

### Important Note

Per FCC regulation, the country selection is not available on all models marketed in the US. All US models are fixed to US channels only.

| Integrated AP        |                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------|
| Wi-Fi Operating Mode | <input checked="" type="radio"/> WAN <input type="radio"/> WAN + AP <input type="radio"/> AP |

The device with integrated AP can operate under the Wi-Fi Operating Mode, and the default setting is **WAN + AP** mode:

**Note: This option is available for selected devices only (HD2/HD4 and HD2/HD4 MBX).**

| Integrated AP   |                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>WAN</b>      | <p>In this mode, all Wi-Fi will operate as Wi-Fi WAN and no integrated Wi-Fi AP will be operated on this device.</p> <p>If Wi-Fi Operating mode is choosing <b>WAN</b>, The status indicated by the front panel LED is as follows:</p> <ul style="list-style-type: none"> <li>- Wi-Fi 1 is Green if Wi-Fi WAN 1 is enabled.</li> <li>- Wi-Fi 2 is Green if Wi-Fi WAN 2 is enabled.</li> </ul>                                                              |
| <b>WAN + AP</b> | <p>In this mode, some Wi-Fi will operate as Wi-Fi WAN. Some other Wi-Fi WANs will be forced offline and their Wi-Fi resources will be reserved for integrated Wi-Fi AP operations.</p> <p>If Wi-Fi Operating mode is choosing <b>WAN + AP</b>, The status indicated by the front panel LED is as follows:</p> <ul style="list-style-type: none"> <li>- Wi-Fi 1 is Green if Wi-Fi WAN is enabled.</li> <li>- Wi-Fi 2 is Green if Wi-Fi AP is ON.</li> </ul> |
| <b>AP</b>       | <p>In this mode, all Wi-Fi functions as integrated Wi-Fi AP. All Wi-Fi WANs will be forced to go offline.</p> <p>If Wi-Fi Operating mode is choosing <b>AP</b>, The status indicated by the front panel LED is as follows:</p> <ul style="list-style-type: none"> <li>- W-Fi 1 is Green, if there is any Wireless SSID is selected 2.4GHz.</li> <li>- W-Fi 2 is Green, if there is any Wireless SSID is selected 5GHz.</li> </ul>                          |

| Web Administration Settings (on External AP) |                                                                                |
|----------------------------------------------|--------------------------------------------------------------------------------|
| Enable                                       | <input checked="" type="checkbox"/>                                            |
| Web Access Protocol                          | <input type="radio"/> HTTP <input checked="" type="radio"/> HTTPS              |
| Management Port                              | <input type="text" value="443"/>                                               |
| HTTP to HTTPS Redirection                    | <input checked="" type="checkbox"/>                                            |
| Admin Username                               | <input type="text" value="admin"/>                                             |
| Admin Password                               | <input type="password" value="....."/> <input type="button" value="Generate"/> |
|                                              | <input checked="" type="checkbox"/> Hide Characters                            |

| Web Administration Settings (on External AP) |                                                                                                                                                                                             |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Enable</b>                                | Check the box to allow the Peplink router to manage the web admin access information of the AP.                                                                                             |
| <b>Web Access Protocol</b>                   | These buttons specify the web access protocol used for accessing the web admin of the AP. The two available options are <b>HTTP</b> and <b>HTTPS</b> .                                      |
| <b>Management Port</b>                       | This field specifies the management port used for accessing the device.                                                                                                                     |
| <b>HTTP to HTTPS Redirection</b>             | This option will be available if you have chosen <b>HTTPS</b> as the <b>Web Access Protocol</b> . With this enabled, any HTTP access to the web admin will redirect to HTTPS automatically. |
| <b>Admin User Name</b>                       | This field specifies the administrator username of the web admin. It is set as <i>admin</i> by default.                                                                                     |
| <b>Admin Password</b>                        | This field allows you to specify a new administrator password. You may also click the <b>Generate</b> button and let the system generate a random password automatically.                   |

| AP Time Settings |                                                                                                                           |
|------------------|---------------------------------------------------------------------------------------------------------------------------|
| Time Zone        | <input checked="" type="radio"/> Follow controller time zone selection<br><input type="radio"/> (GMT-11:00) Midway Island |
| Time Server      | <input checked="" type="radio"/> Follow controller NTP server selection<br><input type="radio"/>                          |

This allows users to configure AP Time Settings (both Timezone and NTP) in AP Controller.

| AP Time Settings   |                                                                |
|--------------------|----------------------------------------------------------------|
| <b>Time Zone</b>   | This field is to select the time zone for the AP controller.   |
| <b>Time Server</b> | This field is to select the time server for the AP controller. |

| Controller Management Settings |                          |
|--------------------------------|--------------------------|
| Manage Unreachable Action      | <input type="checkbox"/> |

This settings is to allow user to manage external AP's controller unreachable action. When **Manage Unreachable Action** is checked, there will have 2 options which are "**None**" and "**Radio Off**".



| AP Controller Settings |                          |
|------------------------|--------------------------|
| Client Load Balancing  | <input type="checkbox"/> |

This is an option to enable client load balancing for AP Controller. When the option is enabled, it is trying to balance the station count on APs within the same profile.

Some Peplink models displays a screen similar to the one shown below, navigating to **AP > Settings**:

| Wi-Fi Radio Settings |                                                                          |
|----------------------|--------------------------------------------------------------------------|
| Operating Country    | United States ▼                                                          |
| Wi-Fi Antenna        | <input type="radio"/> Internal <input checked="" type="radio"/> External |

| Wi-Fi Radio Settings     |                                                                                                |
|--------------------------|------------------------------------------------------------------------------------------------|
| <b>Operating Country</b> | This option sets the country whose regulations the Peplink router follows.                     |
| <b>Wi-Fi Antenna</b>     | Wi-Fi Antenna Choose from the router's internal or optional external antennas, if so equipped. |

| Wi-Fi AP Settings |                                                        |
|-------------------|--------------------------------------------------------|
| Protocol          | 802.11ng ▼                                             |
| Channel           | 1 (2.412 GHz) ▼                                        |
| Channel Width     | Auto ▼                                                 |
| Output Power      | Max ▼ <input type="checkbox"/> Boost                   |
| Beacon Rate       | <a href="#">?</a> 1Mbps ▼                              |
| Beacon Interval   | <a href="#">?</a> 100ms ▼                              |
| DTIM              | <a href="#">?</a> 1                                    |
| Slot Time         | <a href="#">?</a> 9 μs                                 |
| ACK Timeout       | <a href="#">?</a> 48 μs                                |
| Frame Aggregation | <input checked="" type="checkbox"/> Enable             |
| Guard Interval    | <input type="radio"/> Short <input type="radio"/> Long |

| Wi-Fi AP Settings |                                                                                                                                                                                                              |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Protocol</b>   | This option allows you to specify whether 802.11b and/or 802.11g client association requests will be accepted. Available options are <b>802.11ng</b> and <b>802.11na</b> . By default, 802.11ng is selected. |

|                                      |                                                                                                                                                                                                                                                                              |
|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Channel</b>                       | This option allows you to select which 802.11 RF channel will be used. <b>Channel 1 (2.412 GHz)</b> is selected by default.                                                                                                                                                  |
| <b>Channel Width</b>                 | <b>Auto (20/40 MHz)</b> and <b>20 MHz</b> are available. The default setting is <b>Auto (20/40 MHz)</b> , which allows both widths to be used simultaneously.                                                                                                                |
| <b>Output Power</b>                  | This option is for specifying the transmission output power for the Wi-Fi AP. There are 4 relative power levels available – <b>Max</b> , <b>High</b> , <b>Mid</b> , and <b>Low</b> . The actual output power will be bound by the regulatory limits of the selected country. |
| <b>Beacon Rate<sup>A</sup></b>       | This option is for setting the transmit bit rate for sending a beacon. By default, <b>1Mbps</b> is selected.                                                                                                                                                                 |
| <b>Beacon Interval<sup>A</sup></b>   | This option is for setting the time interval between each beacon. By default, <b>100ms</b> is selected.                                                                                                                                                                      |
| <b>DITM<sup>A</sup></b>              | This field allows you to set the frequency for the beacon to include a delivery traffic indication message. The interval is measured in milliseconds. The default value is set to <b>1 ms</b> .                                                                              |
| <b>Slot Time<sup>A</sup></b>         | This field is for specifying the wait time before the Router transmits a packet. By default, this field is set to <b>9 μs</b> .                                                                                                                                              |
| <b>ACK Time<sup>A</sup></b>          | This field is for setting the wait time to receive an acknowledgement packet before performing a retransmission. By default, this field is set to <b>48 μs</b> .                                                                                                             |
| <b>Frame Aggreagtion<sup>A</sup></b> | This option allows you to enable frame aggregation to increase transmission throughput.                                                                                                                                                                                      |
| <b>Guard Interval<sup>A</sup></b>    | This setting allows choosing a short or long guard period interval for your transmissions.                                                                                                                                                                                   |

## 25 AP Controller Status

### 25.1 Info

A comprehensive overview of your AP can be accessed by navigating to **AP > Controller Status > Info**.



| AP Controller        |                                                                                                                                                                                                                                                                           |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>License Limit</b> | This field displays the maximum number of AP your Balance router can control. You can purchase licenses to increase the number of AP you can manage.                                                                                                                      |
| <b>Frequency</b>     | Underneath, there are two check boxes labeled <b>2.4 Ghz</b> and <b>5 Ghz</b> . Clicking either box will toggle the display of information for that frequency. By default, the graphs display the number of clients and data usage for both 2.4GHz and 5 GHz frequencies. |
| <b>SSID</b>          | The colored boxes indicate the SSID to display information for. Clicking any colored box will toggle the display of information for that SSID. By default, all the graphs show information for all SSIDs.                                                                 |
| <b>No. of APs</b>    | This pie chart and table indicates how many APs are online and how many are offline.                                                                                                                                                                                      |
| <b>No.of Clients</b> | This graph displays the number of clients connected to each network at any                                                                                                                                                                                                |

|                   |                                                                                                                                                                                                                                                                                                                                                       |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                   | given time. Mouse over any line on the graph to see how many clients connected to a specific SSID for that point in time.                                                                                                                                                                                                                             |
| <b>Data Usage</b> | This graph enables you to see the data usage of any SSID for any given time period. Mouse over any line on the graph to see the data usage by each SSID for that point in time. Use the buttons next to <b>Zoom</b> to select the time scale you wish to view. In addition, you could use the sliders at the bottom to further refine your timescale. |

| Events         |                                                                        | View Alerts |
|----------------|------------------------------------------------------------------------|-------------|
| Jan 2 11:01:11 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 11:00:42 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 11:00:38 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 11:00:36 | AP One 300M: Client 00:21:6A:35:59:A4 associated with Balance_11a      |             |
| Jan 2 11:00:20 | AP One 300M: Client 60:67:20:24:B6:4C disassociated from Marketing_11a |             |
| Jan 2 11:00:09 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 10:59:09 | AP One 300M: Client 00:21:6A:35:59:A4 disassociated from Balance_11a   |             |
| Jan 2 10:59:08 | Office Fiber AP: Client 18:00:2D:3D:4E:7F associated with Balance      |             |
| Jan 2 10:58:53 | Michael's Desk: Client 18:00:2D:3D:4E:7F disassociated from Wireless   |             |
| Jan 2 10:58:18 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 10:58:03 | Office InWall: Client 10:BF:48:E9:76:C7 associated with Wireless       |             |
| Jan 2 10:57:47 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 10:57:19 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 10:57:09 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 10:56:48 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 10:56:39 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 10:56:19 | AP One 300M: Client 00:26:BB:05:84:A4 associated with Marketing_11a    |             |
| Jan 2 10:56:09 | AP One 300M: Client 9C:04:EB:10:39:4C associated with Marketing_11a    |             |
| Jan 2 10:55:42 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 10:55:29 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
|                |                                                                        | More...     |

| Events                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| This event log displays all activity on your AP network, down to the client level. Click <b>View Alerts</b> to see only alerts, and click the <b>More...</b> link for additional records. |

| AP Time Settings |                                                                                                                           |
|------------------|---------------------------------------------------------------------------------------------------------------------------|
| Time Zone        | <input checked="" type="radio"/> Follow controller time zone selection<br><input type="radio"/> (GMT-11:00) Midway Island |
| Time Server      | <input checked="" type="radio"/> Follow controller NTP server selection<br><input type="radio"/>                          |

This allow user to configure AP Time Settings (both Timezone and NTP) in AP Controller.

| AP Time Settings   |                                                                |
|--------------------|----------------------------------------------------------------|
| <b>Time Zone</b>   | This field is to select the time zone for the AP controller.   |
| <b>Time Server</b> | This field is to select the time server for the AP controller. |

| Controller Management Settings |                          |
|--------------------------------|--------------------------|
| Manage Unreachable Action      | <input type="checkbox"/> |

This settings is to allow user to manage external AP's controller unreachable action. When **Manage Unreachable Action** is checked, there will have 2 options which are "None" and "Radio Off".

| AP Controller Settings |                          |
|------------------------|--------------------------|
| Client Load Balancing  | <input type="checkbox"/> |

This is an option to enable client load balancing for AP Controller. When the option is enabled, it is trying to balance the station count on APs within the same profile.

## 25.2 Access Point

A detailed breakdown of data usage for each AP is available at **AP > Controller Status > Access Point**.

| Managed APs              |                    |            |     |          |          |               |               |
|--------------------------|--------------------|------------|-----|----------|----------|---------------|---------------|
| <input type="checkbox"/> | Name               | IP Address | MAC | Location | Firmware | Radio Config. | Config. Sync. |
|                          | MAX-BR1-85F4/29... | (Local)    | -   | -        | -        |               |               |
| Remove Offline Units     |                    |            |     |          |          | Reboot        | Set Firmware  |

| Managed APs        |                                                                                                                                                                                                                                                                                                                                         |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Managed APs</b> | <p>This table shows the detailed information on each AP, including channel, number of clients, upload traffic, and download traffic. Click the blue arrows at the left of the table to expand and collapse information on each device group.</p>                                                                                        |
|                    | <p>On the right of the table, you will see the following icons:    .</p> |
|                    | <p>Click the  icon to see a usage table for each client:</p>                                                                                                                                                                                         |

| Client List       |             |          |                |           |           |           |
|-------------------|-------------|----------|----------------|-----------|-----------|-----------|
| MAC Address       | IP Address  | Type     | Signal         | SSID      | Upload    | Download  |
| 80:56:f2:98:75:ff | 10.9.2.7    | 802.11ng | Excellent (37) | Balance   | 66.26 MB  | 36.26 MB  |
| c4:6a:b7:bf:d7:15 | 10.9.2.123  | 802.11ng | Excellent (42) | Balance   | 6.65 MB   | 2.26 MB   |
| 70:56:81:1d:87:f3 | 10.9.2.102  | 802.11ng | Good (23)      | Balance   | 1.86 MB   | 606.63 KB |
| e0:63:e5:83:45:c8 | 10.9.2.101  | 802.11ng | Excellent (39) | Balance   | 3.42 MB   | 474.52 KB |
| 18:00:2d:3d:4e:7f | 10.9.2.66   | 802.11ng | Excellent (25) | Balance   | 640.29 KB | 443.57 KB |
| 14:5a:05:80:4f:40 | 10.9.2.76   | 802.11ng | Excellent (29) | Balance   | 2.24 KB   | 3.67 KB   |
| 00:1a:dd:c5:4e:24 | 10.8.9.84   | 802.11ng | Excellent (29) | Wireless  | 9.86 MB   | 9.76 MB   |
| 00:1a:dd:bb:29:ec | 10.8.9.73   | 802.11ng | Excellent (25) | Wireless  | 9.36 MB   | 11.14 MB  |
| 40:b0:fa:c3:26:2c | 10.8.9.18   | 802.11ng | Good (23)      | Wireless  | 118.05 MB | 7.92 MB   |
| e4:25:e7:8a:d3:12 | 10.10.11.23 | 802.11ng | Excellent (35) | Marketing | 74.78 MB  | 4.58 MB   |
| 04:f7:e4:ef:68:05 | 10.10.11.71 | 802.11ng | Poor (12)      | Marketing | 84.84 KB  | 119.32 KB |


Click the icon to configure each client

| AP Details                        |                                                                                 |
|-----------------------------------|---------------------------------------------------------------------------------|
| Serial Number                     | 1111-2222-3333                                                                  |
| MAC Address                       | 00:1A:DD:BD:73:E0                                                               |
| Product Name                      | Pepwave AP Pro Duo                                                              |
| Name                              | <input type="text"/>                                                            |
| Location                          | <input type="text"/>                                                            |
| Firmware Version                  | 3.5.2                                                                           |
| Firmware Pack                     | Default (None) ▼                                                                |
| AP Client Limit                   | <input checked="" type="radio"/> Follow AP Profile <input type="radio"/> Custom |
| 2.4 GHz SSID List                 | T4Open                                                                          |
| 5 GHz SSID List                   | T4Open                                                                          |
| Last config applied by controller | Mon Nov 23 11:25:03 HKT 2015                                                    |
| Uptime                            | Wed Nov 11 15:00:27 HKT 2015                                                    |
| Current Channel                   | 1 (2.4 GHz)<br>153 (5 GHz)                                                      |
| Channel                           | 2.4 GHz: Follow AP Profile ▼ 5 GHz: Follow AP Profile ▼                         |
| Output Power                      | 2.4 GHz: Follow AP Profile ▼ 5 GHz: Follow AP Profile ▼                         |

For easier network management, you can give each client a name and designate its location. You can also designate which firmware pack (if any) this client will follow, as well as the channels on which the client will broadcast.

Click the icon to see a graph displaying usage:



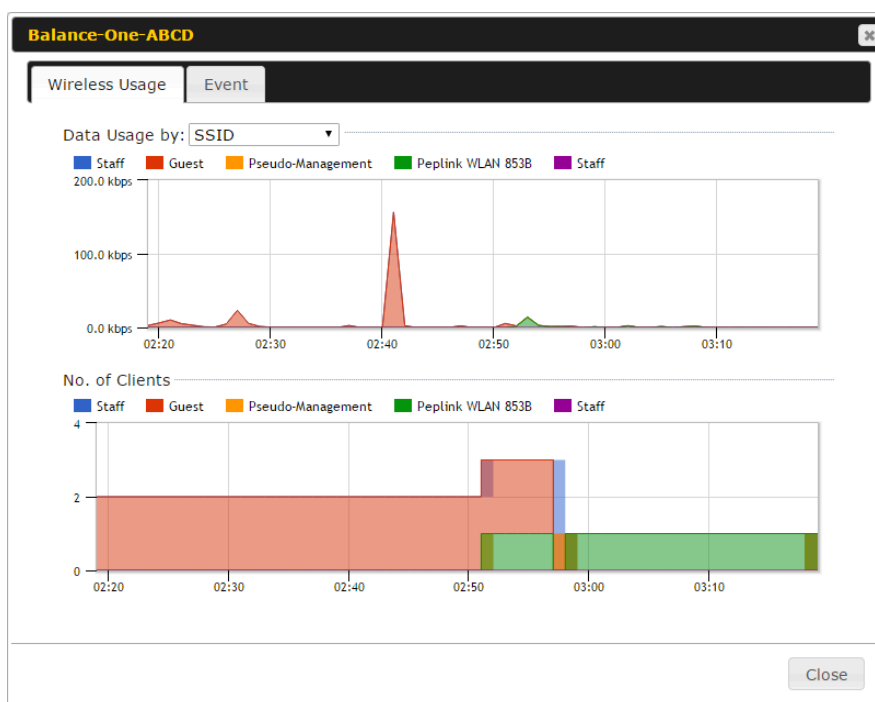

Click any point in the graphs to display detailed usage and client information for that device, using that SSID, at that point in time. On the **Data Usage by** menu, you can display the information by SSID or by AP send/receive rate.

Click the **Event** tab next to **Wireless Usage** to view a detailed event log for that particular device:

**Event Information**

**Events**


|                |                                                                    |
|----------------|--------------------------------------------------------------------|
| Jan 2 11:53:39 | Client 00:26:BB:08:AC:FD associated with Wireless_11a              |
| Jan 2 11:39:31 | Client 60:67:20:24:B6:4C disassociated from Marketing_11a          |
| Jan 2 11:16:55 | Client A8:BB:CF:E1:0F:1E disassociated from Balance_11a            |
| Jan 2 11:11:54 | Client A8:BB:CF:E1:0F:1E associated with Balance_11a               |
| Jan 2 11:10:45 | Client 60:67:20:24:B6:4C associated with Marketing_11a             |
| Jan 2 11:00:36 | Client 00:21:6A:35:59:A4 associated with Balance_11a               |
| Jan 2 11:00:20 | Client 60:67:20:24:B6:4C disassociated from Marketing_11a          |
| Jan 2 10:59:09 | Client 00:21:6A:35:59:A4 disassociated from Balance_11a            |
| Jan 2 10:42:28 | Client F4:B7:E2:16:35:E9 associated with Balance_11a               |
| Jan 2 10:29:12 | Client 84:7A:88:78:1E:4B associated with Balance_11a               |
| Jan 2 10:24:27 | Client 90:B9:31:0D:11:EC disassociated from Marketing_11a          |
| Jan 2 10:24:27 | Client 90:B9:31:0D:11:EC roamed to Marketing_11a at 2830-BFC8-D230 |
| Jan 2 10:13:22 | Client E8:8D:28:A8:43:93 associated with Balance_11a               |
| Jan 2 10:13:22 | Client E8:8D:28:A8:43:93 roamed to Balance_11a from 2830-BF7F-694C |
| Jan 2 10:07:52 | Client CC:3A:61:89:07:F3 associated with Wireless_11a              |
| Jan 2 10:04:35 | Client 60:67:20:24:B6:4C associated with Marketing_11a             |
| Jan 2 10:03:38 | Client 60:67:20:24:B6:4C disassociated from Marketing_11a          |
| Jan 2 09:58:27 | Client 00:26:BB:08:AC:FD disassociated from Wireless_11a           |
| Jan 2 09:52:46 | Client 00:26:BB:08:AC:FD associated with Wireless_11a              |
| Jan 2 09:20:26 | Client 8C:3A:E3:3F:17:62 associated with Balance_11a               |

More...

Close

## 25.3 Wireless SSID

In-depth SSID reports are available under **AP > Controller Status > Wireless SSID**.

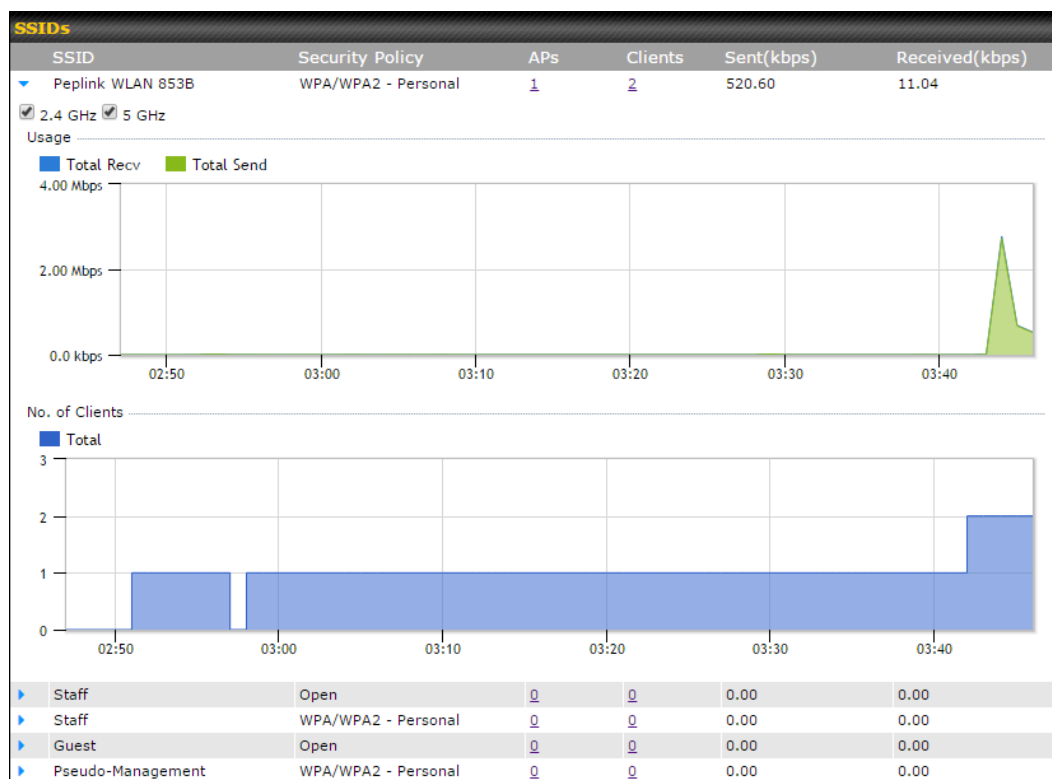

Click the blue arrow on any SSID to obtain more detailed usage information on each SSID.



## 25.4 Wireless Client

You can search for specific Wi-Fi users by navigating to **AP > Controller Status > Wireless Client**.

**Search Filter**

Search Key

Client MAC Address / SSID / AP Serial Number

Maximum Result (1-256)

50

Show Associated Clients Only

☐

Search Result

Search

Wireless Clients

| Name / MAC Address  | IP Address | Type     | Mode | RSSI (dBm) | SSID | AP | Duration |
|---------------------|------------|----------|------|------------|------|----|----------|
| HUAWEI_Mate_40_P... | -          | 802.11ng | -    | -          | -    | -  | -        |

Top 10 Clients of last hour (Updated at 16:00)

| Client         | Upload | Download |
|----------------|--------|----------|
| No information |        |          |

Here, you will be able to see your network's heaviest users as well as search for specific users. Click the ☆ icon to bookmark specific users, and click the 📊 icon for additional details about each user:

Client C0:EE:FB:20:13:36

Information

|                           |                     |
|---------------------------|---------------------|
| Status                    | Associated          |
| Access Point              | 1111-2222-3333      |
| SSID                      | Peplink WLAN 853B   |
| IP Address                | 192.168.1.34        |
| Duration                  | 00:27:31            |
| Usage (Upload / Download) | 141.28 MB / 4.35 MB |
| RSSI                      | -48                 |
| Rate (Upload / Download)  | 150M / 48M          |
| Type                      | 802.11na            |

Download Upload


| SSID              | AP             | From            | To              | Upload    | Download |
|-------------------|----------------|-----------------|-----------------|-----------|----------|
| Peplink WLAN 853B | 192C-1835-642F | Nov 23 03:43:04 | -               | 141.28 MB | 4.35 MB  |
| Peplink WLAN 853B | 192C-1835-642F | Nov 23 02:58:36 | Nov 23 03:47:52 | 173.7 KB  | 94.2 KB  |
| Peplink WLAN 853B | 192C-1835-642F | Nov 23 02:52:15 | Nov 23 02:58:15 | 105.9 KB  | 62.5 KB  |

Close

## 25.5 Mesh / WDS

Mesh / WDS allows you to monitor the status of your wireless distribution system (WDS) or Mesh, and track activity by MAC address by navigating to **AP > Controller Status > Mesh / WDS**. This table shows the detailed information of each AP, including protocol, transmit rate (sent / received), signal strength, and duration.

| Mesh / WDS                 |            |          |             |                |              |          |
|----------------------------|------------|----------|-------------|----------------|--------------|----------|
| Type ▲                     | Peer MAC   | Protocol | Rate (Send) | Rate (Receive) | Signal (dBm) | Duration |
| ▼ APOACM-HW1/ [redacted]   |            |          |             |                |              |          |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 325M        | 650M           | -56          | 19:13:35 |
| ▼ APOACM-HW2/ [redacted]   |            |          |             |                |              |          |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 650M        | 351M           | -63          | 00:49:20 |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 390M        | 325M           | -67          | 01:35:09 |
| ▼ APOE-HW1/ [redacted]     |            |          |             |                |              |          |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 58.5M       | 130M           | -69          | 00:45:22 |
| ▼ APOR-HW1/ [redacted]     |            |          |             |                |              |          |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 325M        | 866.7M         | -53          | 19:14:44 |
| ▼ B20X-MESH-GW/ [redacted] |            |          |             |                |              |          |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 433M        | 650M           | -69          | 19:14:44 |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 325M        | 390M           | -66          | 01:35:42 |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 351M        | 650M           | -70          | 19:13:45 |
| Mesh ( [redacted] )        | [redacted] | 802.11ac | 130M        | 117M           | -88          | 00:45:52 |

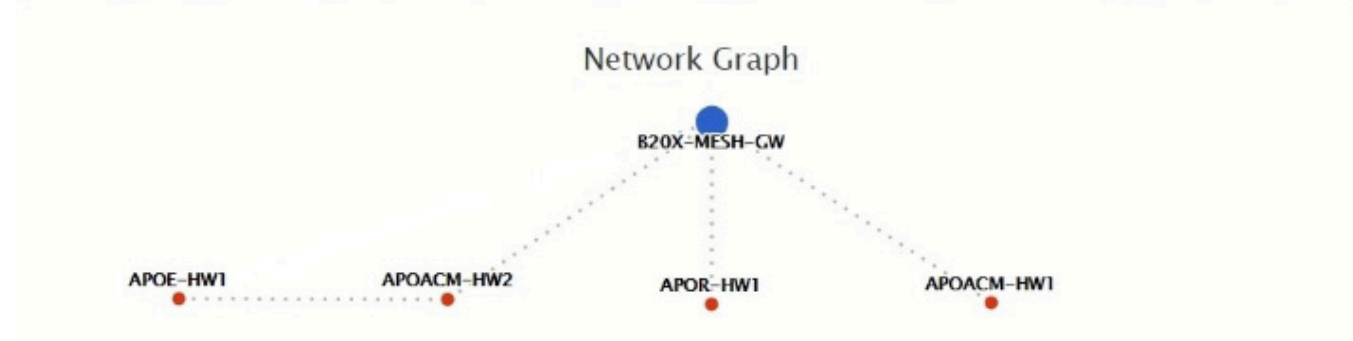

## 25.6 Nearby Device

A listing of near devices can be accessed by navigating to **AP > Controller Status > Nearby Device**.

| Suspected Rogue APs |                         |         |            |                |         |
|---------------------|-------------------------|---------|------------|----------------|---------|
| BSSID               | SSID                    | Channel | Encryption | Last Seen      | Mark as |
| 00:1A:DD:EC:25:22   | Wireless                | 11      | WPA2       | 10 hours ago   |         |
| 00:1A:DD:EC:25:23   | Accounting              | 11      | WPA2       | 10 hours ago   |         |
| 00:1A:DD:EC:25:24   | Marketing               | 11      | WPA2       | 11 hours ago   |         |
| 00:03:7F:00:00:00   | MYB1PUSH                | 1       | WPA & WPA2 | 11 minutes ago |         |
| 00:03:7F:00:00:01   | MYB1                    | 1       | WPA2       | 15 minutes ago |         |
| 00:1A:DD:B9:60:88   | PEPWAVE_CB7E            | 1       | WPA & WPA2 | 5 minutes ago  |         |
| 00:1A:DD:BB:09:C1   | Micro_S1_1              | 6       | WPA & WPA2 | 1 hour ago     |         |
| 00:1A:DD:BB:52:A8   | MAX HD2 Gobi            | 11      | WPA & WPA2 | 2 minutes ago  |         |
| 00:1A:DD:BF:75:81   | PEPLINK_05B5            | 4       | WPA & WPA2 | 1 minute ago   |         |
| 00:1A:DD:BF:75:82   | LK_05B5                 | 4       | WPA2       | 1 minute ago   |         |
| 00:1A:DD:BF:75:83   | LK_05B5_VLAN22          | 4       | WPA2       | 1 minute ago   |         |
| 00:1A:DD:C1:ED:E4   | dev_captive_portal_test | 1       | WPA & WPA2 | 3 minutes ago  |         |
| 00:1A:DD:C2:E4:C5   | PEPWAVE_7052            | 11      | WPA & WPA2 | 2 hours ago    |         |
| 00:1A:DD:C3:F1:64   | dev_captive_portal_test | 6       | WPA & WPA2 | 6 minutes ago  |         |
| 00:1A:DD:C4:DC:24   | ssid_test               | 8       | WPA & WPA2 | 2 minutes ago  |         |
| 00:1A:DD:C4:DC:25   | SSID New                | 8       | WPA & WPA2 | 2 minutes ago  |         |
| 00:1A:DD:C5:46:04   | Guest SSID              | 9       | WPA2       | 2 minutes ago  |         |
| 00:1A:DD:C5:47:04   | PEPWAVE_67B8            | 1       | WPA & WPA2 | 5 minutes ago  |         |
| 00:1A:DD:C5:4E:24   | G BR1 Portal            | 2       | WPA2       | 2 minutes ago  |         |
| 00:1A:DD:C6:9A:48   | ssid_test               | 8       | WPA & WPA2 | 2 hours ago    |         |

### Suspected Rogue Devices

Hovering over the device MAC address will result in a popup with information on how this device was detected. Click the icons and the device will be moved to the bottom table of identified devices.

## 25.7 Event Log

You can access the AP Controller Event log by navigating to **AP > Controller Status > Event Log**.

| Filter      |                                                                         |
|-------------|-------------------------------------------------------------------------|
| Search key  | Client MAC Address / Wireless SSID / AP Serial Number / AP Profile Name |
| Time        | From <input type="text"/> hh:mm to <input type="text"/> hh:mm           |
| Alerts only | <input type="checkbox"/>                                                |
| Search      |                                                                         |

| Events         |                                                                        | View Alerts |
|----------------|------------------------------------------------------------------------|-------------|
| Jan 2 11:01:11 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 11:00:42 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 11:00:38 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 11:00:36 | AP One 300M: Client 00:21:6A:35:59:A4 associated with Balance_11a      |             |
| Jan 2 11:00:20 | AP One 300M: Client 60:67:20:24:B6:4C disassociated from Marketing_11a |             |
| Jan 2 11:00:09 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 10:59:09 | AP One 300M: Client 00:21:6A:35:59:A4 disassociated from Balance_11a   |             |
| Jan 2 10:59:08 | Office Fiber AP: Client 18:00:2D:3D:4E:7F associated with Balance      |             |
| Jan 2 10:58:53 | Michael's Desk: Client 18:00:2D:3D:4E:7F disassociated from Wireless   |             |
| Jan 2 10:58:18 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 10:58:03 | Office InWall: Client 10:BF:48:E9:76:C7 associated with Wireless       |             |
| Jan 2 10:57:47 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 10:57:19 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 10:57:09 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 10:56:48 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 10:56:39 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
| Jan 2 10:56:19 | AP One 300M: Client 00:26:BB:05:84:A4 associated with Marketing_11a    |             |
| Jan 2 10:56:09 | AP One 300M: Client 9C:04:EB:10:39:4C associated with Marketing_11a    |             |
| Jan 2 10:55:42 | AP One 300M: Client 54:EA:A8:2D:A0:D5 disassociated from Marketing_11a |             |
| Jan 2 10:55:29 | AP One 300M: Client 54:EA:A8:2D:A0:D5 associated with Marketing_11a    |             |
|                |                                                                        | More...     |

## Events

This event log displays all activity on your AP network, down to the client level. Use to filter box to search by MAC address, SSID, AP Serial Number, or AP Profile name. Click **View Alerts** to see only alerts, and click the **More...** link for additional records.

## 26 Toolbox

Tools for managing firmware packs can be found at **AP > Toolbox**.

| Firmware Packs                                                                                                                                              |              |         |        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------|--------|
| Pack ID                                                                                                                                                     | Release Date | Details | Action |
| 1126                                                                                                                                                        | 2013-08-26   |         |        |
| <input type="button" value="Check for Updates"/> <input type="button" value="Manual Upload"/> <input type="button" value="Default..."/> No default defined. |              |         |        |

## Firmware Packs

Here, you can manage the firmware of your AP. Clicking on will result in information regarding each firmware pack. To receive new firmware packs, you can click **Check for Updates** to download new packs, or you can click **Manual Upload** to manually upload a firmware pack. Click **Default** to define which firmware pack is default.

## 27 Switch

### 27.1 Switch Controller

Navigate to **Switch Tab > Switch Controller > Controller**.

| Switch Controller |                                            |
|-------------------|--------------------------------------------|
| Switch Controller | <input checked="" type="checkbox"/> Enable |
| Save              |                                            |

| Registered Switches                                                          |                    |               |                                                                           |  |
|------------------------------------------------------------------------------|--------------------|---------------|---------------------------------------------------------------------------|--|
| Name / Serial Number                                                         | Model              | IP Address    | MAC                                                                       |  |
| 1933- <span style="background-color: black; color: black;">XXXXXXXXXX</span> | 24 PoE 2.5G Switch | 192.168.52.63 | D4:13: <span style="background-color: black; color: black;">XXXXXX</span> |  |

| Available Switches                                                           |                    |               |                                                                           |  |
|------------------------------------------------------------------------------|--------------------|---------------|---------------------------------------------------------------------------|--|
| Name / Serial Number                                                         | Model              | IP Address    | MAC                                                                       |  |
| 1933- <span style="background-color: black; color: black;">XXXXXXXXXX</span> | 48 PoE 2.5G Switch | 192.168.52.93 | D4:13: <span style="background-color: black; color: black;">XXXXXX</span> |  |

✕

Switch " " will be registered to this Switch Controller. Are you sure?

☒ Preserve port settings with common VLAN networks on this Switch

OK
Cancel

#### Switch Controller

**Registered Switches** List of registered switches. Press “X” to remove the selected switch from the list.

**Available Switches** List of available switches connected to the device. Press “+” to register the selected switch to the Registered Switches list.

Note: When option “Preserve port settings with common VLAN networks on this Switch” is tick when register selected switch, the port settings which

VLANs are defined in Switch Controller will be preserved. Else, will be replaced by VLAN 1.

**NOTE:** PoE 2.5G Switch will only be managed by either InControl or Device switch controller. Do not enable the Switch Controller if the switch needs to be managed by InControl.

## 27.2 Admin Security

Navigate to **Switch Tab > Switch Controller > Admin Security**.

There are two types of user accounts available for accessing the Web Admin: **admin** and **user**. The **admin** login has full administrative access, while the **user** login is read-only. The user level can access only the device's status information; users cannot make any changes on the device. A web login session will be logged out automatically when it has been idle longer than the **Web Session Timeout**. Before the session expires, you may click the **Logout** button in the web admin to exit the session.

**0 hours 0 minutes** signifies an unlimited session time. This setting should be used only in special situations, as it will lower the system security level if users do not log out before closing the browser. The **default** is 4 hours, 0 minutes.

For security reasons, after logging in to the web admin Interface for the first time, it is recommended to change the administrator password. Configuring the administration interface to be accessible only from the LAN can further improve system security. Administrative settings configuration is located at **System>Admin Security**.

| Admin Settings             |                                                                             |
|----------------------------|-----------------------------------------------------------------------------|
| Admin User Name            | <input type="text" value="admin"/>                                          |
| Admin Password             | <input type="password" value="....."/>                                      |
| Confirm Admin Password     | <input type="password" value="....."/>                                      |
| Read-only User Name        | <input type="text" value="user"/>                                           |
| Read-only Password         | <input type="password"/>                                                    |
| Confirm Read-only Password | <input type="password"/>                                                    |
| Web Session Timeout        | <input type="text" value="4"/> Hours <input type="text" value="0"/> Minutes |
| Security                   | HTTPS ▼                                                                     |
| Web Admin Port             | <input type="text" value="443"/>                                            |

Save

## Admin Settings

|                                   |                                                                                                                                                                                                                     |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Admin User Name</b>            | <b>Admin User Name</b> is set as <i>admin</i> by default, but can be changed, if desired.                                                                                                                           |
| <b>Admin Password</b>             | This field allows you to specify a new administrator password.                                                                                                                                                      |
| <b>Confirm Admin Password</b>     | This field allows you to verify and confirm the new administrator password.                                                                                                                                         |
| <b>Read-only User Name</b>        | <b>Read-only User Name</b> is set as <i>user</i> by default, but can be changed, if desired.                                                                                                                        |
| <b>Read-only Password</b>         | This field allows you to specify a new user password. Once the user password is set, the read-only user feature will be enabled.                                                                                    |
| <b>Confirm Read-only Password</b> | This field allows you to verify and confirm the new user password.                                                                                                                                                  |
| <b>Web Session Timeout</b>        | This field specifies the number of hours and minutes that a web session can remain idle before the Pepwave router terminates its access to the web admin interface. By default, it is set to <b>4 hours</b> .       |
| <b>Security</b>                   | <p>This option is for specifying the protocol(s) through which the web admin interface can be accessed:</p> <ul style="list-style-type: none"> <li>○ HTTP</li> <li>○ HTTPS</li> </ul> <p>Default will be HTTPS.</p> |
| <b>Web Admin Port</b>             | This field is for specifying the port number on which the web admin interface can be accessed.                                                                                                                      |

## 27.3 Switch Information

| Switch Information |                    |
|--------------------|--------------------|
| Device             | 1933-CF25-5CC4 ▼   |
| Name               | -                  |
| Serial Number      | 1933-CF25-5CC4     |
| Model              | 24 PoE 2.5G Switch |
| IP Address         | 192.168.52.63      |
| MAC Address        | D4:13:F8:22:A7:A0  |

### Switch Information

**Device** Drop down list to select Switch to be configured.

**Name** Name of the switch.(not sure where to define)

**Serial Number** Selected switch serial number.

**Model** Selected switch model.

**IP Address** Uplink IP address of the selected switch.

**MAC Address** Selected switch MAC address.

## 27.4 STP

Navigate to **Switch Tab > STP**.



| STP Bridge                                                                                                                  |                        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| Mode                                                                                                                                                                                                           | RSTP                   |
| Priority                                                                                                                      | 32768 (Default) ▼      |
| Hello Time                                                                                                                    | 2 (Default) ▼ seconds  |
| Forward Delay                                                                                                                 | 15 (Default) ▼ seconds |
| Max Age                                                                                                                       | 20 (Default) ▼ seconds |
| IEEE 802.1D recommends:<br>$2 \times (\text{Bridge Forward Delay} - 1.0 \text{ seconds}) \geq \text{Bridge Max Age}$<br>$\text{Bridge Max Age} \geq 2 \times (\text{Bridge Hello Time} + 1.0 \text{ seconds})$ |                        |

Save

## STP Bridge

**Mode** RSTP

**Priority** This field specifies the bridge priority for root switch election. The switch with the lowest bridge priority is elected as the root switch (Default value: 32768).

**Hello Time (A)** Time between each exchange of bridge protocol data units (BPDU). (Default value: 2 seconds).

**Forward Delay (A)** Delay used by STP Bridges to transit Root and Designated Ports to Forwarding. (Default value: 15 seconds).

**Max Age (A)** Maximum age of the information transmitted by the bridge when it is the Root Bridge. (Default value: 20 seconds).

(A) – Advanced feature. Click the  button on the top right-hand corner to activate.

## 27.5 Switch Ports

Navigate to **Switch Tab > Interfaces > Switch Ports**.

For each port, you can set PoE scheduling, port type (Trunk and Access), as well as the VLAN

which they belong to.



| Port Settings |      |           |               |                     |     |      |                                                                                       |
|---------------|------|-----------|---------------|---------------------|-----|------|---------------------------------------------------------------------------------------|
| ID            | Name | Port Type | VLAN Networks | PVID                | PoE | RSTP |                                                                                       |
| 1             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 2             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 3             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 4             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 5             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 6             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 7             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 8             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 9             |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |    |
| 10            |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |   |
| 11            |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |  |
| 12            |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |  |
| 13            |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |  |
| 14            |      | Trunk     | All           | Default VLAN - Auto | ⚡   | ✓    |  |

To configure port, you may click on the port icon or the pen icon from the Port Settings table to show the Port parameters.



---

|               |                                                                                                                                                            |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>PVID**</b> | Untagged frames received by the port are classified to a VLAN indicated by Port VLAN Identifier (PVID). All frames from the VLAN are untagged on egress.** |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|

---

|                          |                                                  |
|--------------------------|--------------------------------------------------|
| <b>RSTP<br/>checkbox</b> | Enables or Disables Rapid Spanning Tree Protocol |
|--------------------------|--------------------------------------------------|

\*\* PVID option is only configurable when Port Type is set to “Trunk”.

^ Configuration options on certain ports are configurable port speeds to 2.5 Gbps. May refer to the datasheet or label below switch ports.

^ Configurable options on SFP+ ports are similar as above, but configurable port speeds are between 100 Mbps Full Duplex up to 10 Gbps Full Duplex.

## 27.6 LACP (802.3ad) Configuration

LACP is part of the IEEE specification 802.3ad and allows you to bundle several physical ports to form a single logical channel.

Bundling multiple physical ports into a single logical link allows you to increase throughput beyond the limitations of a single connection and provides redundancy in case one link goes down.

Select multiple ports by clicking on them and selecting the **Link Aggregation** checkbox to enable link aggregation for the selected ports.

Port Settings

1 3 5 7 9 11 13 15 17 19 21 23

2 4 6 8 10 12 14 16 18 20 22 24 25 26 27 28

Link Aggregation

☒ Active

Port 21, 22

Name

Enable

☒

PoE Enable

☒

Speed

Auto

Port Type

Trunk

VLAN Networks

All

PVID

☒ Default VLAN

RSTP

Enable

Save

Cancel

## 28 System Settings

### 28.1 Admin Security

There are two types of user accounts available for accessing the web admin: *admin* and *user*. They represent two user levels: the admin level has full administrative access, while the user level is read-only. The user level can access only the device's status information; users cannot make any changes on the device.

A web login session will be logged out automatically when it has been idle longer than the **Web Session Timeout**. Before the session expires, you may click the **Logout** button in the web admin to exit the session.

**0 hours 0 minutes** signifies an unlimited session time. This setting should be used only in special situations, as it will lower the system security level if users do not log out before closing the browser. The **default** is 4 hours, 0 minutes.

For security reasons, after logging in to the web admin Interface for the first time, it is recommended to change the administrator password. Configuring the administration interface to be accessible only from the LAN can further improve system security. Administrative settings

configuration is located at **System > Admin Security**.

| Admin Settings             |                                                                                                                                                                                                                                               |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device Name                | MAX-BR1- <span style="background-color: black; color: black;">XXXXXXXXXX</span> hostname: max-br1- <span style="background-color: black; color: black;">XXXXXXXXXX</span><br><small>This configuration is being managed by InControl.</small> |
| Admin User Name            | admin                                                                                                                                                                                                                                         |
| Admin Password             | ••••••••                                                                                                                                                                                                                                      |
| Confirm Admin Password     | ••••••••                                                                                                                                                                                                                                      |
| Read-only User Name        | user                                                                                                                                                                                                                                          |
| Read-only Password         |                                                                                                                                                                                                                                               |
| Confirm Read-only Password |                                                                                                                                                                                                                                               |
| Web Session Timeout        | 4 Hours 0 Minutes                                                                                                                                                                                                                             |
| Authentication Method      | <input checked="" type="radio"/> Local Account <input type="radio"/> RADIUS <input type="radio"/> TACACS+                                                                                                                                     |
| CLI SSH & Console          | <input checked="" type="checkbox"/> Enable                                                                                                                                                                                                    |
| CLI SSH Access             | LAN Only                                                                                                                                                                                                                                      |
| CLI SSH Port               | 8822                                                                                                                                                                                                                                          |
| CLI SSH Access Public Key  | Admin User: (Disabled) <a href="#">configure</a><br>Read-only User: (Disabled) <a href="#">configure</a>                                                                                                                                      |
| Security                   | HTTP / HTTPS<br><input checked="" type="checkbox"/> Redirect HTTP to HTTPS                                                                                                                                                                    |
| Web Admin Access           | HTTP: LAN / WAN HTTPS: LAN / WAN                                                                                                                                                                                                              |
| Web Admin Port             | HTTP: 80 HTTPS: 443                                                                                                                                                                                                                           |

| LAN Connection Access Settings |                                                                                    |
|--------------------------------|------------------------------------------------------------------------------------|
| Allowed LAN Networks           | <input checked="" type="radio"/> Any <input type="radio"/> Allow this network only |


| WAN Connection Access Settings                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                             |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |
|-----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|-----|-------|------------------------------|--|--|-----------------------------------|--|--|-----------------------------------------------|--|--|---------------------------------------------|--|--|-------------------------------------|--|--|----------------------------------------|--|--|
| Allowed Source IP Subnets                     | <input checked="" type="radio"/> Any <input type="radio"/> Allow access from the following IP subnets only                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                             |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |
| Allowed WAN IP Address(es)                    | <table border="1"> <thead> <tr> <th>Connection / IP Address(es)</th> <th>All</th> <th>Clear</th> </tr> </thead> <tbody> <tr> <td><input type="checkbox"/> WAN</td> <td></td> <td></td> </tr> <tr> <td><input type="checkbox"/> Cellular</td> <td></td> <td></td> </tr> <tr> <td><input type="checkbox"/> Wi-Fi WAN on 2.4 GHz</td> <td></td> <td></td> </tr> <tr> <td><input type="checkbox"/> Wi-Fi WAN on 5 GHz</td> <td></td> <td></td> </tr> <tr> <td><input type="checkbox"/> VLAN WAN 1</td> <td></td> <td></td> </tr> <tr> <td><input type="checkbox"/> OpenVPN WAN 1</td> <td></td> <td></td> </tr> </tbody> </table> | Connection / IP Address(es) | All | Clear | <input type="checkbox"/> WAN |  |  | <input type="checkbox"/> Cellular |  |  | <input type="checkbox"/> Wi-Fi WAN on 2.4 GHz |  |  | <input type="checkbox"/> Wi-Fi WAN on 5 GHz |  |  | <input type="checkbox"/> VLAN WAN 1 |  |  | <input type="checkbox"/> OpenVPN WAN 1 |  |  |
| Connection / IP Address(es)                   | All                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Clear                       |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |
| <input type="checkbox"/> WAN                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                             |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |
| <input type="checkbox"/> Cellular             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                             |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |
| <input type="checkbox"/> Wi-Fi WAN on 2.4 GHz |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                             |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |
| <input type="checkbox"/> Wi-Fi WAN on 5 GHz   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                             |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |
| <input type="checkbox"/> VLAN WAN 1           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                             |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |
| <input type="checkbox"/> OpenVPN WAN 1        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                             |     |       |                              |  |  |                                   |  |  |                                               |  |  |                                             |  |  |                                     |  |  |                                        |  |  |

Save

## Admin Settings


**Device Name** This field allows you to define a name for this Peplink router. By default, **Device**

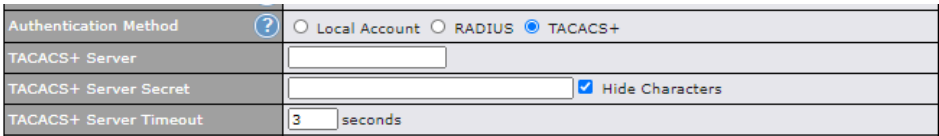

|                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                                                           |                                                                                                           |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>Authentication Protocol</b>                                                                                                                                            | This specifies the authentication protocol used. Available options are <b>MS-CHAP v2</b> and <b>PAP</b> . |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>Authentication Host</b>                                                                                                                                                | This specifies the IP address or hostname of the RADIUS server host.                                      |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>Authentication Port</b>                                                                                                                                                | This setting specifies the UDP destination port for authentication requests.                              |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>Authentication Secret</b>                                                                                                                                              | This field is for entering the secret key for accessing the RADIUS server.                                |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>Accounting Host</b>                                                                                                                                                    | This specifies the IP address or hostname of the RADIUS server host.                                      |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>Accounting Port</b>                                                                                                                                                    | This setting specifies the UDP destination port for accounting requests.                                  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>Accounting Secret</b>                                                                                                                                                  | This field is for entering the secret key for accessing the accounting server.                            |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>Authentication Timeout</b>                                                                                                                                             | This option specifies the time value for authentication timeout                                           |
| <ul style="list-style-type: none"> <li>TACACS+</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                           |                                                                                                           |
|  <p>The screenshot shows a configuration interface for TACACS+. It includes a 'Authentication Method' section with radio buttons for 'Local Account', 'RADIUS', and 'TACACS+' (which is selected). Below this are fields for 'TACACS+ Server', 'TACACS+ Server Secret' (with a 'Hide Characters' checkbox), and 'TACACS+ Server Timeout' (set to 3 seconds).</p> |                                                                                                                                                                           |                                                                                                           |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>TACACS+ Server</b>                                                                                                                                                     | This specifies the access address of the external TACACS+ server.                                         |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>TACACS+ Server Secret</b>                                                                                                                                              | This field is for entering the secret key for accessing the RADIUS server.                                |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>TACACS+ Server Timeout</b>                                                                                                                                             | This option specifies the time value for TACACS+ timeout                                                  |
| <b>CLI SSH &amp; Console</b>                                                                                                                                                                                                                                                                                                                                                                                                                         | The CLI (command line interface) can be accessed via SSH. This field enables CLI support. For additional information regarding CLI, please refer to <b>Section 31.5</b> . |                                                                                                           |
| <b>CLI SSH Access</b>                                                                                                                                                                                                                                                                                                                                                                                                                                | This menu allows you to choose between granting access to LAN and WAN clients, or to LAN clients only.                                                                    |                                                                                                           |



|                                  |                                                                                                                                                                                                                                                                                                                      |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>CLI SSH Port</b>              | This field determines the port on which clients can access CLI SSH.                                                                                                                                                                                                                                                  |
| <b>CLI SSH Access Public Key</b> | This field is for entering the Public Key for Admin Users and Read-only Users to access CLI SSH.                                                                                                                                                                                                                     |
| <b>Security</b>                  | <p>This option is for specifying the protocol(s) through which the web admin interface can be accessed:</p> <ul style="list-style-type: none"> <li>• HTTP</li> <li>• HTTPS</li> <li>• HTTP/HTTPS</li> </ul> <p>HTTP to HTTPS redirection is enabled by default to force HTTPS access to the web admin interface.</p> |
| <b>Web Admin Access</b>          | <p>This option is for specifying the network interfaces through which the web admin interface can be accessed:</p> <ul style="list-style-type: none"> <li>• LAN only</li> <li>• LAN/WAN</li> </ul> <p>If LAN/WAN is chosen, the <b>WAN Connection Access Settings</b> form will be displayed.</p>                    |
| <b>Web Admin Port</b>            | This field is for specifying the port number on which the web admin interface can be accessed.                                                                                                                                                                                                                       |

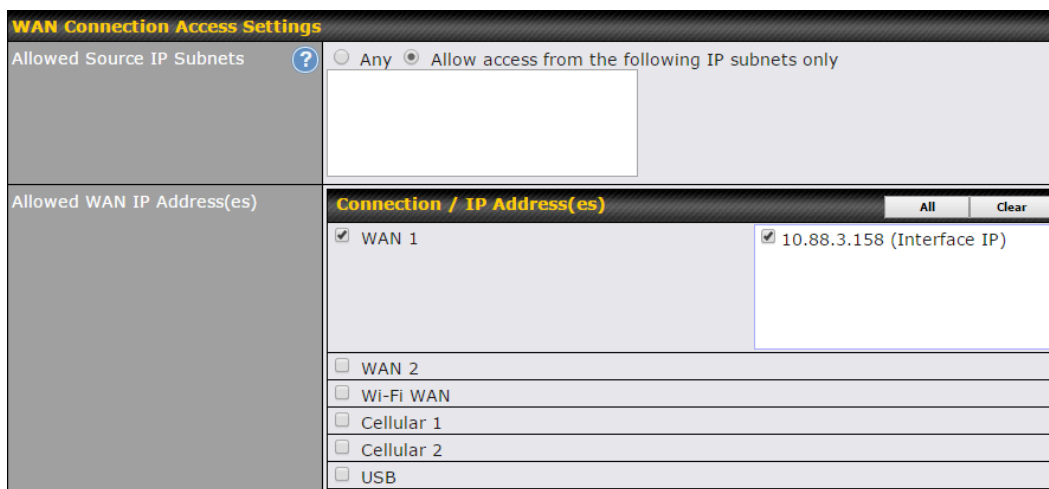

### WAN Connection Access Settings

#### Allowed Source IP Subnets

- This field allows you to restrict web admin access only from defined IP subnets.
- **Any** - Allow web admin accesses to be from anywhere, without IP address restriction.
  - **Allow access from the following IP subnets only** - Restrict web admin access only from the defined IP subnets. When this is chosen, a text input area will be displayed beneath:

The allowed IP subnet addresses should be entered into this text area. Each IP subnet must be in form of *w.x.y.z/m*, where *w.x.y.z* is an IP address (e.g., 192.168.0.0), and *m* is the subnet mask in CIDR format, which is between 0 and 32 inclusively (For example, 192.168.0.0/24).

To define multiple subnets, separate each IP subnet one in a line. For example:

- 192.168.0.0/24
- 10.8.0.0/16

#### Allowed WAN IP Address(es)

This is to choose which WAN IP address(es) the web server should listen on.


## 28.2 Firmware

### Web admin interface : automatically check for updates


Upgrading firmware can be done in one of three ways.

Using the router's interface to automatically check for an update, using the router's interface to manually upgrade the firmware, or using InControl2 to push an upgrade to a router.

The automatic upgrade can be done from **System > Firmware**.

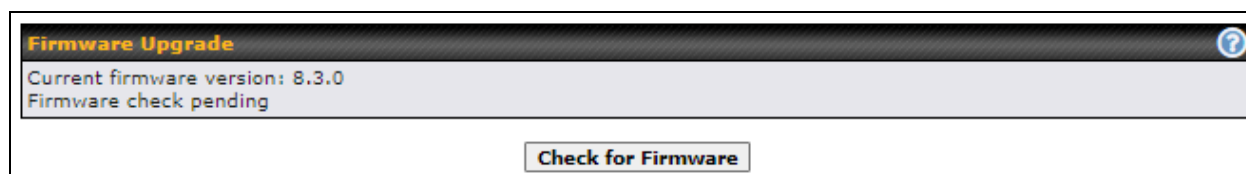

If an update is found the buttons will change to allow you to **Download and Update** the firmware.

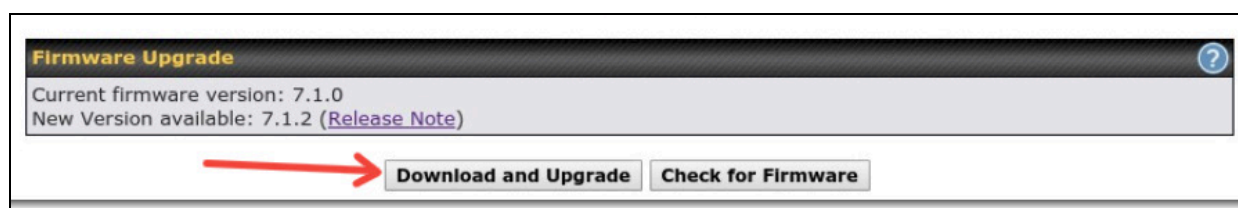

Click on the **Download and Upgrade** button. A prompt will be displayed advising to download the Current Active Configuration. Please click on the underlined download text. After downloading the current config click the **Ok** button to start the upgrade process.


The router will download and then apply the firmware. The time that this process takes will depend on your internet connection's speed.



The firmware will now be applied to the router\*. The amount of time it takes for the firmware to upgrade will also depend on the router that's being upgraded.

### Firmware Upgrade

 It may take up to 8 minutes.



*\*Upgrading the firmware will cause the router to reboot.*

### Web admin interface : install updates manually

In some cases, a special build may be provided via a ticket or it may be found in the forum. Upgrading to the special build can be done using this method, or using IC2 if you are using that to manage your firmware upgrades. A manual upgrade using the GA firmware posted on the site may also be recommended or required for a couple of reasons.

All of the Peplink/Peplink GA firmware can be found [here](#). Navigate to the relevant product line (ie. Balance, Max, FusionHub, etc). Some product lines may have a dropdown that lists all of the products in that product line. Here is a screenshot from the Balance line.

| Balance                                                                   |                   |                  |                          |                     |                     |
|---------------------------------------------------------------------------|-------------------|------------------|--------------------------|---------------------|---------------------|
| <div>Product <span>▼</span></div> <div>Search: <input type="text"/></div> |                   |                  |                          |                     |                     |
| Product                                                                   | Hardware Revision | Firmware Version | Download Link            | Release Notes       | User Manual         |
| Balance 1350                                                              | HW2               | 7.1.2            | <a href="#">Download</a> | <a href="#">PDF</a> | <a href="#">PDF</a> |
| Balance 1350                                                              | HW1               | 6.3.4            | <a href="#">Download</a> | <a href="#">PDF</a> | <a href="#">PDF</a> |
| Balance 20                                                                | HW1-6             | 7.1.2            | <a href="#">Download</a> | <a href="#">PDF</a> | <a href="#">PDF</a> |
| Balance 210                                                               | HW4               | 7.1.2            | <a href="#">Download</a> | <a href="#">PDF</a> | <a href="#">PDF</a> |

If the device has more than one firmware version the current hardware revision will be required to know what firmware to download.

Navigate to System > Firmware and click the Choose File button under the Manual Firmware Upgrade section. Navigate to the location that the firmware was downloaded to select the ".img" file and click the Open button.

Click on the Manual Upgrade button to start the upgrade process.

Manual Firmware Upgrade

 
Firmware Image

No file chosen

A prompt will be displayed advising to download the Current Active Configuration. Please click on the underlined download text. After downloading the current config click the Ok button to start the upgrade process. The firmware will now be applied to the router\*. The amount of time it takes for the firmware to upgrade will depend on the router that's being upgraded.

### Firmware Upgrade

It may take up to 8 minutes.



*\*Upgrading the firmware will cause the router to reboot.*

## The InControl method

[Described in this knowledgebase article on our forum.](#)

## 28.3 Time

**Time Settings** enables the system clock of the Peplink router to be synchronized with a specified time server. Time settings are located at **System>Time**.

Time Settings

|                                    |                                                                                          |
|------------------------------------|------------------------------------------------------------------------------------------|
| Time Zone                          | <div>(UTC) Coordinated Universal Time</div> <div><input type="checkbox"/> Show all</div> |
| Time Sync                          | <div>Time Server</div>                                                                   |
| Time Server                        | <div>0.pepwave.pool.ntp.org</div> <div>time.google.com</div>                             |
| Time Server Source Network Address | <div>Untagged LAN (1)</div>                                                              |

Save

| Time Settings                             |                                                                                                                                                                                                                                                               |
|-------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Time Zone</b>                          | This specifies the time zone (along with the corresponding Daylight Savings Time scheme). The <b>Time Zone</b> value affects the time stamps in the Peplink router's event log and e-mail notifications. Check <b>Show all</b> to show all time zone options. |
| <b>Time Sync</b>                          | This field allows to select your time sync mode, the available options are: <ul style="list-style-type: none"> <li>• Time Server</li> <li>• GPS</li> <li>• GPS with Time Server as fallback</li> </ul>                                                        |
| <b>Time Server</b>                        | This setting specifies the NTP network time server to be utilized by the router.<br><b>NOTE:</b> Multiple NTP servers can be added starting from firmware version 8.5.3.                                                                                      |
| <b>Time Server Source Network Address</b> | This setting is to specific which VLAN network will be used for NTP traffic.                                                                                                                                                                                  |

## 28.4 Schedule

Enable and disable different functions (such as WAN connections, outbound policy, and firewalls) at different times, based on a user-scheduled configuration profile. The settings for this are located at **System > Schedule**

| Name                         | Time | Used by |  |
|------------------------------|------|---------|--|
| No schedule profiles defined |      |         |  |
| <div>New Schedule</div>      |      |         |  |

Enable scheduling, and then click on your schedule name or on the **New Schedule** button to begin.



| Email Notification Setup  |                                                                                  |
|---------------------------|----------------------------------------------------------------------------------|
| Email Notification        | <input checked="" type="checkbox"/> Enable                                       |
| SMTP Server               | smtp.mycompany.com<br><input checked="" type="checkbox"/> Require authentication |
| Connection Security       | SSL/TLS (Note: any server certificate will be accepted)                          |
| SMTP Port                 | 465                                                                              |
| SMTP User Name            | smtpuser                                                                         |
| SMTP Password             | *****                                                                            |
| Confirm SMTP Password     | *****                                                                            |
| Sender's Email Address    | admin@mycompany.com                                                              |
| Recipient's Email Address | system@mycompany.com<br>staff@mycompany.com                                      |

Test Email Notification Save

| Email Notification Settings      |                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Email Notification</b>        | This setting specifies whether or not to enable email notification. If <b>Enable</b> is checked, the Peplink router will send email messages to system administrators when the WAN status changes or when new firmware is available. If <b>Enable</b> is not checked, email notification is disabled and the Peplink router will not send email messages.                    |
| <b>SMTP Server</b>               | This setting specifies the SMTP server to be used for sending email. If the server requires authentication, check <b>Require authentication</b> .                                                                                                                                                                                                                            |
| <b>Connection Security</b>       | This setting specifies via a drop-down menu one of the following valid Connection Security: <ul style="list-style-type: none"> <li>None</li> <li>STARTTLS</li> <li>SSL/TLS</li> </ul>                                                                                                                                                                                        |
| <b>SMTP Port</b>                 | This field is for specifying the SMTP port number. By default, this is set to <b>25</b> . If Connection Security is selected " <b>STARTTLS</b> ", the default port number will be set to <b>587</b> . If Connection Security is selected " <b>SSL/TLS</b> ", the default port number will be set to <b>465</b> .<br>You may customize the port number by editing this field. |
| <b>SMTP User Name / Password</b> | This setting specifies the SMTP username and password while sending email. These options are shown only if <b>Require authentication</b> is checked in the <b>SMTP Server</b> setting.                                                                                                                                                                                       |
| <b>Confirm SMTP Password</b>     | This field allows you to verify and confirm the new administrator password.                                                                                                                                                                                                                                                                                                  |

|                                  |                                                                                                                                                                                     |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Sender's Email Address</b>    | This setting specifies the email address the Peplink router will use to send reports.                                                                                               |
| <b>Recipient's Email Address</b> | This setting specifies the email address(es) to which the Peplink router will send email notifications. For multiple recipients, separate each email addresses using the enter key. |

After you have finished setting up email notifications, you can click the **Test Email Notification** button to test the settings before saving. After **Test Email Notification** is clicked, you will see this screen to confirm the settings:

| Test Email Notification   |                                             |
|---------------------------|---------------------------------------------|
| SMTP Server               | smtp.mycompany.com                          |
| SMTP Port                 | 465                                         |
| SMTP UserName             | smtpuser                                    |
| Sender's Email Address    | admin@mycompany.com                         |
| Recipient's Email Address | system@mycompany.com<br>staff@mycompany.com |

Click **Send Test Notification** to confirm. In a few seconds, you will see a message with detailed test results.



**Test email sent.**  
(NOTE: Settings are not saved. To confirm the update, click 'Save' button.)

| Email Notification Setup <span>?</span> |                                                                                                                                |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Email Notification                      | <input checked="" type="checkbox"/> Enable                                                                                     |
| SMTP Server                             | <input type="text"/><br><input checked="" type="checkbox"/> Require authentication                                             |
| Connection Security                     | SSL/TLS <span>▼</span> (Note: any server certificate will be accepted)                                                         |
| SMTP Port                               | <input type="text" value="465"/>                                                                                               |
| SMTP User Name                          | <input type="text"/>                                                                                                           |
| SMTP Password                           | <input type="password"/>                                                                                                       |
| Confirm SMTP Password                   | <input type="password"/>                                                                                                       |
| Sender's Email Address                  | <input type="text"/>                                                                                                           |
| Recipient's Email Address               | <div><input type="text"/></div> <div></div> |

**Test Email Notification** **Save**

#### Test Result

```
[INFO] Try email through auto detected connection
[INFO] SMTP through SSL connected
<- 220 smtp.gmail.com ESMTP h11sm3907691pjpg.46 - gsmt
-> EHLO balance.peplink.com
<- 250-smtp.gmail.com at your service, [14.192.209.255]
<- 250-SIZE 35882577
<- 250-8BITMIME
<- 250-AUTH LOGIN PLAIN XOAUTH2 PLAIN-CLIENTTOKEN OAUTHBEARER XOAUTH
<- 250-ENHANCEDSTATUSCODES
<- 250-PIPELINING
<- 250-CHUNKING
<- 250 SMTPUTF8
-> AUTH PLAIN AGdwc2dhbjk0QGdtYVlsLmNvbQBwdnJ6bWF6cGhtYXJpanpp
```

## 28.6 Event Log

Event log functionality enables event logging at a specified remote syslog server. The settings for configuring the remote system log can be found at **System > Event Log**.

| Send Events to Remote Syslog Server |                          |
|-------------------------------------|--------------------------|
| Remote Syslog                       | <input type="checkbox"/> |
| Remote Syslog Host                  | <input type="text"/>     |
| Port:                               | 514                      |
| Source Network Address              | Untagged LAN ▼           |

| Push Events to Mobile Devices |                          |
|-------------------------------|--------------------------|
| Push Events                   | <input type="checkbox"/> |

| URL Logging |                          |
|-------------|--------------------------|
| Enable      | <input type="checkbox"/> |

| Session Logging |                          |
|-----------------|--------------------------|
| Enable          | <input type="checkbox"/> |

**Save**

| Event Log Settings            |                                                                                                                                                              |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Remote Syslog</b>          | This setting specifies whether or not to log events at the specified remote syslog server.                                                                   |
| <b>Remote Syslog Host</b>     | This setting specifies the IP address or hostname of the remote syslog server.                                                                               |
| <b>Source Network Address</b> | Via drop-down list, you may choose the LAN interface for Event Log, URL Logging, Sessions Logging and RADIUS.                                                |
| <b>Push Events</b>            | The Peplink router can also send push notifications to mobile devices that have our Mobile Router Utility installed. Check the box to activate this feature. |
| <b>URL Logging</b>            | This setting is to enable event logging at the specified log server.                                                                                         |
| <b>URL Logging Host</b>       | This setting specifies the IP address or hostname of the URL log server.                                                                                     |

**Session Logging** This setting is to enable event logging at the specified log server.

**Session Logging Host** This setting specifies the IP address or hostname of the Session log server.



For more information on the Router Utility, go to: [www.peplink.com/products/router-utility](http://www.peplink.com/products/router-utility)

## 28.7 SNMP

SNMP or simple network management protocol is an open standard that can be used to collect information about the Peplink router. SNMP configuration is located at **System > SNMP**.

| SNMP Settings              |                                                 |
|----------------------------|-------------------------------------------------|
| SNMP Device Name           | MAX_TST_3D8B                                    |
| Location                   | <input type="text"/>                            |
| SNMP Port                  | <input type="text" value="161"/> <b>Default</b> |
| SNMPv1                     | <input type="checkbox"/> Enable                 |
| SNMPv2c                    | <input type="checkbox"/> Enable                 |
| SNMPv3                     | <input type="checkbox"/> Enable                 |
| SNMP Trap                  | <input checked="" type="checkbox"/> Enable      |
| SNMP Trap Community        | <input type="text"/>                            |
| SNMP Trap Server           | <input type="text"/>                            |
| SNMP Trap Port             | <input type="text" value="162"/>                |
| SNMP Trap Server Heartbeat | <input type="checkbox"/>                        |
| <b>Save</b>                |                                                 |

| Community Name                          | Allowed Source Network | Access Mode |
|-----------------------------------------|------------------------|-------------|
| No SNMPv1 / SNMPv2c Communities Defined |                        |             |
| <b>Add SNMP Community</b>               |                        |             |

| SNMPv3 User Name        | Authentication / Privacy | Access Mode |
|-------------------------|--------------------------|-------------|
| No SNMPv3 Users Defined |                          |             |
| <b>Add SNMP User</b>    |                          |             |

| SNMP Settings      |                                                                                 |
|--------------------|---------------------------------------------------------------------------------|
| <b>SNMP Device</b> | This field shows the router name defined at <b>System &gt; Admin Security</b> . |

| Name                              |                                                                                                      |
|-----------------------------------|------------------------------------------------------------------------------------------------------|
| <b>SNMP Port</b>                  | This option specifies the port which SNMP will use. The default port is <b>161</b> .                 |
| <b>SNMPv1</b>                     | This option allows you to enable SNMP version 1.                                                     |
| <b>SNMPv2</b>                     | This option allows you to enable SNMP version 2.                                                     |
| <b>SNMPv3</b>                     | This option allows you to enable SNMP version 3.                                                     |
| <b>SNMP Trap</b>                  | This option allows you to enable SNMP Trap. If enabled, the following entry fields will appear.      |
| <b>SNMP Trap Community</b>        | This setting specifies the SNMP Trap community name.                                                 |
| <b>SNMP Trap Server</b>           | Enter the IP address of the SNMP Trap server.                                                        |
| <b>SNMP Trap Port</b>             | This option specifies the port which the SNMP Trap server will use. The default port is <b>162</b> . |
| <b>SNMP Trap Server Heartbeat</b> | This option allows you to enable and configure the heartbeat interval for the SNMP Trap server.      |

To add a community for either SNMPv1 or SNMPv2, click the **Add SNMP Community** button in the **Community Name** table, upon which the following screen is displayed:

SNMP Community

Community Name

My Company

Allowed Network


192.168.1.25 / 255.255.255.0 (/24)

Save

Cancel

| SNMP Community Settings              |                                                                                                                                                                        |
|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Community Name</b>                | This setting specifies the SNMP community name.                                                                                                                        |
| <b>Allowed Source Subnet Address</b> | This setting specifies a subnet from which access to the SNMP server is allowed. Enter subnet address here (e.g., 192.168.1.0) and select the appropriate subnet mask. |

To define a user name for SNMPv3, click **Add SNMP User** in the **SNMPv3 User Name** table, upon which the following screen is displayed:

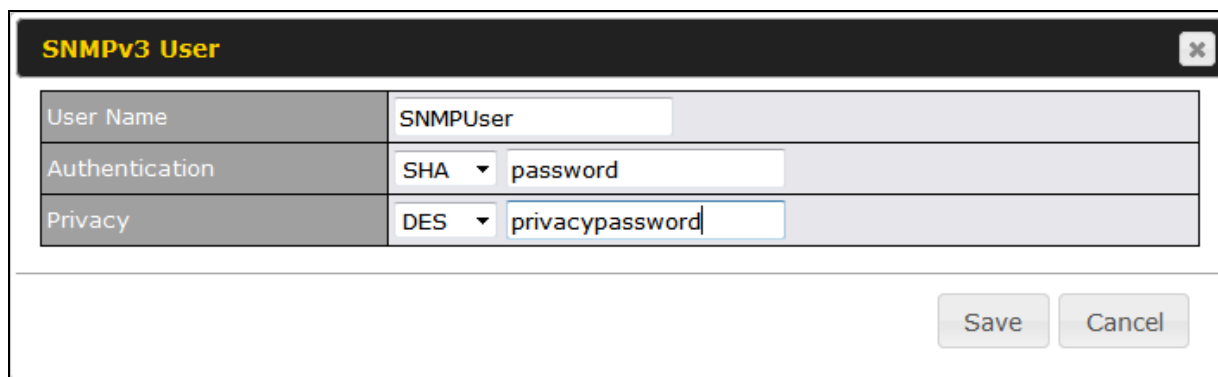


The screenshot shows a window titled "SNMPv3 User" with a close button (X) in the top right corner. It contains three rows of configuration fields:

|                |                                                  |
|----------------|--------------------------------------------------|
| User Name      | SNMPUser                                         |
| Authentication | SHA <input type="text" value="password"/>        |
| Privacy        | DES <input type="text" value="privacypassword"/> |

At the bottom right, there are two buttons: "Save" and "Cancel".

| SNMPv3 User Settings           |                                                                                                                                                                                                                                                                                 |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>User Name</b>               | This setting specifies a user name to be used in SNMPv3.                                                                                                                                                                                                                        |
| <b>Authentication Protocol</b> | <p>This setting specifies via a drop-down menu one of the following valid authentication protocols:</p> <ul style="list-style-type: none"> <li>• NONE</li> <li>• MD5</li> <li>• SHA</li> </ul> <p>When MD5 or SHA is selected, an entry field will appear for the password.</p> |
| <b>Privacy Protocol</b>        | <p>This setting specifies via a drop-down menu one of the following valid privacy protocols:</p> <ul style="list-style-type: none"> <li>• NONE</li> <li>• DES</li> </ul> <p>When DES is selected, an entry field will appear for the password.</p>                              |

## 28.8 InControl

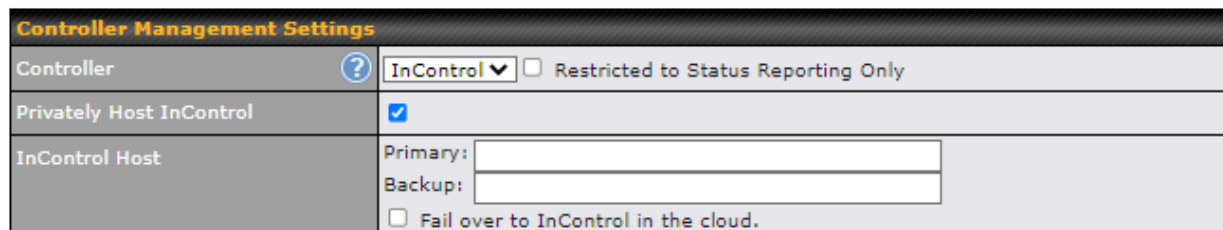

The screenshot shows a window titled "Controller Management Settings" with a help icon (?) in the top right corner. It contains three rows of configuration fields:

|                          |                                                                                                                                |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Controller               | <input type="text" value="InControl"/> <input type="checkbox"/> Restricted to Status Reporting Only                            |
| Privately Host InControl | <input checked="" type="checkbox"/>                                                                                            |
| InControl Host           | Primary: <input type="text"/><br>Backup: <input type="text"/><br><input type="checkbox"/> Fail over to InControl in the cloud. |

InControl is a cloud-based service which allows you to manage all of your Peplink devices with

one unified system. With it, you can generate reports, gather statistics, and configure your devices automatically. All of this is now possible with InControl.

When this check box is checked, the device's status information will be sent to the Peplink InControl system. This device's usage data and configuration will be sent to the system if you enable the features in the system.

Alternatively, you can also privately host InControl. Simply check the “Privately Host InControl” box and enter the IP Address of your InControl Host. If you have multiple hosts, you may enter the primary and backup IP addresses for the InControl Host and tick the “Fail over to InControl in the cloud” box. The device will connect to either the primary InControl Host or the secondary/backup ICA/IC2.

You can sign up for an InControl account at <https://incontrol2.peplink.com/>. You can register your devices under the account, monitor their status, see their usage reports, and receive offline notifications.

## 28.9 Configuration

Backing up Peplink router settings immediately after successful completion of initial setup is strongly recommended. The functionality to download and upload Peplink router settings is found at **System > Configuration**. Note that available options vary by model.

Restore Configuration to Factory Settings
?

Restore Factory Settings

Download Active Configurations
?

Download

Upload Configurations
?

Configuration File
Browse...
No file selected.

Upload

Upload Configurations from High Availability Pair
?

Configuration File
Browse...
No file selected.

Upload

| Configuration  |                                                                                     |
|----------------|-------------------------------------------------------------------------------------|
| <b>Restore</b> | The <b>Restore Factory Settings</b> button is to reset the configuration to factory |

|                                                          |                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Configuration to Factory Settings</b>                 | default settings. After clicking the button, you will need to click the <b>Apply Changes</b> button on the top right corner to make the settings effective.                                                                                                                                                                                                                               |
| <b>Download Active Configurations</b>                    | Click <b>Download</b> to backup the current active settings.                                                                                                                                                                                                                                                                                                                              |
| <b>Upload Configurations</b>                             | To restore or change settings based on a configuration file, click <b>Choose File</b> to locate the configuration file on the local computer, and then click <b>Upload</b> . The new settings can then be applied by clicking the <b>Apply Changes</b> button on the page header, or you can cancel the procedure by pressing <b>discard</b> on the main page of the web admin interface. |
| <b>Upload Configurations from High Availability Pair</b> | In a high availability (HA) configuration, a Peplink router can quickly load the configuration of its HA counterpart. To do so, click the <b>Upload</b> button. After loading the settings, configure the LAN IP address of the Peplink router so that it is different from the HA counterpart.                                                                                           |

## 28.10 Feature Add-ons

Some Peplink routers have features that can be activated upon purchase. Once the purchase is complete, you will receive an activation key. Enter the key in the **Activation Key** field, click **Activate**, and then click **Apply Changes**.




The image shows a web interface titled "Feature Activation". It contains a label "Activation Key" followed by a large, empty text input field for entering the activation key.

## 28.11 Reboot

This page provides a reboot button for restarting the system. For maximum reliability, the Peplink router can equip with two copies of firmware. Each copy can be a different version. You can select the firmware version you would like to reboot the device with. The firmware marked with **(Running)** is the current system boot up firmware.

**Please note that a firmware upgrade will always replace the inactive firmware partition.**

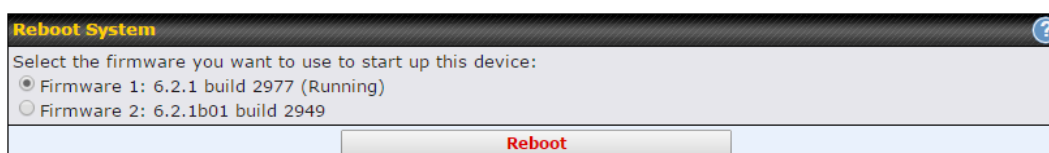

The image shows a web interface titled "Reboot System". It contains the text "Select the firmware you want to use to start up this device:" followed by two radio button options: "Firmware 1: 6.2.1 build 2977 (Running)" and "Firmware 2: 6.2.1b01 build 2949". Below the options is a red "Reboot" button.

## 29 Tools

### 29.1 Ping

The ping test tool sends pings through a specific Ethernet interface or a SpeedFusion™ VPN connection. You can specify the number of pings in the field **Number of times**, to a maximum number of 10 times. **Packet Size** can be set to a maximum of 1472 bytes. The ping utility is located at **System > Tools > Ping**, illustrated below:

Ping

Connection

WAN 1 ▼

Destination

10.10.10.1

Packet Size

56

Number of times

Times 5

Start

Stop

Results

Clear Log

PING 10.10.10.1 (10.10.10.1) from 10.88.3.158 56(84) bytes of data.  
64 bytes from 10.10.10.1: icmp\_req=1 ttl=62 time=27.6 ms  
64 bytes from 10.10.10.1: icmp\_req=2 ttl=62 time=26.5 ms  
64 bytes from 10.10.10.1: icmp\_req=3 ttl=62 time=28.9 ms  
64 bytes from 10.10.10.1: icmp\_req=4 ttl=62 time=28.3 ms  
64 bytes from 10.10.10.1: icmp\_req=5 ttl=62 time=27.7 ms  
  
--- 10.10.10.1 ping statistics ---  
5 packets transmitted, 5 received, 0% packet loss, time 4005ms  
rtt min/avg/max/mdev = 26.516/27.855/28.933/0.814 ms

#### Tip

A system administrator can use the ping utility to manually check the connectivity of a particular LAN/WAN connection.



## 29.2 Traceroute Test

The traceroute test tool traces the routing path to the destination through a particular Ethernet interface or a SpeedFusion™ connection. The traceroute test utility is located at **System > Tools > Traceroute**.

**Traceroute**

Connection

WAN 1

Destination

64.233.189.99

Start

Stop

**Results**

Clear Log

```

Traceroute to 64.233.189.99 (64.233.189.99), 30 hops max, 30 bytes packet size
 0: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 1: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 2: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 3: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 4: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 5: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 6: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 7: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 8: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
 9: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
10: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
11: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
12: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
13: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
14: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
15: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
16: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
17: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
18: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
19: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
20: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
21: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
22: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
23: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
24: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
25: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
26: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
27: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
28: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
29: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms
30: 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms 10.0.0.1 (10.0.0.1) 0.000 ms

```

### Tip

A system administrator can use the traceroute utility to analyze the connection path of a LAN/WAN connection.

## 29.3 Wake-on-LAN

Pepwane routers can send special “magic packets” to any client specified from the Web UI. To access this feature, navigate to **System > Tools > Wake-on-LAN**

**Wake-on-LAN**

Wake-on-LAN Target

Surf\_SOHO (00:90:0B:36:3C:8C)

Send

Select a client from the drop-down list and click **Send** to send a “magic packet”

## 29.4 WAN Analysis

The WAN Analysis feature allows you to run a WAN to WAN speed test between 2 Peplink devices .

You can set a device up as a **Server** or a **Client**. One device must be set up as a server to run the speed tests and the server must have a public IP address.

### WAN Performance Analysis

Check your point-to-point WAN performance with another peer



**As a server**  
For the peer who has public IP addresses to accept connection.



**As a client**  
For the peer to initiate connection.

The default port is 6000 and can be changed if required. The IP address of the WAN interface will be shown in the **WAN Connection Status** section.

### WAN Performance Analysis

Check your point-to-point WAN performance with another peer

**Server Settings**

|              |                                                                    |
|--------------|--------------------------------------------------------------------|
| Status       | <input checked="" type="checkbox"/> Listening (Control Port: 6000) |
| Control Port | <input type="text" value="6000"/>                                  |

**WAN Connection Status**

|                 |                                                 |
|-----------------|-------------------------------------------------|
| 1 WAN 1         | <input checked="" type="checkbox"/> 10.22.1.182 |
| 2 WAN 2         | <input type="checkbox"/> Disabled               |
| 3 WAN 3         | <input type="checkbox"/> Disabled               |
| 4 WAN 4         | <input type="checkbox"/> Disabled               |
| 5 WAN 5         | <input type="checkbox"/> Disabled               |
| Mobile Internet | <input type="checkbox"/> Disabled               |

The client side has a few more settings that can be changed. Make sure that the **Control Port** matches what's been entered on the server side. Select the WAN(s) that will be used for testing and enter the Servers WAN IP address. Once all of the options have been set, click the **Start Test** button.

## WAN Performance Analysis

Check your point-to-point WAN performance with another peer


### Client Settings

|              |                                                                        |                                      |
|--------------|------------------------------------------------------------------------|--------------------------------------|
| Control Port | <input type="text" value="6000"/>                                      |                                      |
| Data Port    | <input type="text" value="57280"/>                                     | - <input type="text" value="57287"/> |
| Type         | <input checked="" type="radio"/> TCP <input type="radio"/> UDP         |                                      |
| Direction    | <input checked="" type="radio"/> Upload <input type="radio"/> Download |                                      |
| Duration     | <input type="text" value="20"/>                                        | seconds (5 - 600)                    |

### Data Streams

| Local WAN Connection | Remote IP Address    |
|----------------------|----------------------|
| 1. -- Not Used --    | <input type="text"/> |
| 2. -- Not Used --    | <input type="text"/> |
| 3. -- Not Used --    | <input type="text"/> |
| 4. -- Not Used --    | <input type="text"/> |
| 5. -- Not Used --    | <input type="text"/> |
| 6. -- Not Used --    | <input type="text"/> |
| 7. -- Not Used --    | <input type="text"/> |
| 8. -- Not Used --    | <input type="text"/> |

The test output will show the **Data Streams Parameters**, the **Throughput** as a graph, and the **Results**.

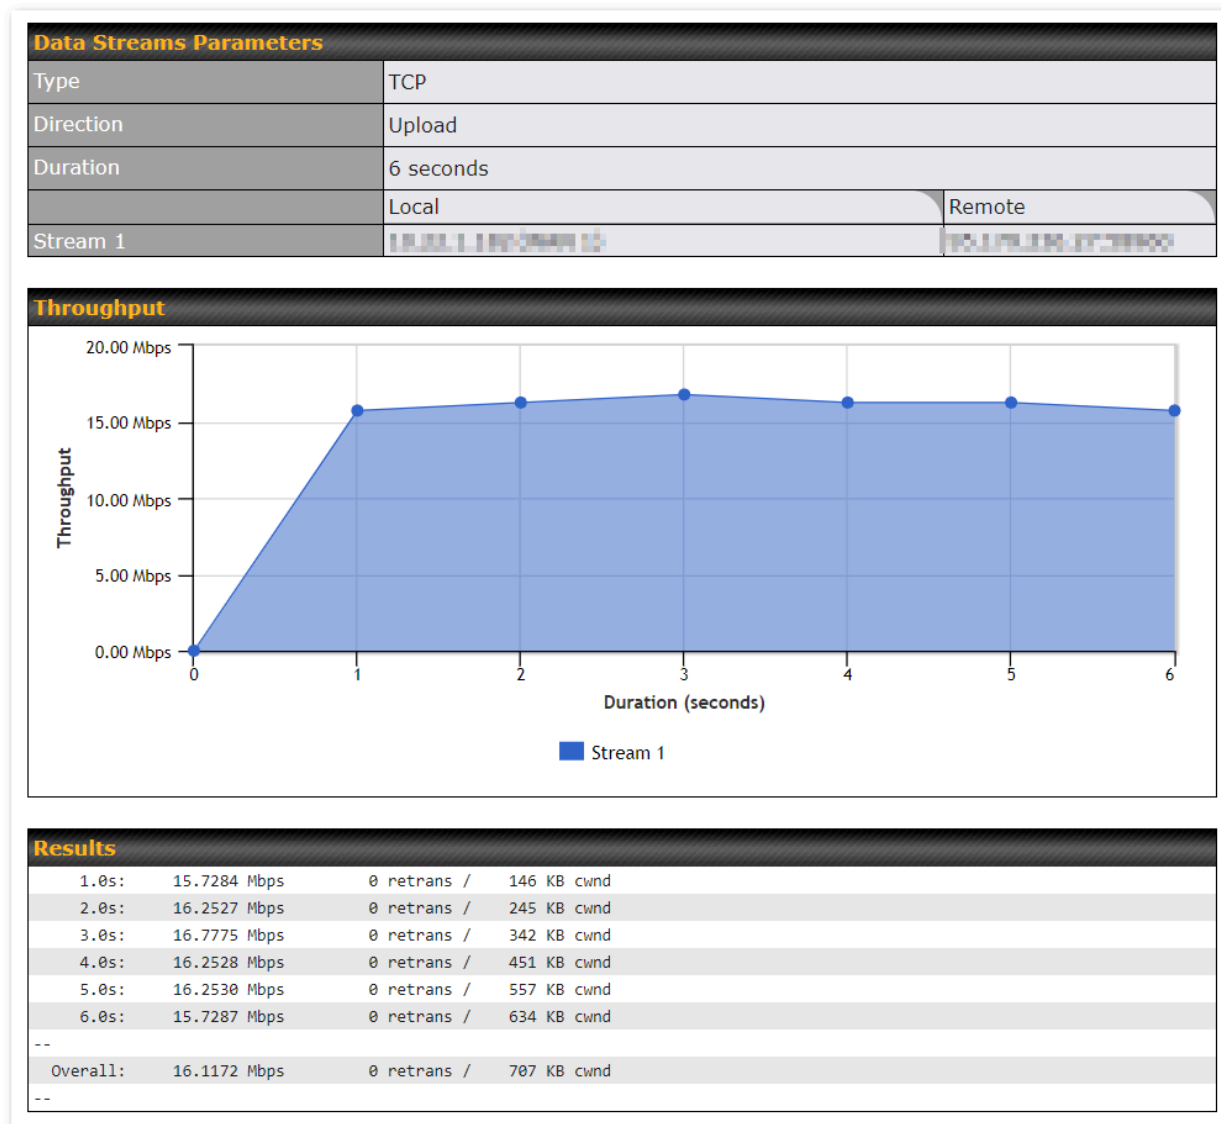


The test can be run again once it's complete by clicking the **Start** button or you can click **Close** and change the parameters for the test.

## 29.5 CLI (Command Line Support)

The CLI (Command Line Interface) can be accessed via SSH. You can use it to get device statistics and basic operations.


### CLI Connect Method:

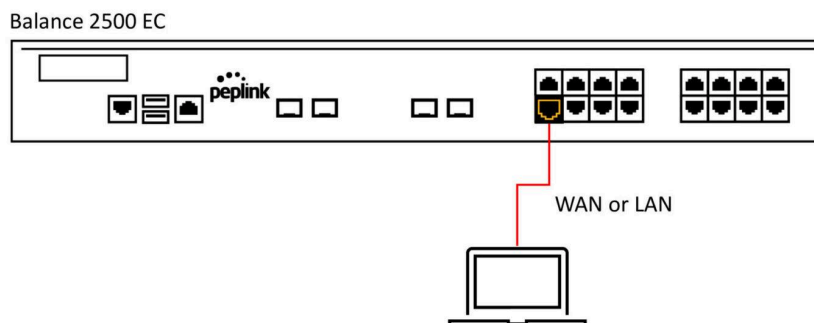

### CLI (System > Admin Security):

| peplink                                                                                                                                                                                                                                                                                                                                                                                                                                  |              | Dashboard                                                                                                 | SF Connect             | Network | Advanced                                          | AP | System | Status | Apply Changes |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|-----------------------------------------------------------------------------------------------------------|------------------------|---------|---------------------------------------------------|----|--------|--------|---------------|
| <b>System</b> <ul style="list-style-type: none"> <li>Admin Security</li> <li>Firmware</li> <li>Time</li> <li>Schedule</li> <li>Email Notification</li> <li>Event Log</li> <li>SNMP</li> <li>SMS Control</li> <li>InControl</li> <li>Configuration</li> <li>Feature Add-ons</li> <li>Reboot</li> </ul> <b>Tools</b> <ul style="list-style-type: none"> <li>Ping</li> <li>Traceroute</li> <li>Wake-on-LAN</li> <li>WAN Analysis</li> </ul> |              |                                                                                                           |                        |         |                                                   |    |        |        |               |
| <b>Admin Settings</b>                                                                                                                                                                                                                                                                                                                                                                                                                    |              |                                                                                                           |                        |         |                                                   |    |        |        |               |
| Device Name                                                                                                                                                                                                                                                                                                                                                                                                                              | Balance-C5E4 |                                                                                                           | hostname: balance-c5e4 |         | This configuration is being managed by InControl. |    |        |        |               |
| Admin User Name                                                                                                                                                                                                                                                                                                                                                                                                                          | admin        |                                                                                                           |                        |         |                                                   |    |        |        |               |
| Admin Password                                                                                                                                                                                                                                                                                                                                                                                                                           | .....        |                                                                                                           |                        |         |                                                   |    |        |        |               |
| Confirm Admin Password                                                                                                                                                                                                                                                                                                                                                                                                                   | .....        |                                                                                                           |                        |         |                                                   |    |        |        |               |
| Read-only User Name                                                                                                                                                                                                                                                                                                                                                                                                                      | user         |                                                                                                           |                        |         |                                                   |    |        |        |               |
| Read-only Password                                                                                                                                                                                                                                                                                                                                                                                                                       |              |                                                                                                           |                        |         |                                                   |    |        |        |               |
| Confirm Read-only Password                                                                                                                                                                                                                                                                                                                                                                                                               |              |                                                                                                           |                        |         |                                                   |    |        |        |               |
| Web Session Timeout                                                                                                                                                                                                                                                                                                                                                                                                                      | ?            | 4                                                                                                         | Hours                  | 0       | Minutes                                           |    |        |        |               |
| Authentication Method                                                                                                                                                                                                                                                                                                                                                                                                                    | ?            | <input checked="" type="radio"/> Local Account <input type="radio"/> RADIUS <input type="radio"/> TACACS+ |                        |         |                                                   |    |        |        |               |
| CLI SSH & Console                                                                                                                                                                                                                                                                                                                                                                                                                        | ?            | <input checked="" type="checkbox"/> Enable                                                                |                        |         |                                                   |    |        |        |               |
| CLI SSH Access                                                                                                                                                                                                                                                                                                                                                                                                                           |              | LAN / WAN                                                                                                 |                        |         |                                                   |    |        |        |               |
| CLI SSH Port                                                                                                                                                                                                                                                                                                                                                                                                                             |              | 8822                                                                                                      |                        |         |                                                   |    |        |        |               |
| CLI SSH Access Public Key                                                                                                                                                                                                                                                                                                                                                                                                                |              | Admin User: (Disabled) <a href="#">configure</a><br>Read-only User: (Disabled) <a href="#">configure</a>  |                        |         |                                                   |    |        |        |               |
| Security                                                                                                                                                                                                                                                                                                                                                                                                                                 |              | HTTPS                                                                                                     |                        |         |                                                   |    |        |        |               |
| Web Admin Access                                                                                                                                                                                                                                                                                                                                                                                                                         |              | LAN / WAN                                                                                                 |                        |         |                                                   |    |        |        |               |
| Web Admin Port                                                                                                                                                                                                                                                                                                                                                                                                                           |              | 443                                                                                                       |                        |         |                                                   |    |        |        |               |

### CLI:

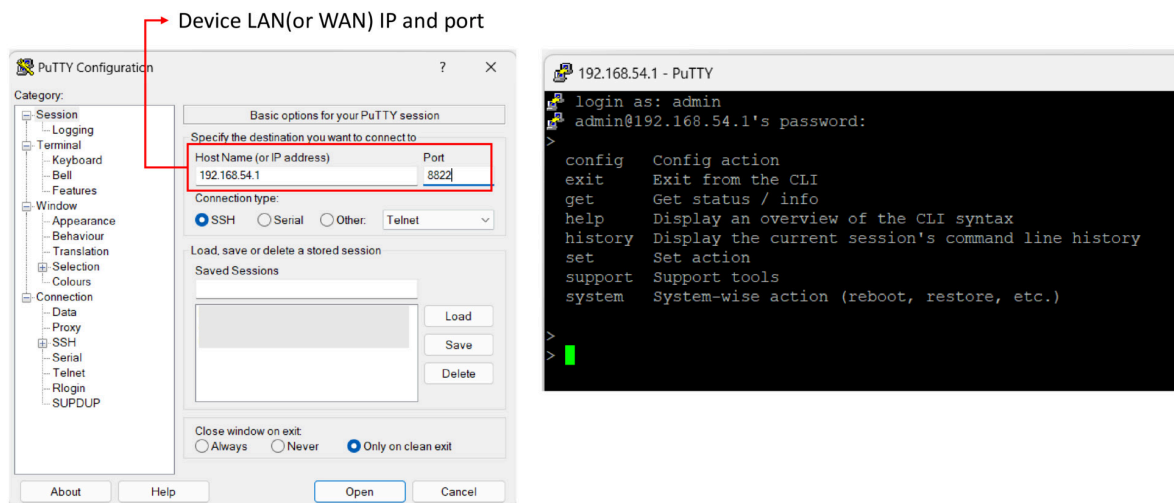


Visit [this link](#) for full command set.

## 29.6 Storage Manager

\*This page is only available on device with Edge computing features. Kindly refer the link below to further check if the device is able to support edge computing.

<https://www.peplink.com/compare/routers/>

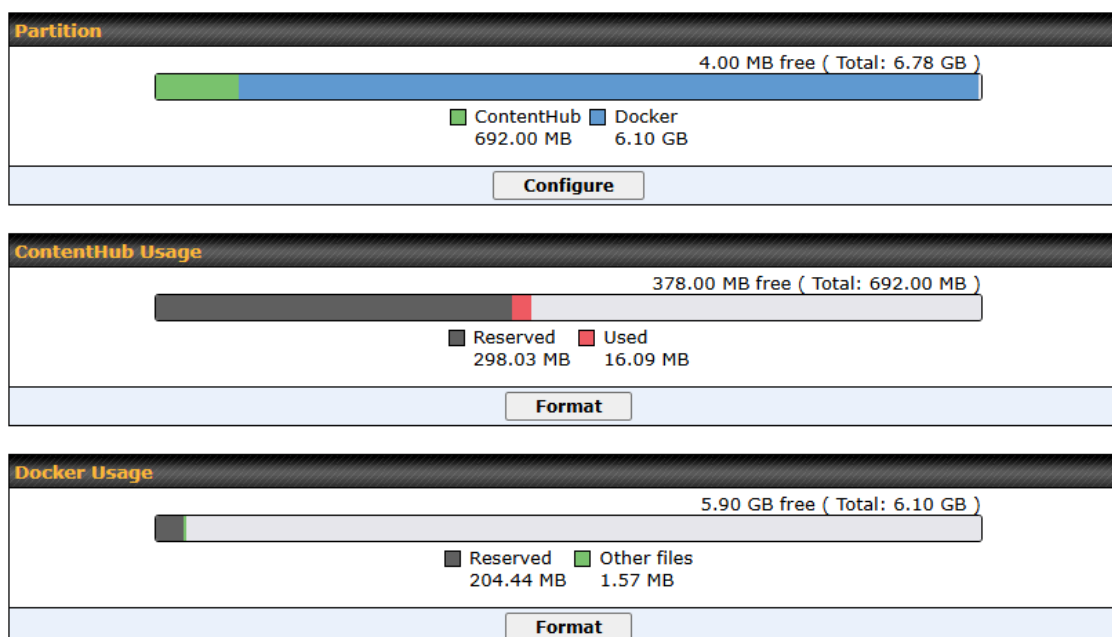

This page allow user to configure or format partition of internal storage for MediaFast / ContentHub / Docker Usage.

## 29.7 External Storage

(included in B One user manual -

<https://manual.peplink.com/peplink-b-one-series-user-manual/#4245>)

\*This page is only available on device with “External Storage via USB Port”. Kindly refer the link below to further check if the device is able to support External Storage and enable edge computing (Docker).

<https://www.peplink.com/compare/routers/>

| External Storage                                                                                   | Status                                                                                   |                          |
|----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|--------------------------|
| SN: 4C530000031115109285<br>Model: SanDisk Ultra USB 3.0<br>Size: 114.56 GB<br>Path: /mnt/ext/sda1 |  In use | <button>Unmount</button> |
| Thu Oct 05 2023 16:08:36 GMT+0800 (Malaysia Time)                                                  |                                                                                          |                          |

This page allow user to manage their USB storage that connected to the device.

## 29.8 Package Manager

\*This page is only available on device with Edge computing features. Kindly refer the link below to further check if the device is able to support edge computing.

<https://www.peplink.com/compare/routers/>

(Last Update: Tue May 23 04:02:36 UTC 2017)

| Package List                                                                              |                                                                                       | Update All |
|-------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|------------|
| Node.js<br>Version: 6.9.2 (17178)<br>Size: 8.99 MB<br>Date: Fri Feb 24 07:45:28 UTC 2017  |  |            |
| Python<br>Version: 2.7.12 (17178)<br>Size: 20.29 MB<br>Date: Fri Feb 24 07:45:28 UTC 2017 |  |            |
| Ruby<br>Version: 2.3.3 (17178)<br>Size: 31.44 MB<br>Date: Fri Feb 24 07:45:30 UTC 2017    |  |            |

This page allow users to manage supported framework that is needed for ContentHub. For more information on how to upload content to the Content Hub, kindly refer (MAX - Chapter 18, Balance - Chapter 12 > Edge Computing).

## 30 Status

### 30.1 Device

System information is located at **Status > Device**.

| System Information              |                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------|
| Device Name                     |                                                                                 |
| Model                           | Pepwave MAX HD4 MBX                                                             |
| Product Code                    | MAX-HD4-MBX-LTEA-K                                                              |
| Hardware Revision               | 2                                                                               |
| Serial Number                   | 2936                                                                            |
| Firmware                        | 8.5.3 build 6126                                                                |
| SpeedFusion VPN Version         | 9.2.4                                                                           |
| Modem Support Version           | 1026 ( <a href="#">Modem Support List</a> )                                     |
| InControl Managed Configuration | AP, LAN                                                                         |
| Host Name                       | mbx                                                                             |
| Care Plan                       | PrimeCare(Venus) (Expiry date: Jan 01, 2026, GMT+8) ( <a href="#">Refresh</a> ) |
| Uptime                          | 5 minutes                                                                       |
| System Time                     | Wed, Sep 3, 2025, 3:21:32 PM GMT+8                                              |
| Diagnostic Report               | <a href="#">Download</a>                                                        |
| Remote Assistance               | Connection will expire after 2025-09-05 07:00                                   |

| MAC Address          |  |
|----------------------|--|
| LAN                  |  |
| WAN 1                |  |
| WAN 2                |  |
| WAN 3                |  |
| SpeedFusion NAT Mode |  |

| System Information  |                                                                                                           |
|---------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Device Name</b>  | This is the name specified in the <b>Device Name</b> field located at <b>System &gt; Admin Security</b> . |
| <b>Model</b>        | This shows the model name and number of this device.                                                      |
| <b>Product Code</b> | If your model uses a product code, it will appear here.                                                   |



|                                        |                                                                                                                                                                                                                                               |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Hardware Revision</b>               | This shows the hardware version of this device.                                                                                                                                                                                               |
| <b>Serial Number</b>                   | This shows the serial number of this device.                                                                                                                                                                                                  |
| <b>Firmware</b>                        | This shows the firmware version this device is currently running.                                                                                                                                                                             |
| <b>Care Plan</b>                       | Display care plan status and expiry date.<br><br>Note: Refresh button to manually refresh the PrimeCare license. User who has disabled InControl management may click [Refresh] option to check the PrimeCare license status after a renewal. |
| <b>SpeedFusion VPN Version</b>         | This shows the current SpeedFusion VPN version.                                                                                                                                                                                               |
| <b>InControl Managed Configuration</b> | InControl Managed Configurations (firmware, VLAN, Captive Portal, etcetera)                                                                                                                                                                   |
| <b>Host Name</b>                       | The host name assigned to the Peplink router appears here.                                                                                                                                                                                    |
| <b>Uptime</b>                          | This shows the length of time since the device has been rebooted.                                                                                                                                                                             |
| <b>System Time</b>                     | This shows the current system time.                                                                                                                                                                                                           |
| <b>OpenVPN Client Profile</b>          | Link to download OpenVpn Client profile when this is enabled in Remote User Access                                                                                                                                                            |
| <b>Diagnostic Report</b>               | The <b>Download</b> link is for exporting a diagnostic report file required for system investigation.                                                                                                                                         |
| <b>Remote Assistance</b>               | This option is to <b>Turn on</b> remote assistance with the time duration.                                                                                                                                                                    |

The second table shows the MAC address of each LAN/WAN interface connected. To view your device's End User License Agreement (EULA), click  [Legal](#).  
status

## 30.2 GPS Data

|                    |   |                      |          |
|--------------------|---|----------------------|----------|
| GPX File           | ? | 2019-03-22 (Today) ▾ | Download |
| Diagnostic Report  |   | 2019-03-22 (Today)   |          |
| Remote Assistance  |   | 2019-03-21           |          |
|                    |   | 2019-03-20           |          |
|                    |   | 2019-03-19           |          |
| <b>MAC Address</b> |   | 2019-03-18           |          |
|                    |   | 2019-03-17           |          |
| LAN                |   | 2019-03-16           |          |

GPS enabled models automatically store up to seven days of GPS location data in GPS eXchange format (GPX). To review this data using third-party applications, click **Status > Device** and then download your GPX file.

The Peplink GPS enabled devices export real-time location data in NMEA format through the LAN IP address at TCP port 60660. It is accessible from the LAN or over a SpeedFusion connection. To access the data via a virtual serial port, install a virtual serial port driver. Visit <http://www.peplink.com/index.php?view=faq&id=294> to download the driver.

## 30.3 Active Sessions

Information on active sessions can be found at **Status > Active Sessions > Overview**.

| Overview Search                                                  |                  |                   |
|------------------------------------------------------------------|------------------|-------------------|
| Session data captured within one minute. <a href="#">Refresh</a> |                  |                   |
| Service                                                          | Inbound Sessions | Outbound Sessions |
| <a href="#">AIM/ICQ</a>                                          | 0                | 1                 |
| <a href="#">Bittorrent</a>                                       | 0                | 32                |
| <a href="#">DNS</a>                                              | 0                | 51                |
| <a href="#">Flash</a>                                            | 0                | 1                 |
| <a href="#">HTTPS</a>                                            | 0                | 76                |
| <a href="#">Jabber</a>                                           | 0                | 5                 |
| <a href="#">MSN</a>                                              | 0                | 11                |
| <a href="#">NTP</a>                                              | 0                | 4                 |
| <a href="#">QQ</a>                                               | 0                | 1                 |
| <a href="#">Remote Desktop</a>                                   | 0                | 3                 |
| <a href="#">SSH</a>                                              | 0                | 12                |
| <a href="#">SSL</a>                                              | 0                | 64                |
| <a href="#">XMPP</a>                                             | 0                | 4                 |
| <a href="#">Yahoo</a>                                            | 0                | 1                 |
| Interface                                                        | Inbound Sessions | Outbound Sessions |
| <a href="#">WAN 1</a>                                            | 0                | 176               |
| <a href="#">WAN 2</a>                                            | 0                | 32                |
| <a href="#">Wi-Fi WAN</a>                                        | 0                | 51                |
| <a href="#">Cellular 1</a>                                       | 0                | 64                |
| <a href="#">Cellular 2</a>                                       | 0                | 0                 |
| <a href="#">USB</a>                                              | 0                | 0                 |
| Top Clients                                                      |                  |                   |
| Client IP Address                                                | Total Sessions   |                   |
| 10.9.66.66                                                       | 1069             |                   |
| 10.9.98.144                                                      | 147              |                   |
| 10.9.2.18                                                        | 63               |                   |
| 10.9.66.14                                                       | 56               |                   |
| 10.9.2.26                                                        | 33               |                   |

This screen displays the number of sessions initiated by each application. Click on each service listing for additional information. This screen also indicates the number of sessions initiated by each WAN port. In addition, you can see which clients are initiating the most sessions.

You can also perform a filtered search for specific sessions. You can filter by subnet, port, protocol, and interface. To perform a search, navigate to **Status > Active Sessions > Search**.

Overview

Search

Session data captured within one minute. [Refresh](#)

|                    |                                                                                                                                                                                                                                          |                         |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| IP / Subnet        | Source or Destination ▾                                                                                                                                                                                                                  | 255.255.255.255 (/32) ▾ |
| Port               | Source or Destination ▾                                                                                                                                                                                                                  |                         |
| Protocol / Service | TCP ▾                                                                                                                                                                                                                                    |                         |
| Interface          | <input type="checkbox"/> WAN 1 <input type="checkbox"/> WAN 2 <input type="checkbox"/> Wi-Fi WAN<br><input type="checkbox"/> Cellular 1 <input type="checkbox"/> Cellular 2 <input type="checkbox"/> USB<br><input type="checkbox"/> VPN |                         |
| Search             |                                                                                                                                                                                                                                          |                         |

**Outbound**

| Protocol    | Source IP | Destination IP | Service | Interface | Idle Time |
|-------------|-----------|----------------|---------|-----------|-----------|
| No sessions |           |                |         |           |           |

Total searched results: 0

**Inbound**

| Protocol    | Source IP | Destination IP | Service | Interface | Idle Time |
|-------------|-----------|----------------|---------|-----------|-----------|
| No sessions |           |                |         |           |           |

Total searched results: 0

**Transit**

| Protocol    | Source IP | Destination IP | Service | Interface | Idle Time |
|-------------|-----------|----------------|---------|-----------|-----------|
| No sessions |           |                |         |           |           |

Total searched results: 0

This **Active Sessions** section displays the active inbound/outbound sessions of each WAN connection on the Peplink router. A filter is available to sort active session information. Enter a keyword in the field or check one of the WAN connection boxes for filtering.

## 30.4 Client List

The client list table is located at **Status > Client List**. It lists DHCP and online client IP addresses, names (retrieved from the DHCP reservation table or defined by users), current download and upload rate, and MAC address.

Clients can be imported into the DHCP reservation table by clicking the button on the right. You can update the record after import by going to **Network > LAN**.

| Filter        |      | <input type="checkbox"/> Online Clients Only<br><input type="checkbox"/> DHCP Clients Only |                 |               |             |                     |              |  |
|---------------|------|--------------------------------------------------------------------------------------------|-----------------|---------------|-------------|---------------------|--------------|--|
| Client List   |      |                                                                                            |                 |               |             |                     |              |  |
| IP Address ▲  | Type | Name                                                                                       | Download (kbps) | Upload (kbps) | MAC Address | Network Name (SSID) | Signal (dBm) |  |
| 192.168.50.10 |      | LAPTOP-████████                                                                            | 32              | 85            | ██████████  | PEPWAVE_████        | -57          |  |
| 192.168.50.12 |      | max-hd2-████                                                                               | 0               | 3             | ██████████  |                     |              |  |

Scale: ☒ kbps ☐ Mbps

If the PPTP server (see **Section 19.2**), SpeedFusion™ (see **Section 12.1**), or AP controller (see **Section 20**) is enabled, you may see the corresponding connection name listed in the **Name** field.

In the client list table, there is a “Ban Client” feature which is used to disconnect the Wi-Fi and Remote User Access clients by clicking the button on the right.


| Filter        |      | <input type="checkbox"/> Online Clients Only<br><input type="checkbox"/> DHCP Clients Only |                 |               |             |                     |              |  |
|---------------|------|--------------------------------------------------------------------------------------------|-----------------|---------------|-------------|---------------------|--------------|--|
| Client List   |      |                                                                                            |                 |               |             |                     |              |  |
| IP Address ▲  | Type | Name                                                                                       | Download (kbps) | Upload (kbps) | MAC Address | Network Name (SSID) | Signal (dBm) |  |
| 192.168.50.10 |      | LAPTOP-████████                                                                            | 279             | 14            | ██████████  | PEPWAVE_████        | -52          |  |
| 192.168.50.12 |      | max-hd2-████                                                                               | 0               | 0             | ██████████  |                     |              |  |

Scale: ☒ kbps ☐ Mbps

There is a blocklist on the same page after you banned the Wi-Fi or Remote User Access clients.

| Filter                                                           |      | <input type="checkbox"/> Online Clients Only<br><input type="checkbox"/> DHCP Clients Only |               |             |                     |              |  |  |
|------------------------------------------------------------------|------|--------------------------------------------------------------------------------------------|---------------|-------------|---------------------|--------------|--|--|
| Access restriction in action, some clients are currently banned. |      |                                                                                            |               |             |                     |              |  |  |
| Client List                                                      |      |                                                                                            |               |             |                     |              |  |  |
| IP Address ▲                                                     | Name | Download (kbps)                                                                            | Upload (kbps) | MAC Address | Network Name (SSID) | Signal (dBm) |  |  |

You may also unblock the Wi-Fi or Remote User Access clients when the client devices need to reconnect the network by clicking  the button on the right.

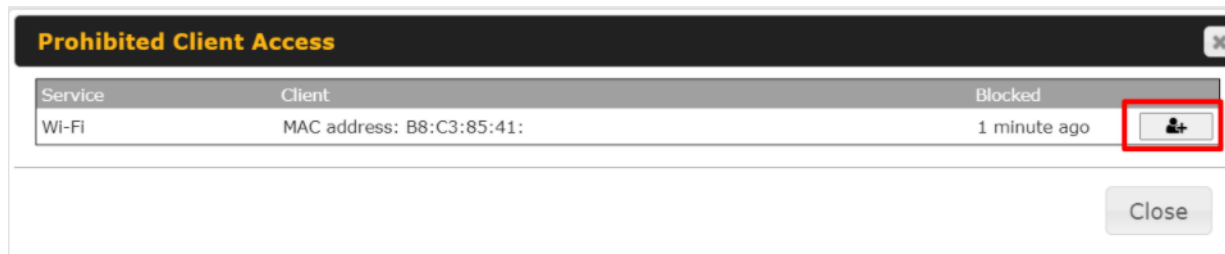

## 30.5 UPnP / NAT-PMP

The table that shows the forwarded ports under UPnP and NAT-PMP protocols is located at **Status > UPnP/NAT-PMP**. This section appears only if you have enabled UPnP / NAT-PMP as mentioned in **Section 16.1.1**.

| Forwarded Ports |          |                  |         |          |                 |                                                                                       |
|-----------------|----------|------------------|---------|----------|-----------------|---------------------------------------------------------------------------------------|
| External        | Internal | Internal Address | Type    | Protocol | Description     |                                                                                       |
| 47453           | 3392     | 192.168.1.100    | UPnP    | UDP      | Application 031 |  |
| 35892           | 11265    | 192.168.1.50     | NAT-PMP | TCP      | NAT-PMP 58      |  |
| 4500            | 3560     | 192.168.1.20     | UPnP    | TCP      | Application 013 |  |
| 5921            | 236      | 192.168.1.30     | UPnP    | TCP      | Application 047 |  |
| 22409           | 8943     | 192.168.1.70     | NAT-PMP | UDP      | NAT-PMP 97      |  |
| 2388            | 27549    | 192.168.1.40     | UPnP    | TCP      | Application 004 |  |
|                 |          |                  |         |          |                 |  |

Click  to delete a single UPnP / NAT-PMP record in its corresponding row. To delete all records, click **Delete All** on the right-hand side below the table.

### Important Note

UPnP / NAT-PMP records will be deleted immediately after clicking the button  or **Delete All**, without the need to click **Save** or **Confirm**.

## 30.6 OSPF & RIPv2

The table shows status of OSPF and RIPv2.



Dashboard

Setup Wizard

Network

AP

System

Status

Apply Changes

Status

- Device
- Active Sessions
- Client List
- OSPF & RIPv2
- BGP

OSPF & RIPv2

| Area                                                           | Remote Networks                                                                         |
|----------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| 0.0.0.0 <ul style="list-style-type: none"><li>PepVPN</li></ul> | 10.0.2.0/24 10.0.3.0/24 192.168.63.0/24 10.0.100.0/24 192.168.100.0/24 192.168.162.0/24 |

## 30.7 BGP

The table shows status of BGP

peplink

Dashboard

Setup Wizard

Network

AP

System

Status

Apply Changes

Status

■ Device

■ Active Sessions

■ Client List

■ OSPF & RIPv2

■ BGP

BGP

Profile

Neighbor

No information


## 30.8 SpeedFusion VPN

Current SpeedFusion VPN status information is located at **Status > SpeedFusion VPN**.


Details about SpeedFusion VPN connection peers appears as below:

| SpeedFusion VPN - Remote Peer |                           |                                        | Show all profiles |
|-------------------------------|---------------------------|----------------------------------------|-------------------|
| Search                        | <input type="text"/>      |                                        |                   |
| Remote Peer                   | Profile                   | Information                            |                   |
| FSH-B987 (FusionHub_SG)       | FusionHub_SG (1)          | Client (192.168.100.0/24) connected to | >                 |
| FSH-B987 (FusionHub_SG)       | FusionHub_SG (2 - Tunn... |                                        | >                 |
| SFC-SIN-H018 (SFC-SIN-H018)   | SFH-SHARE-SIN             |                                        | >                 |

Click on the corresponding peer name to explore the WAN connection(s) status and subnet information of each VPN peer.

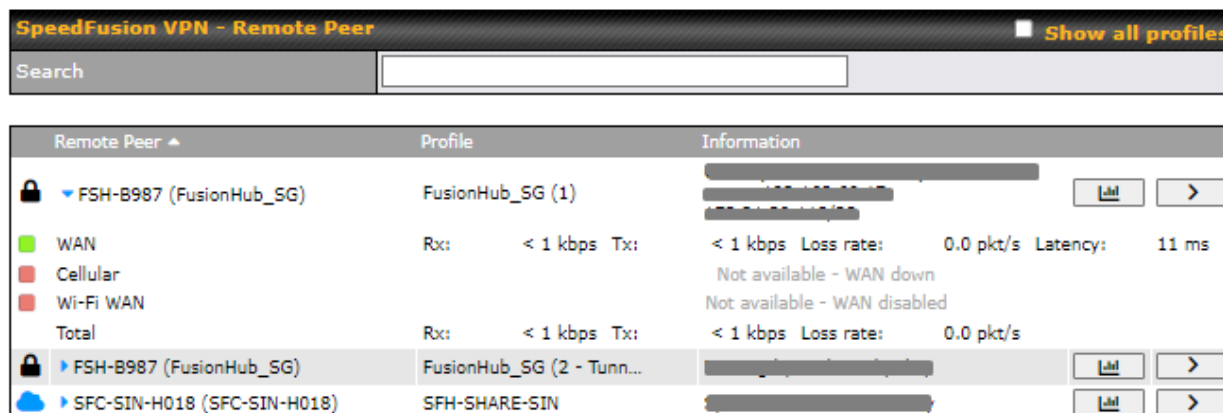

Click the button for a SpeedFusion chart displaying real-time throughput, latency, and drop-rate information for each WAN connection.

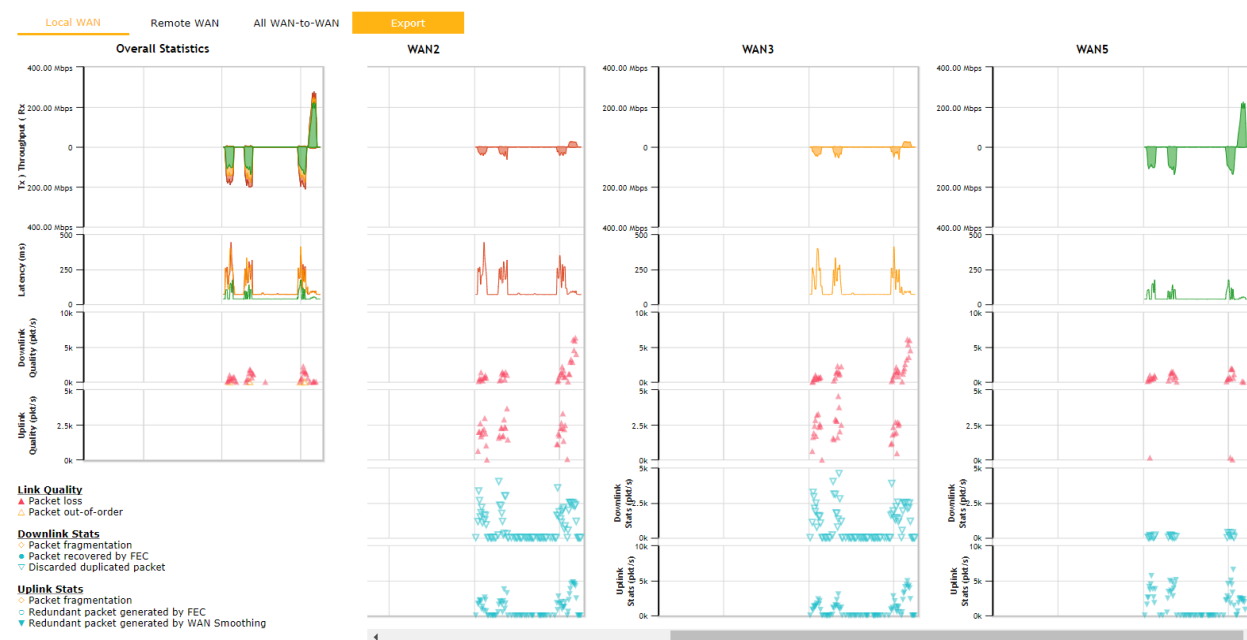

When pressing the button, the following menu will appear:



SpeedFusion VPN Details

Connection Information
More information

|               |                  |  |  |  |  |
|---------------|------------------|--|--|--|--|
| Profile       | FusionHub_SG (1) |  |  |  |  |
| Remote ID     | FusionHub_SG     |  |  |  |  |
| Device Name   |                  |  |  |  |  |
| Serial Number |                  |  |  |  |  |

WAN Statistics

|                                         |                                                                                     |          |     |          |                                     |
|-----------------------------------------|-------------------------------------------------------------------------------------|----------|-----|----------|-------------------------------------|
| Remote Connections                      | <input type="checkbox"/> Show remote connections                                    |          |     |          |                                     |
| WAN Label                               | <input checked="" type="radio"/> WAN Name <input type="radio"/> IP Address and Port |          |     |          |                                     |
| <input checked="" type="checkbox"/> WAN | Rx:                                                                                 | < 1 kbps | Tx: | < 1 kbps | Loss rate: 0.0 pkt/s Latency: 11 ms |
| <input type="checkbox"/> Cellular       | Not available - WAN down                                                            |          |     |          |                                     |
| <input type="checkbox"/> Wi-Fi WAN      | Not available - WAN disabled                                                        |          |     |          |                                     |
| Total                                   | Rx:                                                                                 | < 1 kbps | Tx: | < 1 kbps | Loss rate: 0.0 pkt/s                |

SpeedFusion VPN Test Configuration

|           |                                                                        |  |       |
|-----------|------------------------------------------------------------------------|--|-------|
| Type      | <input checked="" type="radio"/> TCP <input type="radio"/> UDP         |  | Start |
| Streams   | 4                                                                      |  |       |
| Direction | <input checked="" type="radio"/> Upload <input type="radio"/> Download |  |       |
| Duration  | 20 seconds (5 - 600)                                                   |  |       |

SpeedFusion VPN Test Results

No information

The **connection information** shows the details of the selected SpeedFusion VPN profile, consisting of the Profile name, **Router ID**, **Router Name** and **Serial Number** of the remote router

Advanced features for the SpeedFusion VPN profile will also be shown when the **More Information** checkbox is selected.

The **WAN statistics** show information about the local and remote WAN connections (when **show Remote connections**) is selected.

The available details are **WAN Name**, **IP address** and **port** used for the Speedfusion connection. **Rx and Tx rates**, **Loss rate** and **Latency**.

Connections can be temporarily disabled by sliding the switch button next to a WAN connection to the left.

The wan-to-wan connection disabled by the switch is temporary and will be re-enabled after 15 minutes without any action.

This can be used when testing the SpeedFusion VPN's speed between two locations to see if there is interference or network congestion between certain WAN connections.

| WAN Statistics                                                          |                                                                                     |     |          |
|-------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----|----------|
| Remote Connections                                                      | <input checked="" type="checkbox"/> Show remote connections                         |     |          |
| WAN Label                                                               | <input checked="" type="radio"/> WAN Name <input type="radio"/> IP Address and Port |     |          |
| <div> <span>BT</span> <span>WAN</span> <span>Virgin Media</span> </div> |                                                                                     |     |          |
| Rx:                                                                     | < 1 kbps                                                                            | Tx: | < 1 kbps |
| Loss rate:                                                              | 0.0 pkt/s                                                                           |     |          |
| Latency:                                                                | 17 ms                                                                               |     |          |
| Not available - WAN disabled                                            |                                                                                     |     |          |

The SpeedFusion VPN test configuration allows us to configure and perform thorough tests. This is usually done after the initial installation of the routers and in case there are problems with aggregation.

| SpeedFusion VPN Test Configuration |                                                                        |                  |
|------------------------------------|------------------------------------------------------------------------|------------------|
| Type                               | <input checked="" type="radio"/> TCP <input type="radio"/> UDP         | <div>Start</div> |
| Streams                            | 4 ▼                                                                    |                  |
| Direction                          | <input checked="" type="radio"/> Upload <input type="radio"/> Download |                  |
| Duration                           | 20 seconds (5 - 600)                                                   |                  |

Press the Start button to perform throughput test according to the configured options.

If TCP is selected, 4 parallel streams will be generated to get the optimal results by default. This can be customized by selecting a different value of streams.

Using more streams will typically get better results if the latency of the tunnel is high.

| SpeedFusion VPN Test Results |              |             |             |
|------------------------------|--------------|-------------|-------------|
| 1.0s:                        | 16.2527 Mbps | 0 retrans / | 306 KB cwnd |
| 2.0s:                        | 20.4445 Mbps | 0 retrans / | 306 KB cwnd |
| 3.0s:                        | 18.3526 Mbps | 0 retrans / | 306 KB cwnd |
| 4.0s:                        | 17.8258 Mbps | 0 retrans / | 306 KB cwnd |
| 5.0s:                        | 17.3014 Mbps | 0 retrans / | 306 KB cwnd |
| 6.0s:                        | 14.1558 Mbps | 0 retrans / | 306 KB cwnd |
| 7.0s:                        | 18.3500 Mbps | 0 retrans / | 306 KB cwnd |
| 8.0s:                        | 15.7252 Mbps | 0 retrans / | 306 KB cwnd |
| 9.0s:                        | 17.2932 Mbps | 0 retrans / | 306 KB cwnd |
| 10.0s:                       | 20.4591 Mbps | 0 retrans / | 306 KB cwnd |
| 11.0s:                       | 11.5347 Mbps | 0 retrans / | 306 KB cwnd |
| 12.0s:                       | 15.2043 Mbps | 0 retrans / | 306 KB cwnd |
| 13.0s:                       | 12.0584 Mbps | 0 retrans / | 306 KB cwnd |
| 14.0s:                       | 13.1074 Mbps | 0 retrans / | 306 KB cwnd |
| 15.0s:                       | 10.4849 Mbps | 0 retrans / | 306 KB cwnd |
| 16.0s:                       | 12.5838 Mbps | 0 retrans / | 306 KB cwnd |
| 17.0s:                       | 15.2043 Mbps | 0 retrans / | 306 KB cwnd |
| 18.0s:                       | 16.2486 Mbps | 0 retrans / | 306 KB cwnd |
| 19.0s:                       | 18.8789 Mbps | 0 retrans / | 306 KB cwnd |
| 20.0s:                       | 18.3491 Mbps | 0 retrans / | 306 KB cwnd |
| --                           |              |             |             |
| Stream 1:                    | 3.9913 Mbps  | 0 retrans / | 78 KB cwnd  |
| Stream 2:                    | 3.9728 Mbps  | 0 retrans / | 74 KB cwnd  |
| Stream 3:                    | 3.9879 Mbps  | 0 retrans / | 75 KB cwnd  |
| Stream 4:                    | 4.0044 Mbps  | 0 retrans / | 79 KB cwnd  |
|                              |              |             |             |
| Overall:                     | 15.9564 Mbps | 0 retrans / | 306 KB cwnd |
| --                           |              |             |             |
| TEST DONE                    |              |             |             |


Peplink also published a whitepaper about Speedfusion which can be downloaded from the following url:

<http://download.peplink.com/resources/whitepaper-speedfusion-and-best-practices-2019.pdf>

## 30.9 Event Log





Event log information is located at **Status > Event Log**.

### 30.9.1 Device Event Log

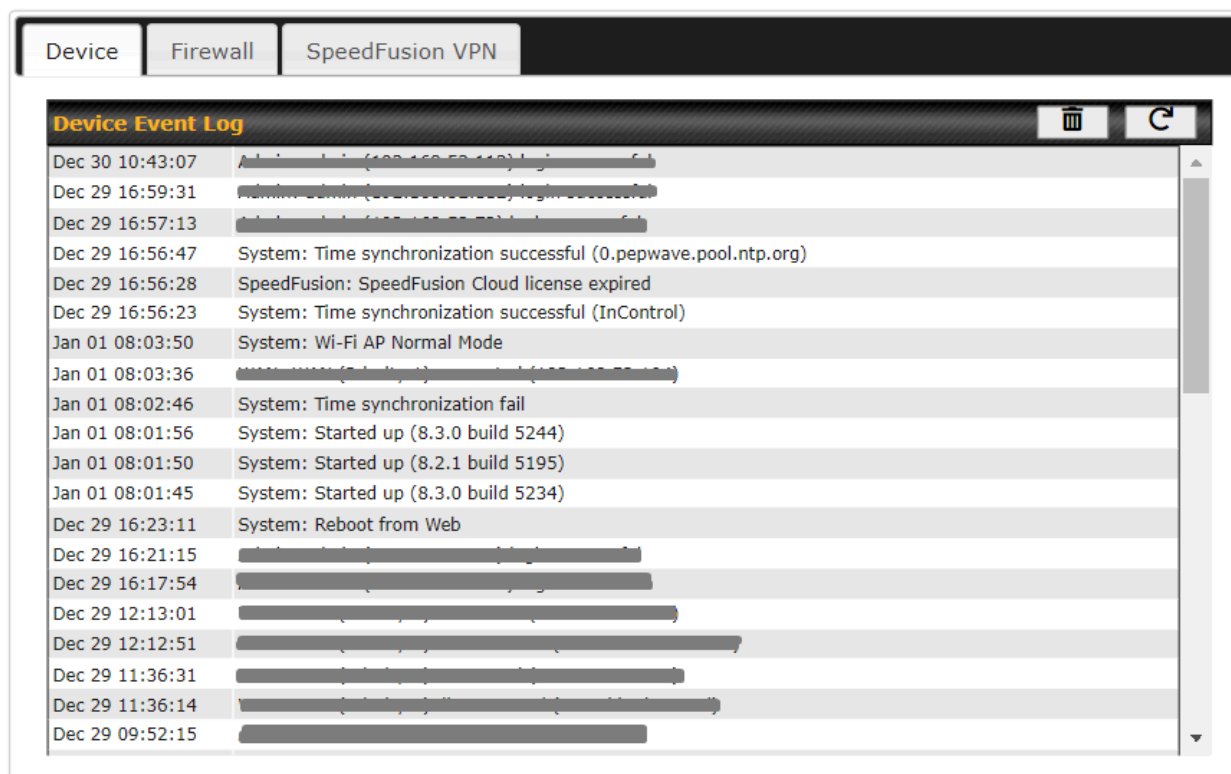





The log section displays a list of events that has taken place on the Peplink router. Click the  to refresh log entries automatically. Click the  button to clear the log.

### 30.9.2 Firewall Event log
    
| Device                                                                                                        | Firewall                                                                                                                                                                                     | SpeedFusion VPN |
|---------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Firewall Event Log</b>  |                                                                                                                                                                                              |                 |
| Nov 15 02:48:07                                                                                               | [82937.373922] Firewall: Denied <br>PROTO=TCP SPT=55887 DPT=32015 WINDOW=5840 RES=0x00 SYN URGP=0 MARK=0x1 |                 |
| Nov 15 02:48:04                                                                                               | [82934.377179] Firewall: Denied <br>PROTO=TCP SPT=55887 DPT=32015 WINDOW=5840 RES=0x00 SYN URGP=0 MARK=0x1 |                 |
| Nov 15 02:47:07                                                                                               | [82877.028738] Firewall: Denied <br>PROTO=TCP SPT=55873 DPT=32015 WINDOW=5840 RES=0x00 SYN URGP=0 MARK=0x1 |                 |
| Nov 15 02:47:04                                                                                               | [82874.033025] Firewall: Denied <br>PROTO=TCP SPT=55873 DPT=32015 WINDOW=5840 RES=0x00 SYN URGP=0 MARK=0x1 |                 |
| Nov 15 02:46:07                                                                                               | [82817.043526] Firewall: Denied <br>PROTO=TCP SPT=55843 DPT=32015 WINDOW=5840 RES=0x00 SYN URGP=0 MARK=0x1 |                 |
| Nov 15 02:46:04                                                                                               | [82814.047141] Firewall: Denied <br>PROTO=TCP SPT=55843 DPT=32015 WINDOW=5840 RES=0x00 SYN URGP=0 MARK=0x1 |                 |


This section displays a list of events that have taken place within a firewall. Click the  button and the log will be refreshed.

### 30.9.3 SpeedFusion VPN Event log
    
| Device                                                                                                                 | Firewall                                                                                                                                                                                  | SpeedFusion VPN |
|------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>SpeedFusion VPN Event Log</b>  |                                                                                                                                                                                           |                 |
| Dec 29 16:57:17                                                                                                        | SpeedFusion: SFC-SIN-H018 (  )                                                                        |                 |
| Dec 29 16:56:43                                                                                                        | SpeedFusion: SPH-SHARE-SIN failed to establish connection                                                                                                                                 |                 |
| Dec 29 16:56:42                                                                                                        | SpeedFusion: <br>  |                 |
| Dec 29 16:56:38                                                                                                        | SpeedFusion: SFC-SIN-H018 (  ) (link failure detected)                                                |                 |
| Jan 01 08:04:00                                                                                                        | SpeedFusion: FusionHub_SG (  )                                                                        |                 |
| Jan 01 08:03:53                                                                                                        | SpeedFusion: <br>suite TLS_AES_256_GCM_SHA384                                                         |                 |
| Jan 01 08:03:51                                                                                                        | SpeedFusion: <br> |                 |
| Jan 01 08:03:48                                                                                                        | SpeedFusion: <br> |                 |
| Jan 01 08:03:43                                                                                                        | SpeedFusion: <br>TLS_AES_256_GCM_SHA384                                                               |                 |

This section displays a list of events that have taken place within a SpeedFusion VPN connection. Click the  button and the log will be refreshed.

## 31 WAN Quality

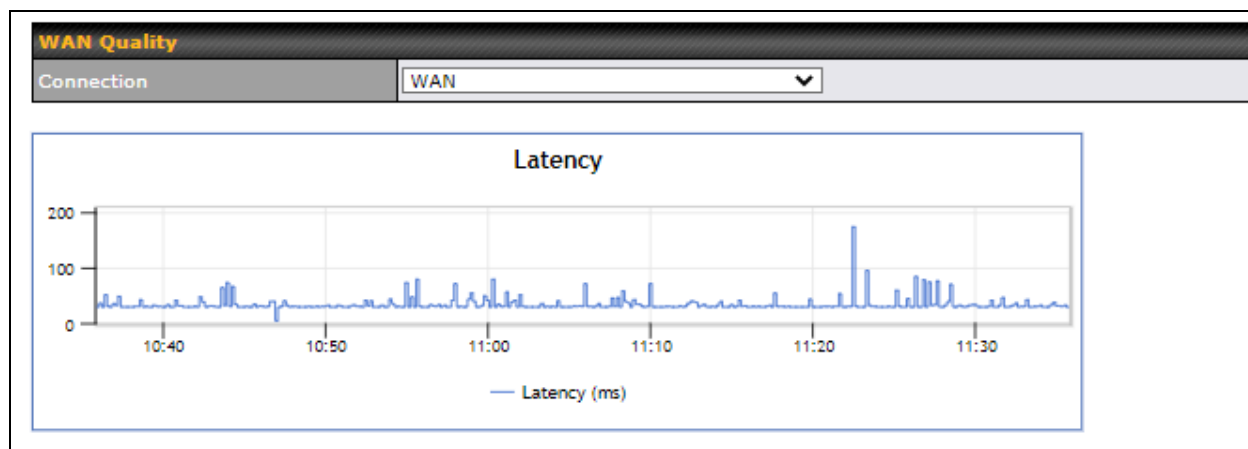

The **Status > WAN Quality** allow to show detailed information about each connected WAN connection.


## 32 Usage Reports

This section shows bandwidth usage statistics and is located at **Status > Usage Reports**

Bandwidth usage at the LAN while the device is switched off (e.g., LAN bypass) is neither recorded nor shown.


### 32.1 Real-Time

The **Data transferred since installation** table indicates how much network traffic has been processed by the device since the first bootup. The **Data transferred since last reboot** table indicates how much network traffic has been processed by the device since the last bootup.

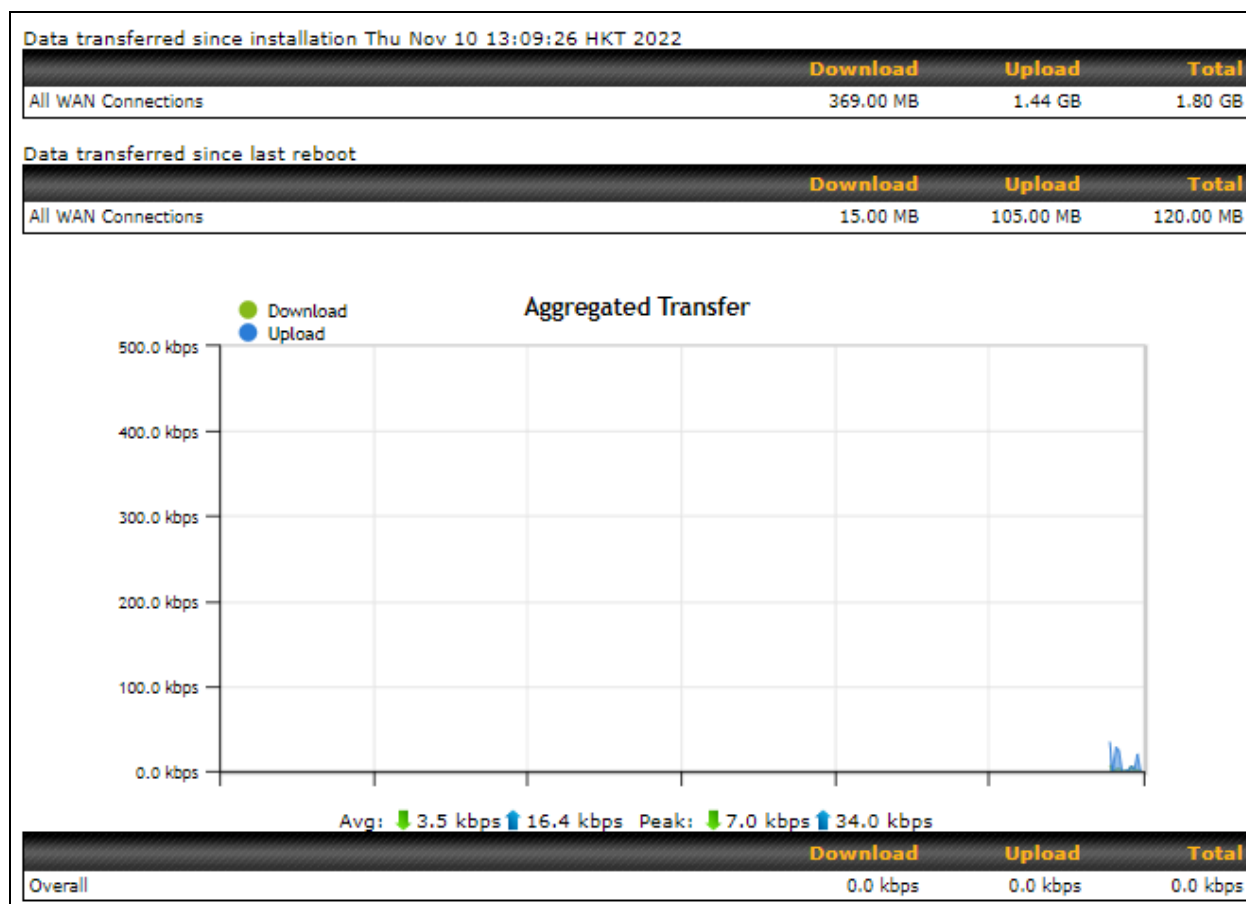

## 32.2 Hourly

This page shows the hourly bandwidth usage for all WAN connections, with the option of viewing each individual connection. Select the desired connection to check from the drop-down menu.

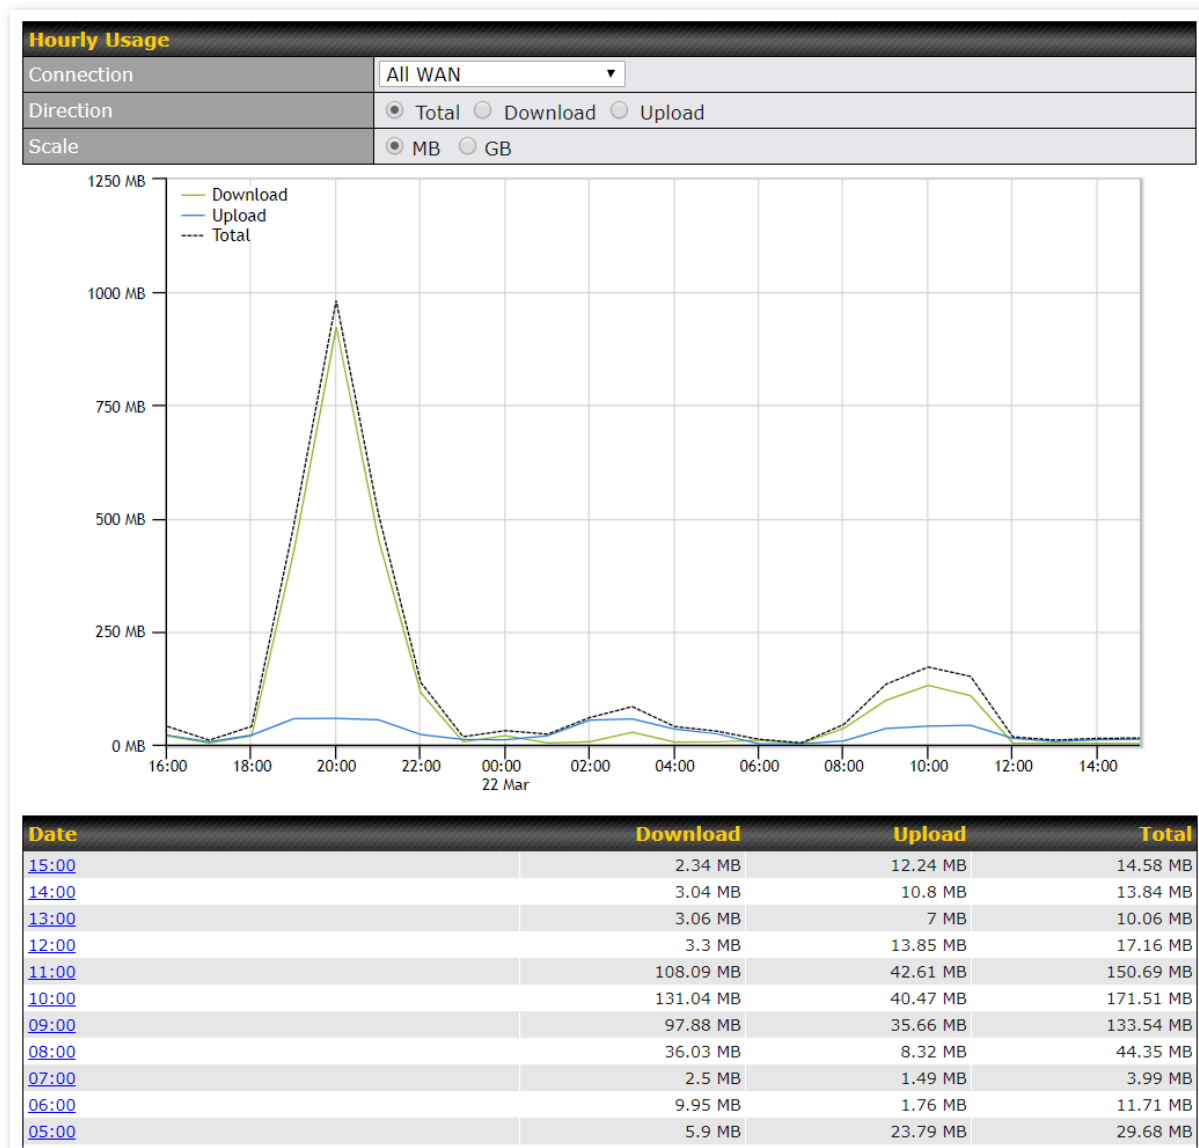

## 32.3 Daily


This page shows the daily bandwidth usage for all WAN connections, with the option of viewing



each individual connection.

Select the connection to check from the drop-down menu. If you have enabled the **Bandwidth Monitoring** feature, the **Current Billing Cycle** table for that WAN connection will be displayed.

Click on a date to view the client bandwidth usage of that specific date. This feature is not available if you have selected to view the bandwidth usage of only a particular WAN connection. The scale of the graph can be set to display megabytes (**MB**) or gigabytes (**GB**).

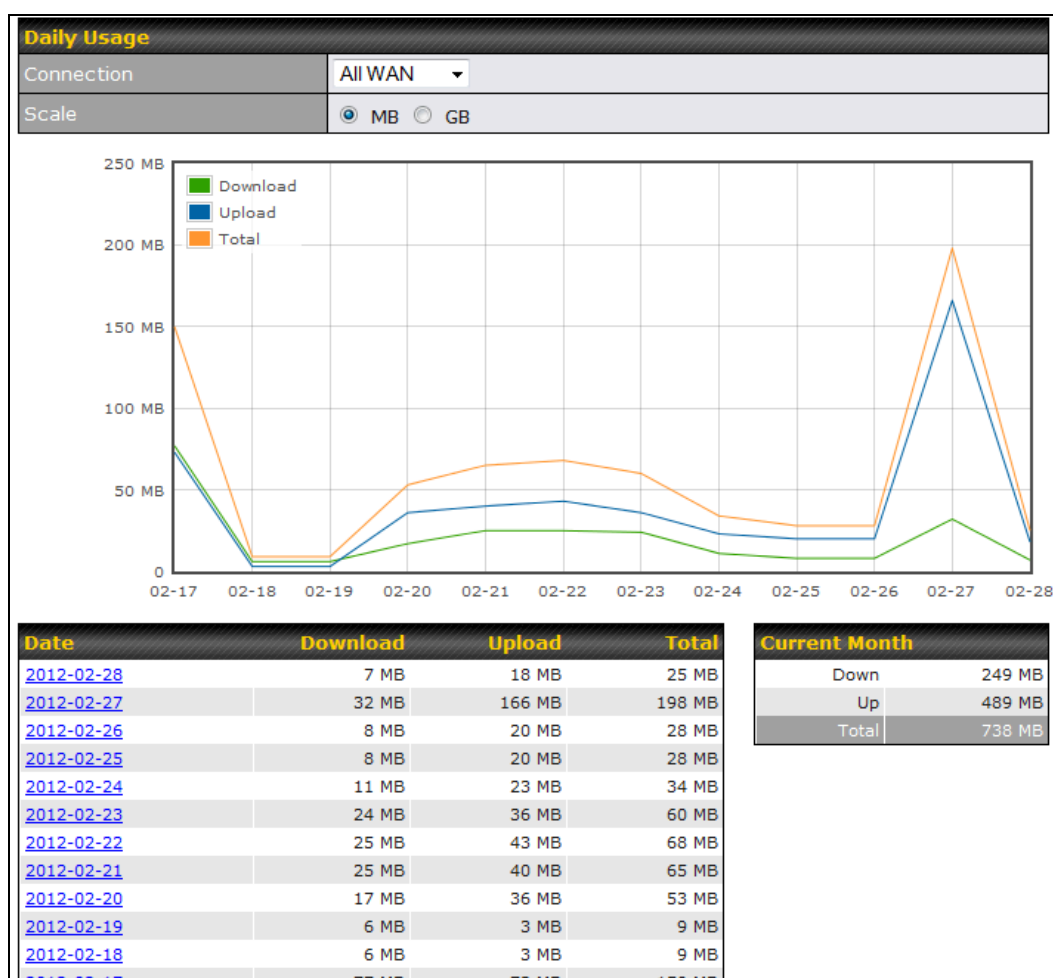


All WAN Daily Bandwidth Usage

## 32.4 Monthly


This page shows the monthly bandwidth usage for each WAN connection. If you have enabled the **Bandwidth Monitoring** feature, you can check the usage of each particular connection and

view the information by **Billing Cycle** or by **Calendar Month**.

Click the first two rows to view the client bandwidth usage in the last two months. This feature is not available if you have chosen to view the bandwidth of an individual WAN connection. The scale of the graph can be set to display megabytes (**MB**) or gigabytes (**GB**).

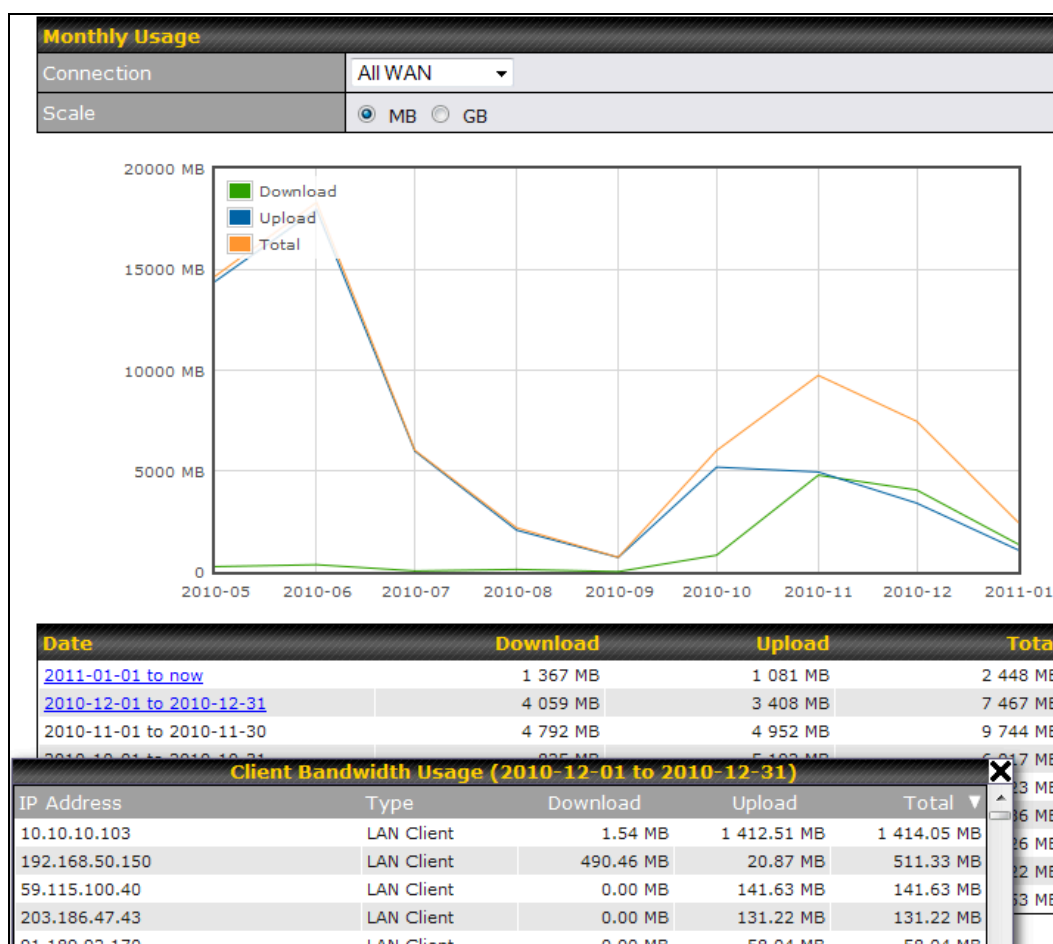

All WAN Monthly Bandwidth Usage

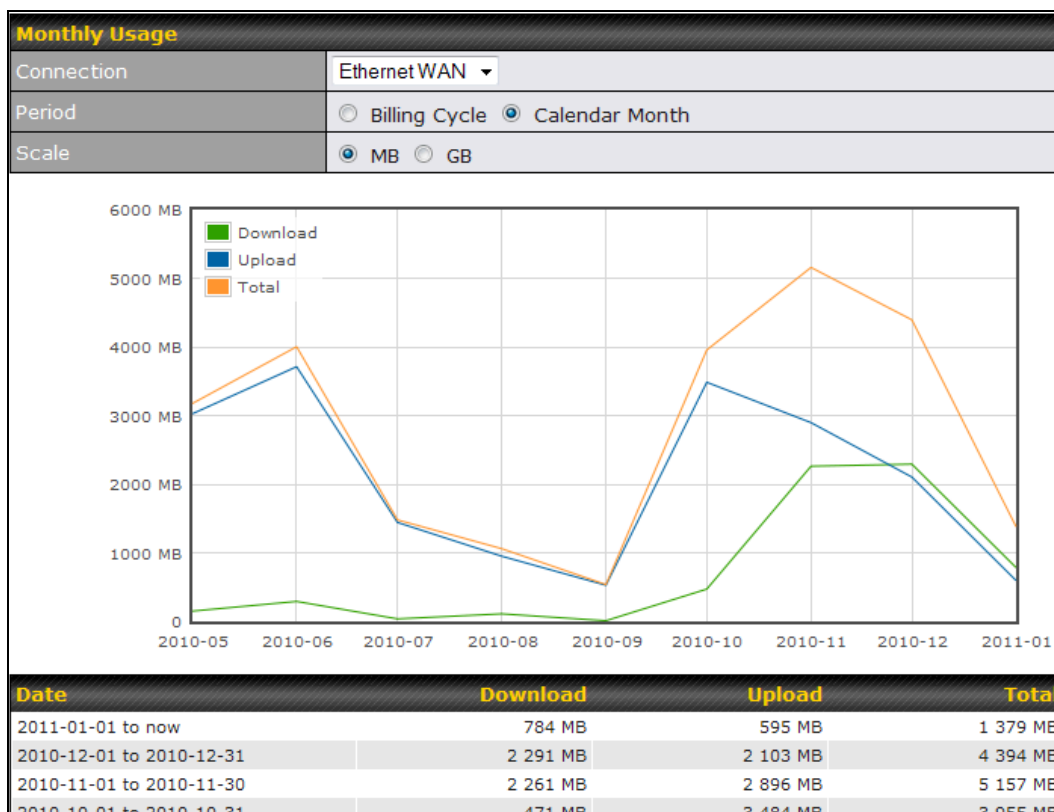

Ethernet WAN Monthly Bandwidth Usage

**Tip**

By default, the scale of data size is in **MB**. 1GB equals 1024MB.

## Appendix A: Restoration of Factory Defaults

To restore the factory default settings on a Peplink router, follow the steps below:


1. Locate the reset button on the front or back panel of the Peplink router.
2. With a paperclip, press and keep the reset button pressed.

Hold for approximately 10 seconds for factory reset (Note: The LED status light shows in RED, until the status light off and release the button)

After the Peplink router finishes rebooting, the factory default settings will be restored.

### Important Note

All previous configurations and bandwidth usage data will be lost after restoring factory default settings. Regular backup of configuration settings is strongly recommended.

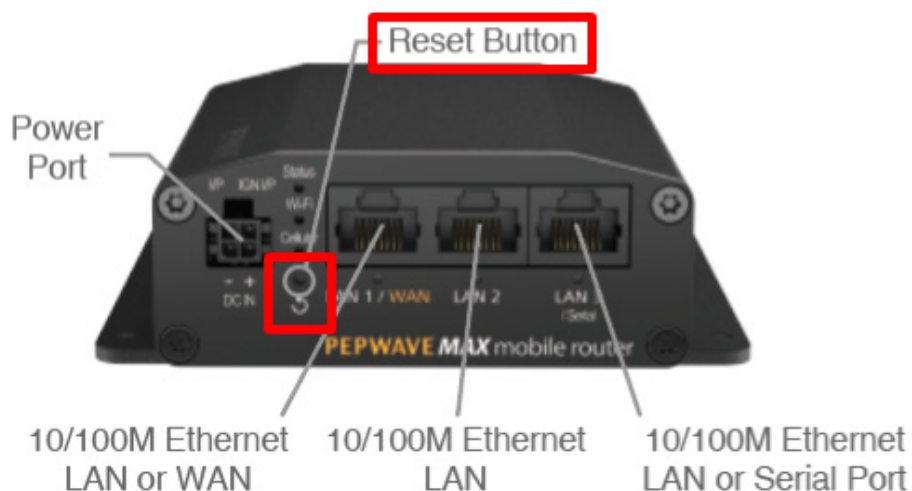

## Appendix B: Overview of ports used by Peplink SD-WAN routers and other Peplink services

| Default Port Number           | Usage                                         | Service                            | Inbound/Outbound    | Default Status |
|-------------------------------|-----------------------------------------------|------------------------------------|---------------------|----------------|
| UDP 5246                      | Data flow                                     | InControl                          | Outbound            | Enabled        |
| TCP 443                       | HTTPS service                                 | InControl                          | Outbound            | Enabled        |
| TCP 5246                      | Optional, used when TCP 443 is not responding | InControl                          | Outbound            | Enabled        |
| TCP 5246                      | Remote Web Admin                              | InControl Virtual Appliance        | Outbound            | Enabled        |
| TCP 4500                      | VPN Data (TCP Mode)                           | SpeedFusion VPN / SpeedFusion      | Inbound / Outbound* | Disabled       |
| TCP 32015                     | VPN handshake                                 | SpeedFusion VPN / SpeedFusion      | Inbound / Outbound* | Disabled       |
| UDP 4500                      | VPN Data                                      | SpeedFusion VPN / SpeedFusion      | Inbound / Outbound* | Disabled       |
| UDP 32015 <sup>o</sup>        | VPN Data (alternative)                        | SpeedFusion VPN / SpeedFusion      | Inbound / Outbound* | Disabled       |
| TCP/UDP 4500+N-1 <sup>^</sup> | VPN Sub-Tunnels Data                          | SpeedFusion VPN / SpeedFusion      | Inbound / Outbound* | Disabled       |
| UDP 32015+N-1 <sup>^</sup>    | VPN Sub-Tunnels Data (alternative)            | SpeedFusion VPN / SpeedFusion      | Inbound / Outbound* | Disabled       |
| UDP 4500                      | VPN Data                                      | IPsec                              | Inbound / Outbound* | Disabled       |
| UDP 500                       | VPN initiation                                | IPsec                              | Inbound / Outbound* | Disabled       |
| UDP 500                       | L2TP                                          | Remote User Access                 | Inbound             | Disabled       |
| UDP 1701                      | L2TP                                          | Remote User Access                 | Inbound             | Disabled       |
| UDP 4500                      | L2TP                                          | Remote User Access                 | Inbound             | Disabled       |
| UDP 1194                      | OpenVPN                                       | Remote User Access                 | Inbound             | Disabled       |
| IP 47                         | PPTP (GRE)                                    | Remote User Access                 | Inbound             | Disabled       |
| TCP 2222                      | Remote Assistance Direct connection           | Peplink Troubleshooting Assistance | Outbound            | Enabled        |
| TCP 80                        | HTTP traffic                                  | Web Admin                          | Inbound             | Enabled        |

|               |                                           |                                           |                     |                     |
|---------------|-------------------------------------------|-------------------------------------------|---------------------|---------------------|
|               |                                           | Interface access                          |                     |                     |
| TCP 443       | HTTPS traffic                             | Web Admin<br>Interface access<br>(secure) | Inbound             | Enabled             |
| TCP 8822      | SSH                                       | SSH                                       | Inbound             | Disabled            |
| UDP 161       | SNMP Get                                  | SNMP monitoring                           | Inbound             | Disabled            |
| UDP 162       | SNMP Trap                                 | SNMP monitoring                           | Outbound            | Disabled            |
| TCP, UDP 1812 | Radius Authentication                     | Radius                                    | Outbound            | Disabled            |
| TCP, UDP 1813 | Radius Accounting                         | Radius                                    | Outbound            | Disabled            |
| UDP 123       | Network Time Protocol                     | NTP                                       | Inbound<br>Outbound | Disabled<br>Enabled |
| TCP 60660     | Real-time location data in<br>NMEA format | GPS                                       | Inbound             | Disabled            |

#### Disclaimer:

- By default, only TCP 32015 and UDP 4500 are needed for SpeedFusion VPN / SpeedFusion.
- Inbound / Outbound\* - Inbound = For Server mode; Outbound = For Client mode
- UDP 32015° - If IPsec VPN or L2TP/IPsec RUA is enabled, the UDP 4500 is occupied, so SpeedFusion VPN / SpeedFusion will automatically switch to UPD 32015 as VPN data port .
- UDP 32015+N-1^ / TCP/UDP 4500+N-1^ - When using Sub-Tunnels, multiple ports are in use (1 for each Sub-Tunnel profile).
- The default UDP data ports used when using (N number of Sub-Tunnel profiles) are:  
4500...4500+N-1, or (when port 4500 is in use by IPsec or L2TP/IPsec) 32015... 32015+N-1".