



PEPWAVE


Package Contents

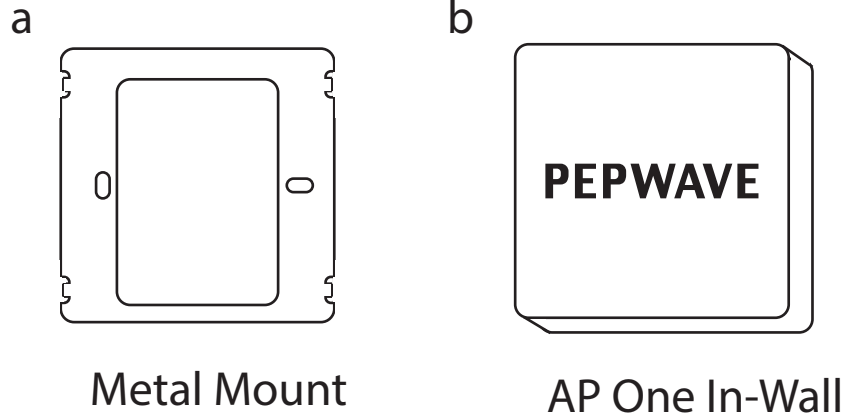

You Have To Prepare

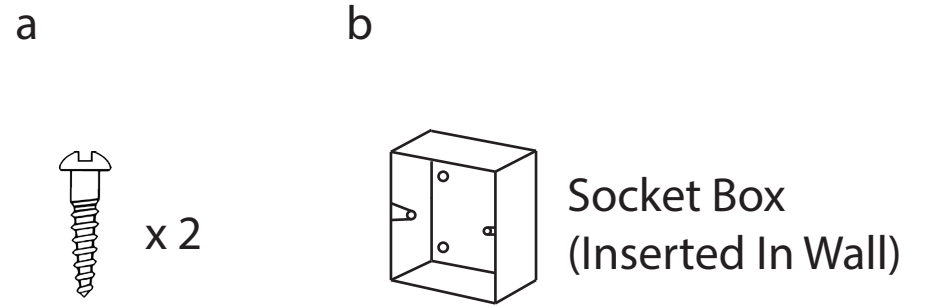

1 Connect the metal mount to socket box by screws

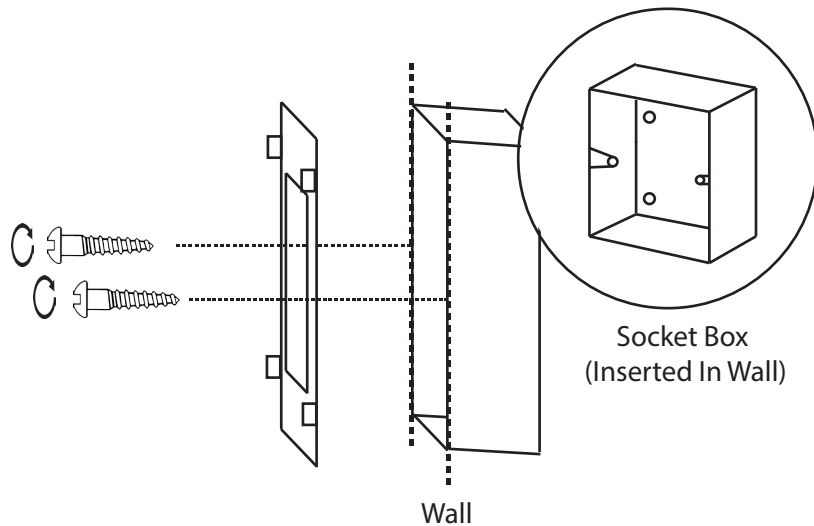

2 Hook the AP One In-Wall to the metal mount

